

## show l2tp dial-out

---

**Syntax** show l2tp dial-out [ [ detail ] [ state *operState* ] | summary ] [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays the chassis-wide configuration, operational state, and statistics for L2TP dial-out.

- Options**
- detail—Displays configuration, states, and statistics
  - *operState*—One of the following operational states:
    - inService
    - initIncomplete
    - restricted
  - summary—Displays aggregate counts for virtual routers, targets, and sessions in each of the possible operational and administrative states
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec

---

Published: 2010-04-08