

show qos-profile

Syntax To display information about all QoS profiles or a specific QoS profile:

```
show qos-profile [ qosProfileName ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific interface:

```
show qos-profile references interface interfaceType interfaceSpecifier  
[ atmVpi | s-vlanIdValue ] [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific L2TP session:

```
show qos-profile references lt2p session sessionName [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific tunnel-service interface:

```
show qos-profile references tunnel-server interfaceType [ explicit ] [ brief ] [ filter ]
```

Release Information Command introduced before JUNOS Release 7.1.0.
references keyword added in JUNOS Release 7.1.0.

Description Displays information about QoS profiles configured on the router. Use the **references** keyword to display information about QoS profiles attached to an interface, L2TP session, or tunnel-service interface.

- Options**
- *qosProfileName*—Name of the QoS profile
 - *references*—Displays interface profiles that reference this profile
 - *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
 - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
 - *sessionName* —Name of the L2TP session
 - *explicit*—Displays attachments for QoS profiles only on the specified interface and not QoS profiles stacked above the interface
 - *brief*—Displays information in a condensed format
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

Related Topics ■ Monitoring the Configuration of QoS Profiles

Published: 2010-04-08