

tacacs-server host

Syntax tacacs-server host *ipAddress* [port *portNumber*]
 [timeout *timeoutValue*] [key *keyValueString*] [primary]

 no tacacs-server host *ipAddress*

Release Information Command introduced before JUNOS Release 7.1.0.

Description Adds or deletes a host to or from the list of TACACS+ servers. If the host is not assigned as the primary host, the router assigns an existing host as the primary. The **no** version deletes the host from the list of TACACS+ servers.

- Options**
- *ipAddress*—IP address of the TACACS+ server
 - *portNumber*—TACACS+ server's TCP port number in the range 1–65535
 - *timeoutValue*—Response timeout interval for the TACACS+ client to server exchange; number in the range 1–255; default value is 5
 - *keyValueString*—Secret used in TACACS+ client to server exchange; string of up to 100 characters
 - **primary**—Assigns the host as the primary host

Mode Global Configuration

Published: 2010-04-08