

## tunnel password

---

**Syntax**    tunnel password *tunnelPassword*  
              no tunnel password

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Configures a password for the L2TP tunnel. The **no** version removes the password.

**Options**    ■    *tunnelPassword*—Password used for challenge response to the tunnel peer; in the domain map, it is used only by the LAC

**Mode**    L2TP Destination Profile Host Configuration

---

Published: 2010-04-08