

## Specifying the Number of Retransmission Attempts

---

You can specify the number of retransmission attempts the router uses for tunnels, in the range 2–30. By default, the router uses a retry count of 5.

Use the **established** keyword to apply the retry count only to established tunnels. Use the **not-established** keyword to apply the retry count only to tunnels that are not established. If you do not include a keyword, the router applies the retry count to both established and nonestablished tunnels.

- To configure the number of retransmission attempts:

```
host1(config)#l2tp retransmission 4 established
```

**Related Topics** ■ l2tp retransmission

---

Published: 2010-04-06