

## Monitoring the Configuration of Statistics Profiles

**Purpose** Display information about statistics profiles.

**Action** To display information about all statistics profiles:

```
host1#show statistics-profile
      forwarding committed conformed exceeded
statistics rate drop drop drop
profile threshold threshold threshold threshold rate
-----
default <none> <none> <none> <none> <none>
statpro-1 10000000 2000000 4000000 6000000 30
```

To display the number of times that a QoS profile references the statistics profile:

```
host1#show statistics-profile rates1 brief
```

To display a list of QoS profiles that reference the statistics profile:

```
host1#show statistics-profile rates1 references
```

**Meaning** Table 1 lists the **show statistics-profile** command output fields.

**Table 1: show statistics-profile Output Fields**

Field Name	Field Description
statistics profile	Name of the statistics profile
forwarding rate threshold	Threshold above which forwarded-rate-exceeded events are counted
committed drop threshold	Threshold above which committed-drop-events are counted
conformed drop threshold	Threshold above which conformed-drop-events are counted
exceeded drop threshold	Threshold above which exceeded-drop-events are counted
rate period	Time frame during which statistics are gathered

- Related Topics**
- Configuring Rate Statistics
  - Configuring Event Statistics

- show statistics-profile

---

Published: 2010-03-21