

## backup-address-pool-name

---

**Syntax** backup-address-pool-name *poolName*  
no address-pool-name

**Release Information** Command introduced in JUNOS Release 10.0.0.

**Description** Specifies a backup local address pool name to associate with the domain name being configured. This pool is used to assign IP addresses to users, if the primary local pool has been fully allocated. The **no** version removes the backup pool name.



**NOTE:** You must configure a primary local address pool for the backup local address pool to take effect.

---

**Options** ■ *poolName*—Name of the backup pool to associate with the domain name; string of up to 16 alphanumeric characters

**Mode** Domain Map Configuration

**Related Topics** ■ *Configuring Local Address Servers* in the *JUNOS BGP and MPLS Configuration Guide*

---

Published: 2010-04-09