

## clear egress-queue

---

**Syntax** clear egress-queue *interfaceType interfaceSpecifier* [ explicit ]  
[ traffic-class *trafficClassName* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Clears egress queue statistics for the all queues bound to the specified interface for queues stacked at and above the interface, or only for the specified traffic class. There is no **no** version.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - explicit—Clears queues only on the specified interface and not queues stacked above the interface
  - *trafficClassName*—Name of a traffic class for which egress queue statistics are cleared

**Mode** Privileged Exec

---

Published: 2010-04-09