

## clear ip pim remote-neighbor count

---

**Syntax** clear ip pim remote-neighbor [ *ipAddress* ] count

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Clears the counters for remote neighbor statistics on all interfaces or the specified interface. There is no **no** version.



**NOTE:** This command is typically used when you configure PIM remote neighbors to run multicast services over BGP/MPLS VPNs. That functionality is no longer supported.

---

**Options** ■ *ipAddress*—IP address of the interface

**Mode** Privileged Exec, User Exec

---

Published: 2010-04-09