

disable-autosync

Syntax [no] disable-autosync

Release Information Command introduced before JUNOS Release 7.1.0.

Description Halts automatic synchronization between the primary and standby SRP modules. When high availability is enabled (that is, the high availability state is initializing, active, or pending) this command affects only changes to nonconfiguration files. With high availability enabled, configuration changes are always mirrored to the standby SRP module. The **no** version restores the default situation, in which automatic synchronization runs as a background process every 5 minutes.

Mode Global Configuration

Published: 2010-04-09