

## exceeded-drop-threshold

---

**Syntax**    exceeded-drop-threshold *exceededDropThreshold*  
              no exceeded-drop-threshold

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Configures the threshold above which exceeded-drop-events are logged. The **no** version removes the threshold.

**Options**    ■    *exceededDropThreshold*—Bits per second in the range 0–1073741824

**Mode**    Statistics Profile Configuration

**Related Topics**    ■    [Configuring Event Statistics](#)

---

Published: 2010-04-09