

forwarding-rate-threshold

Syntax forwarding-rate-threshold *forwardingRateThreshold*
no forwarding-rate-threshold

Release Information Command introduced before JUNOS Release 7.1.0.

Description Configures the threshold above which forwarded-rate-exceeded events are logged. The **no** version removes the threshold.

Options ■ *forwardingRateThreshold*—Bits per second in the range 0–1073741824

Mode Statistics Profile Configuration

Related Topics ■ [Configuring Event Statistics](#)

Published: 2010-04-09