

member-interface-type

Syntax member-interface-type {vlan | atm-vc | ip}
no member-interface-type

Release Information Command introduced in JUNOS Release 9.2.0.

Description Configures the member-interface type for a QoS interface set. The **no** version removes the member-interface type from the parameter definition.

- Options**
- vlan—Specifies the member-interface-type as VLAN
 - atm-vc—Specifies the member-interface-type as VLAN
 - ip—Specifies the member-interface-type as VLAN

Mode QoS Interface Set Configuration

Related Topics ■ [Configuring Interface Sets for QoS](#)

Published: 2010-04-09