

## radius relay udp-checksum

---

**Syntax** radius relay udp-checksum { enable | disable }  
no radius relay udp-checksum

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Enables or disables UDP checksum for RADIUS relay packets on virtual routers that you configure for B-RAS. The **no** version restores the default value, enable.

- Options**
- enable—Enables UDP checksum
  - disable—Disables UDP checksum

**Mode** Global Configuration

---

Published: 2010-04-08