

radius trap no-auth-server-responding

Syntax radius trap no-auth-server-responding { enable | disable }
no radius trap no-auth-server-responding

Release Information Command introduced before JUNOS Release 7.1.0.

Description Enables or disables SNMP traps when all the configured RADIUS authentication servers per VR fail to respond to a RADIUS Access-Request message. The **no** version restores the default, disable.

- Options**
- enable—Specifies the feature
 - disable—Disables the feature; this is the default setting

Mode Global Configuration

Published: 2010-04-08