

## show aaa qos downstream-rate

---

**Syntax** show aaa qos downstream-rate

**Release Information** Command introduced in JUNOS Release 8.1.0.

**Description** Displays whether the QoS downstream rate application is enabled to use downstream rates obtained from the Actual-Data-Rate-Downstream [26-30] DSL Forum VSA.

**Mode** Privileged Exec

**Related Topics** ■ Monitoring the AAA Downstream Rate for QoS

---

Published: 2010-04-08