

show ethernet oam lfm status

Syntax show ethernet oam lfm status *interfaceType interfaceSpecifier*

Release Information Command introduced in JUNOS Release 11.1.0.

Description Displays the current Ethernet OAM link-fault management configuration for a particular interface. OAM must be operational on the interface when you run this command.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers:
 - fastEthernet
 - gigabitEthernet
 - tenGigabitEthernet
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers

Mode Privileged Exec, User Exec

Related Topics ■ Monitoring OAM Link-Fault Management Configuration for an Interface

Published: 2010-04-08