

show frame-relay subinterface

Syntax show frame-relay subinterface [*interfaceType interfaceSpecifier*] [brief]
[delta] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays statistics about Frame Relay subinterfaces.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers:
 - serial
 - pos
 - mlframe-relay
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - brief—Displays a summary of subinterface information
 - delta—Displays baselined statistics
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

Related Topics ■ Monitoring the Policy Configuration of Frame Relay Subinterfaces

Published: 2010-04-08