

show ip dhcp-local auth

Syntax show ip dhcp-local auth { config | statistics [delta] } [*filter*]

Release Information Command introduced in JUNOS Release 7.1.0.

Description Displays information about the DHCP local server authentication configuration.

- Options**
- config—Specifies that configuration information is shown
 - statistics—Specifies that statistics are shown
 - delta—Displays baselined statistics
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Related Topics ■ Monitoring DHCP Local Server Authentication Information

Published: 2010-04-08