

## show ip dhcp-local limits

---

**Syntax** show ip dhcp-local limits [ interface *InterfaceType* *InterfaceSpecifier* | *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.  
**interface** keyword and *interfaceType* and *interfaceSpecifier* variables added in JUNOS Release 7.1.0.

**Description** Displays the maximum number of leases available for each VPI/VCI, VLAN, and Ethernet subnetwork, or for a particular interface or subinterface from the DHCP local server.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec

- Related Topics**
- Monitoring the Maximum Number of Available Leases

---

Published: 2010-04-08