

show ipv6 interface

Syntax show ipv6 interface [vrf *vrfName*] [brief | detail]
 [*interfaceType interfaceSpecifier*][delta] [*filter*]

To display summary information:

show ipv6 interface summary [vrf *vrfName*] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.
 vrf keyword and *vrfName* variable added in JUNOS Release 7.2.0.

Description Displays current state of all IPv6 interfaces or the IPv6 interfaces that you specify.
 The default is all interface types and all interfaces.

- Options**
- *vrfName*—Name of the VRF
 - *brief*—Displays a brief summary of IPv6 status and configuration information
 - *detail*—Shows a detailed display of IP status and configuration information
 - *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *delta*—Displays baselined statistics
 - *filter*—See Filtering show Commands
 - *summary*—Shows a detailed summary of IP status and configuration

Mode Privileged Exec, User Exec

Related Topics ■ Monitoring the Policy Configuration of IPv6 Interfaces

Published: 2010-04-08