

show qos queue-thresholds

Syntax show qos queue-thresholds egress-slot *egressSlot*
[queue-profile [*queueProfileName*] | region [*regionNumber*]] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the color-based thresholds for queues on each egress slot.

Displaying queue thresholds by queue profile shows buffer memory information by queue profile, and, within that profile, shows the thresholds for each region.

Displaying queue thresholds by region organizes the buffer memory information by queue region, and, within each region, shows the buffer allocations for each queue profile.

- Options**
- queue-thresholds—Displays color-based thresholds for queues on an egress slot
 - *egressSlot*—Displays color-based thresholds for an egress slot
 - queue-profile—Displays thresholds for each region of the queue profile
 - *queueProfileName*—Name of the queue profile
 - region—Displays egress memory or buffer region oversubscription
 - *regionNumber*—Number identifying the egress memory or buffer region on the line module
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

Related Topics ■ Monitoring Queue Thresholds

Published: 2010-04-08