

tacacs-server timeout

Syntax tacacs-server timeout *timeoutValue*

 no tacacs-server timeout

Release Information Command introduced before JUNOS Release 7.1.0.

Description Sets the interval in seconds that the server waits for the TACACS+ server host to reply. This value is shared by those TACACS+ servers that do not have a timeout interval set by the **tacacs-server host** command. The **no** version resets the timeout interval shared by all TACACS+ servers.

Options ■ *timeoutValue*—Response timeout interval for the TACACS+ client to server exchange; number in the range 1–255; default value is 5

Mode Global Configuration

Published: 2010-04-08