

timeout

Syntax RADIUS:

timeout *waitTime*

no timeout

RTR:

timeout *timeoutValue*

no timeout

Release Information Command introduced before JUNOS Release 7.1.0.

Description When used from RADIUS Configuration mode, specifies the interval, in seconds, before the router retransmits a RADIUS packet to an authentication or accounting server. The **no** version restores the default.

When used from RTR Configuration mode, specifies the timeout for a Response Time Reporter operation. The **no** version returns the operation to the default value. You can apply this parameter only to *echo* entries.

- Options**
- *waitTime*—Number of seconds in the range 1–1000; default value is 3
 - *timeoutValue*—Number in milliseconds that the operation waits for a response; if the value is set to 0 or is larger than frequency, it will be ignored; default value is 5000

Mode RADIUS Configuration, RTR Configuration

Published: 2010-04-08