

## tunnel group

---

**Syntax**    tunnel group *tunnelGroupName*  
              no tunnel group

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Assigns the specified tunnel group to the domain map. The **no** version deletes the tunnel group.



**NOTE:** By default, no tunnel group is assigned to the domain map. You can assign a tunnel group to the domain map only if tunnels are not currently defined for the domain map in Domain Map Tunnel mode.

---

**Options**    ■    *tunnelGroupName*—String of up to 64 characters (no spaces)

**Mode**    Domain Map Configuration

---

Published: 2010-04-08