

## Monitoring QoS Parameter Definitions

**Purpose** Display the QoS parameter definition settings for QoS administrators.

**Action** To display the settings for a specific QoS parameter definition:

```
host1#show qos-parameter-define ip-multicast
      controlled instance subscriber
parameter interface interface interface value
      name      types      types      types      range
-----
ip-multicast ip          ip, ipv6 <none>    <none>
parameter
      name                  properties
-----
ip-multicast ip-multicast-adjustment, hierarchical
```

To display information about QoS parameter definitions in condensed format:

```
host1#show qos-parameter-define voice1 brief
```

To display references to all QoS parameter definitions:

```
host1#show qos-parameter-define references
```

**Meaning** Table 1 lists the **show qos-parameter-define** command output fields.

**Table 1: show qos-parameter-define Output Fields**

Field Name	Field Description
parameter name	Name of the parameter definition
controlled interface types	Types of controlled-interface types that are available for the parameter definition
instance interface types	Types of instance-interface types that are available for the parameter definition
subscriber interface types	Types of subscriber-interface types that are available for the parameter definition
value range	Range assigned to the parameter definition
properties	Applications and hierarchical settings assigned to the parameter definition

**Related Topics** ■ Configuring a Basic Parameter Definition for QoS Administrators

- show qos-parameter-define

---

Published: 2010-03-24