

MobileNext Broadband Gateway

Charging for Serving Gateway



Published: 2012-04-11

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Copyright © 2012, Juniper Networks, Inc. All rights reserved.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

MobileNext Broadband Gateway Charging for Serving Gateway

Copyright © 2012, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xi
	Documentation and Release Notes	xi
	Supported Platforms	xi
	Documentation Conventions	xi
	Documentation Feedback	xiii
	Requesting Technical Support	xiii
	Self-Help Online Tools and Resources	xiv
	Opening a Case with JTAC	xiv
Part 1	Overview	
Chapter 1	Charging Overview	3
	Charging	3
	Charging Services Overview	3
	Charging Data Records	5
	Information Collection and CDR Generation	7
	CDR Delivery	8
	Charging Profiles	9
	Charging Profile Selection Process	9
Part 2	Configuration	
Chapter 2	Configuration Overview	13
	Configuring Charging	13
Chapter 3	Configuration Tasks for Charging	15
	Configuring S-GW-Specific Charging Parameters	15
	Configuring S-GW Global Charging Profiles and Selection Order	17
	Configuring GTP Prime for Charging	19
	Configuring GTP Prime for Transferring CDRs	19
	Configuring GTP Prime Peers	20
	Configuring Persistent Storage	21
	Configuring Local Persistent Storage	21
	Tracing Persistent Storage Operations	22
	Configuring the Solid State Disk for Persistent Storage	23
	Initializing the Solid State Disk for Persistent Storage	23
	Ejecting the Solid State Disk	24
	Installing the Solid State Disk	24
	Configuring Transport Profiles	25
	Configuring Charging Trigger Events	26
	Configuring CDR Attributes	28
	Configuring Charging Profiles	30

Chapter 4

Configuring Charging Profiles for APNs	31
Configuration Statements	33
[edit unified-edge gateways] Hierarchy Level	33
cdr-aggregation-limit	34
cdr-profile	35
cdr-profiles	37
cdr-release	38
cdrs-per-file	39
charging	40
charging-gateways	44
charging-profiles	45
container-limit	46
default-profile	47
default-rating-group	48
default-service-id	49
description	50
destination-ipv4-address (GTP Prime)	51
destination-port (GTP Prime)	52
direction (Trigger Profiles)	53
disable-replication	54
disk-space-policy	55
down-detect-time (GTP Prime)	56
echo-interval (GTP Prime)	57
enable-reduced-partial-cdrs	58
exclude (Trigger Profiles)	59
exclude-ie-options	62
file-age	66
file-creation-policy	67
file-format	68
file-name-private-extension	69
file-size	71
global-profile (Serving Gateway)	72
gtp	73
header-type (GTP Prime)	74
home-profile	75
local-persistent-storage-options	76
local-storage	77
mtu (Transport Profiles)	78
n3-requests (GTP Prime)	79
no-path-management (GTP Prime)	80
offline (Transport Profiles)	81
offline (Trigger Profiles)	82
peer (GTP Prime)	83
peer (Peer Order)	84
peer-order	85
pending-queue-size (GTP Prime)	86
persistent-storage-order	87
profile-id	88

	profile-selection-order (Serving Gateway)	89
	reconnect-time (GTP Prime)	90
	roamer-profile	91
	service-mode (Charging Profiles)	92
	service-mode (Transport Profiles)	94
	sgsn-mme-change-limit (Serving Gateway)	95
	source-interface (GTP Prime)	96
	switch-back-time	97
	t3-response (GTP Prime)	98
	tariff-time-list	99
	time-limit	100
	traceoptions (Charging)	101
	traceoptions (Local Persistent Storage)	104
	transport-profile	106
	transport-profiles	108
	transport-protocol (GTP Prime)	109
	trigger-profile	110
	trigger-profiles	111
	user-name (Local Persistent Storage)	112
	version (GTP Prime)	113
	visitor-profile	114
	volume-limit	115
	watermark-level-1	116
	watermark-level-2	117
	watermark-level-3	118
	world-readable (Local Persistent Storage)	119
Part 3	Administration	
Chapter 5	Monitoring the Charging Configuration	123
	Verifying and Managing the Charging Configuration	123
Chapter 6	Operational Commands	125
	clear unified-edge sgw charging cdr	126
	clear unified-edge sgw charging cdr wfa	127
	clear unified-edge sgw charging local-persistent-storage statistics	128
	clear unified-edge sgw charging path statistics	129
	clear unified-edge sgw charging transfer statistics	130
	request system storage unified-edge charging media start	131
	request system storage unified-edge charging media stop	132
	request system storage unified-edge media eject	133
	request system storage unified-edge media prepare	134
	show unified-edge sgw charging global statistics	135
	show unified-edge sgw charging local-persistent-storage statistics	138
	show unified-edge sgw charging path statistics	144
	show unified-edge sgw charging path status	149
	show unified-edge sgw charging service-mode	152
	show unified-edge sgw charging transfer statistics	154
	show unified-edge sgw charging transfer status	158
	show unified-edge sgw charging trigger-profile	160

Part 4	Troubleshooting	
Chapter 7	Acquiring Troubleshooting Information	165
	Tracing Charging Operations	165
	Configuring the Trace Log Filename	166
	Configuring the Tracing Flags	166
	Configuring S-GW Local Persistent Storage Traceoptions	167
	Configuring S-GW Charging Traceoptions	169
Part 5	Index	
	Index	175

List of Figures

Part 1	Overview	
Chapter 1	Charging Overview	3
	Figure 1: Simple Charging Topology	4

List of Tables

	About the Documentation	xi
	Table 1: Notice Icons	xii
	Table 2: Text and Syntax Conventions	xii
Part 2	Configuration	
Chapter 4	Configuration Statements	33
	Table 3: Triggers and Corresponding IEs	60
Part 3	Administration	
Chapter 6	Operational Commands	125
	Table 4: show unified-edge sgw charging global statistics Output Fields	135
	Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields	138
	Table 6: show unified-edge sgw charging path statistics Output Fields	145
	Table 7: show unified-edge sgw charging path status Output Fields	150
	Table 8: show unified-edge sgw charging service-mode Output Fields	152
	Table 9: show unified-edge sgw charging transfer statistics Output Fields	154
	Table 10: show unified-edge sgw charging transfer status Output Fields	158
	Table 11: show unified-edge sgw charging trigger-profile Output Fields	160
Part 4	Troubleshooting	
Chapter 7	Acquiring Troubleshooting Information	165
	Table 12: S-GW Local Persistent Storage Trace Flags	167
	Table 13: S-GW Local Persistent Storage Trace Levels	168
	Table 14: S-GW Charging Trace Flags	169
	Table 15: S-GW Charging Trace Levels	170

About the Documentation

- Documentation and Release Notes on page xi
- Supported Platforms on page xi
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX240 Routers
- MX960 Routers
- MX480 Routers

Documentation Conventions

Table 1 on page xii defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page xii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: <code>user@host> configure</code>
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host> show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces important new terms. Identifies book names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: <code>[edit]</code> <code>root@# set system domain-name <i>domain-name</i></code>
Text like this	Represents names of configuration statements, commands, files, and directories; interface names; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the <code>[edit protocols ospf area area-id]</code> hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	<code>stub <default-metric <i>metric</i>>;</code>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
J-Web GUI Conventions		
Bold text like this	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract,

or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf> .
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/> .
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html> .

PART 1

Overview

- [Charging Overview on page 3](#)

CHAPTER 1

Charging Overview

- [Charging on page 3](#)
- [Charging Services Overview on page 3](#)
- [Charging Data Records on page 5](#)
- [Charging Profiles on page 9](#)

Charging

In the mobile network, it is important to have detailed and accurate monitoring of service usage on the MobileNext Broadband Gateway so that proper charging information can be generated for millions of customers. In the Third-Generation Partnership Project (3GPP), there are three distinct aspects to the process that translates service use into a bill for services. These aspects are charging, rating, and billing. Charging gathers statistics about service usage for each customer. Rating is the process of determining how much each service costs each particular customer, based on the services contracted or tariffed. Billing is the process of actually generating the customer's invoice for services.

The broadband gateway is the anchor of the data call and contains most of the subscriber context information. The broadband gateway is responsible for collecting charging information related to the external data network usage and to network resource usage on the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW), including the amount of data categorized by quality of service (QoS), the user protocols, and the usage of the packet data protocol address. Packet data volume in both the uplink (from the Gn-to-Gi interface) and downlink (from the Gi-to-Gn interface) directions is counted separately.

The broadband gateway provides support for billing through offline charging, RADIUS accounting, or both. RADIUS accounting delivers accounting information used for billing to the RADIUS accounting server.

Related Documentation

- [Charging Services Overview on page 3](#)

Charging Services Overview

The MobileNext Broadband Gateway supports offline charging, which is commonly used in a postpaid environment. The broadband gateway provides mobile operators with an intelligent charging service that has flexible provisioning and accurate resource usage


record collection for their mobile subscribers. The broadband gateway gathers Charging Data Records (CDRs) and delivers them to the charging gateway function (CGF) over the Ga interface using the GTP Prime protocol. The billing function is distributed across all modules of the broadband gateway, which performs these tasks for billing:

- Accurate CDR creation and closure
- Partial record generation
- ASN.1 formatting of CDRs prior to transfer to CGF or local storage
- Support of GTP Prime protocol stack to transfer CDRs to the CGF
- Support of primary, secondary, and tertiary CGF for redundancy of each charging profile

Charging information collection does not affect real-time operations and is transferred over the Ga interface using the GTP Prime protocol. The network element generates the CDR for each subscriber and reports it periodically to the charging gateway. The charging gateway then optionally reformats and transfers the collected CDRs to the operator's billing system for billing purposes.

Figure 1 on page 4 shows the components in a sample charging topology.

Figure 1: Simple Charging Topology

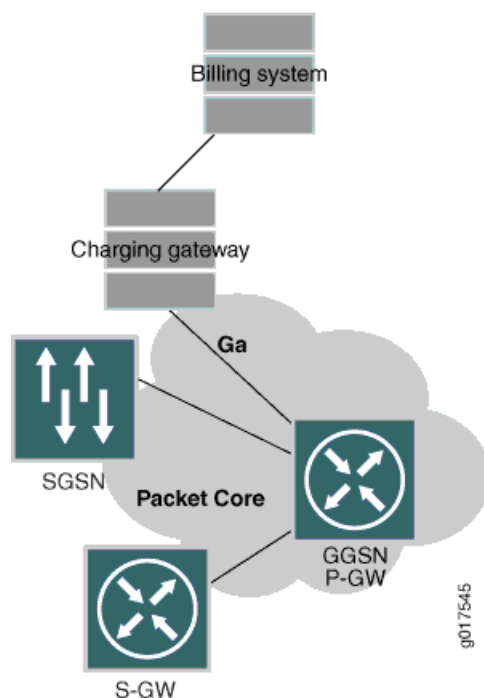

The provisioning of the charging services follows this process:

1. Configure the CGF or local storage.
2. Create the transport profile and associate the primary, secondary, and tertiary CGF.
3. (Optional) Configure the CDR and trigger profiles.

4. Create a charging profile with a profile ID and the associated transport, CDR, and trigger profiles. The profile ID is used to match against the charging characteristic information element sent in the GTP create request or the RADIUS profile id AVP from the RADIUS authentication response.
5. In the access point name (APN) configuration, configure the charging profile selection order as static to select locally configured charging profiles.

The binding of the charging services, as well as the charging information collection, follows this process:

1. The broadband gateway starts to establish a bearer when the broadband gateway receives the request from the mobile subscriber to create a packet data protocol (PDP) context.
2. For each new bearer created in the broadband gateway, the configured charging profile selection order algorithm is applied and a charging profile is associated with the bearer.
3. The broadband gateway generates a container or CDR for every trigger or signaling event that the operator wants reported for this subscriber.
4. When the mobile subscriber terminates the session, the final network usage is reported to the CGF by the broadband gateway.

**Related
Documentation**

- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Charging Data Records on page 5](#)
- [Charging Profiles on page 9](#)

Charging Data Records

The MobileNext Broadband Gateway gathers charging information in Charging Data Records (CDRs). The broadband gateway supports different charging format versions.

The broadband gateway generates CDRs that contain the following types of information to charge a mobile station user or subscriber for accessing data from access point name (APN) networks:

- Data volume—Amount of data sent to and received from the APN networks.
- Duration of packet data protocol (PDP) context—Length of PDP context or call.
- Quality-of-service (QoS) classes—Priority at which requested data is transported.
- Roaming—Charges imposed for subscriber roaming among SGSNs belonging to a mobile operator or between different mobile operators.
- Tariff—Charges imposed based on the time of day.

CDRs can be delivered by the following methods:

- CDRs are transferred directly to a charging gateway server using the GTP Prime protocol.

The GTP Prime protocol supports UDP or TCP as the transport protocol, and IPv4 addresses. You must configure the charging gateways as GTP Prime peers. The peers can be configured for use by transport profiles as primary, secondary, or tertiary servers.

The broadband gateway supports sending the following messages:

- Node Alive Response—Response to Node Alive Request received from the charging gateway function (CGF). The Node Alive Request message is used to indicate that a node in the network has started its service.
- Echo Request and Echo Response—The Echo Request message detects the path status between the CGF and the broadband gateway and should not be sent more than once every 60 seconds using UDP as the transport protocol.
- Redirect Request—CGF can send Redirect Request messages to the broadband gateway to advise that received CDR traffic is to be redirected to another CGF or that the next node in the chain (such as a mediation device or billing computer) has lost its connection to the CGF. When the request is to redirect to another CGF, the transport profile switches to the recommended CGF only if it is configured as a peer in the transport profile; otherwise, it switches to the next highest-priority peer in the transport profile.
- CDRs are logged to the local persistent storage and eventually retrieved by a charging gateway using the File Transfer Protocol (FTP). In broadband gateways configured with a backup Routing Engine, a mirror directory of CDRs is available.

Local persistent storage stores the CDRs in the form of files on the Routing Engine. When the transport profile is configured to use local persistent storage for CDRs, the session DPC sends the CDRs to the Routing Engine as temporary log files. When the triggers (such as file age, file size, or CDR count) acting on the temporary log files are reached, the temporary log file is closed and moved to the final log directory where it is available for transfer by the operator. By default, the configured user or root user is authorized to access the files. However, you can configure the log files to be readable by all users.

The final CDR log files are stored in the `/opt/mobility/charging/ggsn/final_log` directory in the filename format ***NodeID***_***RC***.***date***_***time***[***.PI***].cdr, where:

- *NodeID*—Name of the host that generated the file.
- *RC*—Running count or sequence number, starting with the value of 1.
- *date*—Date when the CDR file was closed in the format *YYYYMMDD*, where *YYYY* is the year, *MM* is the month (01-12), and *DD* is the day (01-31).
- *time*—Time when the CDR file was closed in the format *HHMMshhmm*, where *HH* is the local time hour of day (00-23), *MM* is the local time minute of the hour (00-59), *s* is the sign of local time differential from UTC (+ or -), *hh* is the local time differential hour (00-23), and *mm* is the local time differential minute (00-59).

- *PI*—(Optional) Private information that is explicitly configured.
- *cdr*—File extension is always *cdr*.

The charging gateway consolidates charges for a particular PDP context from the broadband gateway. Each CDR is marked with a charging ID that identifies the mobile station user and the particular PDP session. This charging ID correlates information generated by the broadband gateway. Each CDR also includes a Local Record Sequence Number (LRSN) that is allocated sequentially and is unique for each CDR on the same session DPC. The LRSN is the IP address of the broadband gateway and the node ID. The charging gateway uses the LRSN to identify missing records. The billing gateway uses the charging ID and the LRSN to identify CDRs. The billing gateway server generates the information used in the bill that is sent to the subscriber.

Information Collection and CDR Generation

Upon establishment of a PDP context, the broadband gateway opens a first partial CDR if it is configured to generate CDRs for the PDP context. The broadband gateway generates this CDR in Abstract Syntax Notation 1 (ASN.1) format. This format provides a common syntax for data transmitted between different communication systems.

This partial CDR contains static and dynamic information. The static information includes details such as the type of record (in this case, a CDR) and the international mobile station identifier (IMSI) of the subscriber. Additional information included in the CDR is based on the dynamic usage of an APN network by the subscriber. To collect dynamic usage information, the broadband gateway monitors the uplink and downlink bearer traffic associated with a PDP context.

A container holds the incremental statistics for the bearer. Each CDR has the containers that belong to the same bearer. Depending on the event, a container can be added to the CDR. You can configure the maximum number of containers for the CDR. Upon reaching this limit, the CDR is closed and sent to the CGF. The broadband gateway adds a container to the partial CDR each time one of the following chargeable events occurs:

- The QoS changes.
- The tariff changes.
- Other charging conditions are satisfied.

For example, if the QoS changes, a container is added. If the tariff changes, another container is added. If the QoS changes again, another container is added and so on until the maximum number of containers is reached.

The broadband gateway adds a container to the partial CDR and closes the CDR when one of the following chargeable events occurs:

- The PDP context terminates.
- The time limits are exceeded.
- The volume limits are exceeded.

The broadband gateway closes a partial CDR and opens a subsequent partial CDR if one of the following occurs:

- The configured number of containers for the container limit attribute is reached.
- A configurable data volume limit for the first partial CDR is reached. Each container has a data volume count associated with the chargeable event. Initially, the first partial CDR contains one container with 0 bytes of data volume.
- A configurable time limit for the first partial CDR is reached.
- The maximum of five SGSN or S-GW changes is reached. A container can include a list of up to five changes.

A very active broadband gateway has to generate a large number of CDRs. Many CDRs contain a lot of information that is not necessary for a given PDP context or is known to the charging gateway by other means. To minimize the size of the generated CDR packets, the charging configuration contains a variety of CDR attributes that can be excluded from CDRs if the information is not necessary.

After a PDP context terminates, a broadband gateway adds a container to the current partial CDR, closes it, and delivers it to a charging gateway using the configured CDR delivery method.

CDR Delivery

CDR delivery to a charging gateway is based on the transport profile configuration. You can configure primary, secondary, and tertiary external charging gateways or local persistent storage in the transport profile. You must configure either the external charging gateways or local persistent storage, or both.

To support high throughput, the distributed control plane modules on the broadband gateway independently send CDRs to the charging gateway through their own UDP/TCP communication path. However, connectivity to the charging gateway is fate-shared. Thus, when one control plane reports loss of connectivity, all control planes switch to the next charging gateway in the peer order. This behavior also applies to GTP Prime echo failure, node alive, and redirect messages. The redirect message can contain the recommended charging gateway to switch to, but the transport profile switches to this charging gateway only if it is configured in the transport profile. Otherwise, it is redirected to the next higher-priority charging gateway in the peer order.

If the broadband gateway loses connectivity to all the charging gateways or the charging gateway is too slow, each control plane has a staging area to temporarily prevent the loss of CDRs. To prevent CDR and charging container record loss, all records are backed up to the backup control plane if redundancy is configured.

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring Transport Profiles on page 25](#)

Charging Profiles

The broadband gateway associates a charging profile with a mobile subscriber when a bearer is established. The charging profile specifies the charging behavior to apply based on the subscriber's charging characteristics. The charging behavior includes the charging mechanism, charging information sets, and charging transport behavior. The charging behavior depends on the charging type (for example, charging gateway or RADIUS server) and the associated charging profile.

Charging profiles can reference these profiles, which define the charging behavior:

- CDR profile—Defines the attributes in each CDR transmitted to the charging gateway.
You can enable the generation of reduced partial CDRs and configure the exclusion of information elements from the CDR.
- Transport profile—Defines how to transfer the CDR to the charging gateway.
You can specify information about the CDRs, including CDR format and aggregation limit, being transferred to the charging gateways. You can specify the order of the charging gateways.
- Trigger profile—Defines the effective charging events that trigger CDR creation and container addition or closure.

You can specify triggers, including:

- Time limits—Maximum age of collected charging data before a subsequent CDR is generated.
- Volume limits—Maximum amount of collected charging data before a subsequent CDR is generated.
- Tariff activation times—Time windows in which tariffs change for charging purposes. If the services provided by an APN network have different time windows and tariffs, you can configure the broadband gateway to update CDRs when the tariffs change.
- Container limits—Maximum number of containers in each CDR before a subsequent CDR is generated.
- Bearer changes—Bearer information changes to ignore for charging data updates. Charging updates are not triggered by changes to this information.

Charging Profile Selection Process

The MobileNext Broadband Gateway has a highly flexible charging profile selection algorithm that enables the operator to choose the appropriate charging configuration for each subscriber. Provisioning is done for each APN, where the operator can specify the profile selection order for the charging profile.

You can specify that the charging profile be selected from the following sources in the preferred order:

- Subscriber type (static)—Use the configured charging profile for the type of subscriber (home, roamer, or visitor). If the charging profile for the type of subscriber is not configured for the APN, then the default profile is used if configured.
- SGSN or Serving Gateway (serving)—Use the charging profile sent by the SGSN or Serving Gateway.
- RADIUS server (radius)—Use the charging profile provided by the RADIUS server.

If the charging profile cannot be selected from the first source in the profile selection order, then the algorithm will try the next source. If no charging profile can be selected from any source, then charging is disabled for the subscriber.

**Related
Documentation**

- [Configuring Charging Profiles on page 30](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles for APNs on page 31](#)

PART 2

Configuration

- [Configuration Overview on page 13](#)
- [Configuration Tasks for Charging on page 15](#)
- [Configuration Statements on page 33](#)

CHAPTER 2

Configuration Overview

- [Configuring Charging on page 13](#)

Configuring Charging

You can configure the charging function on the MobileNext Broadband Gateway. The broadband gateway supports the configuration of offline charging. Offline charging can be configured to send Charging Data Records (CDRs) to charging gateways.

To configure the broadband gateway for offline charging:

- Configure the GPRS tunneling protocol (GTP) Prime properties for transmitting the CDR to the external charging gateway.

You must perform this task if you are using an external charging gateway. You can also configure the local persistent storage options to store CDRs on the Routing Engine.

- Configure the local persistent storage options on the Routing Engine for the CDRs.

You must perform this task if you do not configure the GTP Prime properties for the external charging gateway.

- Configure the transport profile, which specifies information about the CDRs being transferred to the specified charging gateways, including the CDR format and aggregation limit.
- (Optional) Configure the trigger profile, which specifies the charging events that trigger the creation of the CDR or the addition or closure of the container.
- (Optional) Configure the CDR profile, which specifies the attributes in each transmitted CDR.
- Configure the charging profile, which specifies the charging behavior to apply based on profiles included in the charging profile. The included profiles must be defined.
- Configure the charging profiles for the access point names (APNs).
- Configure tracing for charging operations.

Related Documentation

- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Transport Profiles on page 25](#)

- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)
- [Tracing Charging Operations on page 165](#)
- [Charging Data Records on page 5](#)

CHAPTER 3

Configuration Tasks for Charging

- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring the Solid State Disk for Persistent Storage on page 23](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)

Configuring S-GW-Specific Charging Parameters

The MobileNext Broadband Gateway Serving Gateway (S-GW) uses three charging statements unique to the S-GW. This topic shows how to configure the charging statements that are unique to the S-GW.

Before you begin configuring a S-GW charging parameters on the broadband gateway, you should have done the following:

- Configured the chassis of the MobileNext Broadband Gateway
- Configured the interfaces used by the MobileNext Broadband Gateway

To establish the charging parameters unique to the S-GW, you can exclude certain trigger events and exclude specific charging detail record (CDR) information. The use of all three statements is optional.

To configure the S-GW charging parameters trigger profile exclusion:

1. (Option) Configure the S-GW charging trigger profile change exclusion.

```
[edit unified-edge gateways sgw MBG-SGW1 charging trigger-profiles TP1 offline  
exclude]  
user@host# set sgsn-mme-change
```



NOTE: When this statement is configured, a change in serving GPRS support node (SGSN) or S-GW does not generate a charging data update.

2. (Option) Exclude the P-GW address used in the CDR information element.

```
[edit unified-edge gateways sgw MBG-SGW1 charging cdr-profiles CDR1
exclude-ie-options]
user@host# set pgw-address-used
```



NOTE: When this statement is configured, the P-GW IP address is not included in the CDR.

3. (Option) Exclude the S-GW change from the CDR information element.

```
[edit unified-edge gateways sgw MBG-SGW1 charging cdr-profiles CDR1
exclude-ie-options]
user@host# set sgw-change
```



NOTE: When this statement is configured, the S-GW change information element is not included in the CDR.

4. Configure the CDR release.

```
[edit unified-edge gateways sgw MBG-SGW1 charging transport-profiles
MBG-SGW1-T-Profile offline charging-gateways]
user@host# set cdr-release r8
```



NOTE: By default, the S-GW support Release 8. You must include this statement to change the supported release.

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Local Persistent Storage Traceoptions on page 167](#)
- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)

- [Tracing Charging Operations on page 165](#)
- [Charging Data Records on page 5](#)

Configuring S-GW Global Charging Profiles and Selection Order

The MobileNext Broadband Gateway Serving Gateway (S-GW) uses five global profiles for charging. This topic describes the profiles and shows how to configure the profile statements unique to the S-GW.

Before you begin configuring a S-GW CAC parameters on the broadband gateway, you should have done the following:

- Configured the chassis of the MobileNext Broadband Gateway
- Configured the interfaces used by the MobileNext Broadband Gateway
- Configured the charging profiles used by the MobileNext broadband Gateway

Global charging profile configuration is mandatory configuration to enable charging on the S-GW. Configuring the **profile-selection-order** statement is mandatory when the **global-profile** statement is configured. The S-GW determines the type of subscriber by comparing the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE) with the corresponding values configured for the home public land mobile network (HPLMN) for the S-GW. Depending on whether a subscriber is a home subscriber, a visitor, or a roamer, the **home-profile**, **visitor-profile**, or **roamer-profile** is applied. If the applicable profile is not configured, then the **default-profile**, if configured, is applied. If the **default-profile** is not configured, then no charging is applied to the subscriber session.



NOTE: The profiles must already be configured on the broadband gateway before you reference them in the profile statements.

The default profile is applied if other profiles are absent. If the **profile-selection-order** configuration is **static**, and if the corresponding charging profile applicable to the type of subscriber (home, visitor, or roamer) has not been specified, then the default profile is applied.

The home profile is applied to home users based on PLMN configuration. If the **profile-selection-order** configuration is **static**, and this is a home user, then the home profile is applied.

The roamer profile is applied to roaming users based on PLMN configuration. If the **profile-selection-order** configuration is **static**, and this is a roaming user, then the roaming profile is applied.

The visitor profile is applied to visiting users based on PLMN configuration. If the **profile-selection-order** configuration is **static**, and this is a visiting user, then the visiting profile is applied.

The profile selection order determines the order that the methods used to select a charging profile are applied. You can specify up to three profile selection methods: **static**, **serving**, or **pgw-cg-addr**. If the first choice is not available, then the next choice is considered, and so on.



NOTE: If no charging profile can be selected for the user, then the subscriber is not charged for the session.

Consider a configured profile selection order of **static**, **serving**, and **pgw-cg-addr**. Because **static** is the first choice, the global charging profiles specified are used. If the global charging profiles are not configured, then the next choice (**serving**) is considered. If the serving GPRS support node (SGSN) or S-GW does not provide a charging profile identifier in the charging characteristics information element (IE) within the GPRS tunneling protocol (GTP) Create Session message, then the next choice (**pgw-cg-addr**) is considered. With the **pgw-cg-addr** option, the global charging profile is selected based on the IP address of the charging gateway (CG) for the P-GW.

To configure the S-GW global charging profiles and selection order:

1. Configure the S-GW default global charging profile.

```
[edit unified-edge gateways sgw MBG-SGW1 charging global-profile]
user@host# set default-profile MBG-SGW1-default
```

2. Configure the S-GW home user global charging profile.

```
[edit unified-edge gateways sgw MBG-SGW1 charging global-profile]
user@host# set home-profile MBG-SGW1-home
```

3. Configure the S-GW roaming user global charging profile.

```
[edit unified-edge gateways sgw MBG-SGW1 charging global-profile]
user@host# set roamer-profile MBG-SGW1-roaming
```

4. Configure the S-GW visiting user global charging profile.

```
[edit unified-edge gateways sgw MBG-SGW1 charging global-profile]
user@host# set visitor-profile MBG-SGW1-visiting
```

5. Configure the S-GW global charging profile selection order.

```
[edit unified-edge gateways sgw MBG-SGW1 charging global-profile]
user@host# set profile-selection-order static serving pgw-cg-addr
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Local Persistent Storage Traceoptions on page 167](#)
- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Transport Profiles on page 25](#)

- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)
- [Tracing Charging Operations on page 165](#)
- [Charging Data Records on page 5](#)

Configuring GTP Prime for Charging

To configure GPRS tunneling protocol (GTP) Prime to transfer Charging Data Records (CDRs), perform these tasks:

- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring GTP Prime Peers on page 20](#)

Configuring GTP Prime for Transferring CDRs

CDRs are transferred to a charging gateway using GTP Prime or logged to a Routing Engine hard disk and eventually retrieved by a charging gateway using FTP.

To configure global GTP Prime options to transfer CDRs:

1. Specify that you want to configure GTP Prime properties for the gateway called MBG1.

```
[edit]
user@host# edit unified-edge gateways ggsn-pgw MBG1 charging gtp
```

2. Specify the destination port number of the charging gateway function (CGF) server.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]
user@host# set destination-port port-number
```

3. Specify the source interface from which GTP Prime packets will be sent.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]
user@host# set source-interface interface-name [ipv4-address]
```

4. Specify the transport protocol.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]
user@host# set transport-protocol (udp | tcp)
```

5. Specify the GTP Prime version.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]
user@host# set version (v0 | v1 | v2)
```

6. Specify the GTP Prime header type.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]
user@host# set header-type (long | short)
```

7. Specify that path management is disabled. This option cannot be used with the echo request interval.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set no-path-management
```

8. Specify the GTP Prime echo request interval for path management.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set echo-interval seconds
```

9. Specify the number of retries of GTP Prime messages upon timeout.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set n3-requests requests
```

10. Specify the response timeout value for the GTP Prime request message.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set t3-response response-interval
```

11. Specify the time to wait before declaring a CGF as down.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set down-detect-time seconds
```

12. Specify the time after which to retry the connection to the CGF server.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set reconnect-time seconds
```

13. Specify the maximum number of Data Record Transfer (DRT) messages awaiting an acknowledgment.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# set pending-queue-size queue-size
```

Configuring GTP Prime Peers

CDRs are transferred to a charging gateway using GTP Prime. The charging gateway is the GTP Prime peer. The charging gateway peer inherits the global GTP Prime values. You configure the GTP Prime peer only if you want to override any of the global GTP Prime values.

To configure the GTP Prime peer to transfer CDRs:

1. Specify the name of the CGF peer for which you are configuring GTP Prime properties. Use this peer name to configure the peer order in the transport profile.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp]  
user@host# edit peer peer-name
```

2. Specify the destination IPv4 address of the CGF peer.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging gtp peer peer-name]  
user@host# set destination-ipv4-address ip-address
```

3. (Optional) Specify any of the global GTP Prime options that you want to override for this charging gateway.

- Related Documentation**
- [Configuring Charging on page 13](#)
 - [Configuring Transport Profiles on page 25](#)

- [Charging Services Overview on page 3](#)

Configuring Persistent Storage

You can store Charging Data Records (CDRs) locally on the Routing Engine hard disk. You must configure the persistent storage order in the transport profile before CDRs can be stored locally on the Routing Engine.

To configure local persistent storage for the CDRs, perform these tasks:

- [Configuring Local Persistent Storage on page 21](#)
- [Tracing Persistent Storage Operations on page 22](#)

Configuring Local Persistent Storage

To configure local persistent storage of the file containing the CDRs:

1. Specify that you want to configure local persistent storage.

```
[edit]
user@host# edit unified-edge gateways ggsn-pgw MBG1 charging
local-persistent-storage-options
```

2. Specify the file age in minutes.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set file-age value
```

3. Specify the file size in MB.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set file-size value
```

4. Specify the number of CDRs for each file.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set cdrs-per-file value
```

5. Specify that CDR log files are not replicated to the standby Routing Engine.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set disable-replication
```

6. Specify the user authorized to access the files.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set user-name username
```

7. Specify that CDR log files can be accessed for reading by all users.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set world-readable
```

8. Specify the private extension for the filename.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set file-name-private-extension string
```

- Specify whether the CDR file is shared across all nodes for a charging group or is unique to a charging group in each node.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set file-creation-policy (unique-file | shared-file)
```

- Configure the CDR file format as 3GPP 32 297 format or raw ASN.1 format.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set file-format (3gpp | raw-asn)
```

- Configure the disk policy for when the disk runs out of space. Specify the percentage and notification for the watermark levels. Notification can be to generate an SNMP alarm, a syslog, or both.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# set disk-space-policy watermark-level-1 (percentage) (syslog | snmp |
alarm)
user@host# set disk-space-policy watermark-level-2 (percentage) (syslog | snmp |
alarm)
user@host# set disk-space-policy watermark-level-3 (percentage) (syslog | snmp |
alarm)
```

Tracing Persistent Storage Operations

To configure tracing operations for local persistent storage:

- Specify that you want to configure tracing options for charging operations.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options]
user@host# edit traceoptions
```

- (Optional) Configure the name for the file used for the trace output.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options
traceoptions]
user@host# set file filename
```

- (Optional) Configure flags to filter the operations to be logged.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options
traceoptions]
user@host# set flag flag
```

By default, only important events are logged. You can specify which trace operations are logged by including specific tracing flags. The following table describes the flags that you can include.

Flag	Description
all	Trace all operations
connection	Trace connection establishment between the Routing Engine and all session DPCs for CDR file backup
file-operations	Trace file operations (open, write, close)
general	Trace miscellaneous operations

Flag	Description
journaling	Trace file journaling operations
mirror	Trace mirroring operations

4. (Optional) Configure the level of tracing.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging local-persistent-storage-options
traceoptions]
user@host# set level (all | critical | error | info | notice | verbose | warning)
```

Related Documentation

- [Configuring the Solid State Disk for Persistent Storage on page 23](#)
- [Configuring Charging on page 13](#)
- [Configuring Transport Profiles on page 25](#)
- [Charging Services Overview on page 3](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring the Solid State Disk for Persistent Storage

You can use the Solid State Disk (SSD) on the Routing Engine for local persistent storage. You must configure the SSD (part number SSD-CDR-S) before Charging Data Records (CDRs) can be stored locally on the Routing Engine.



NOTE: If you do not want to format the existing content on the SSD, you must specify the **no-format** option when preparing the SSD.

To use the SSD for local persistent storage of CDRs, perform these tasks:

- [Initializing the Solid State Disk for Persistent Storage on page 23](#)
- [Ejecting the Solid State Disk on page 24](#)
- [Installing the Solid State Disk on page 24](#)

Initializing the Solid State Disk for Persistent Storage

If the SSD on the Routing Engine is not plugged in before you start storing CDRs locally on the Routing Engine, you must initialize the SSD.

To initialize the SSD for local persistent storage when it has not been installed in the Routing Engine:

1. Power down the Routing Engine by pressing the Online/Offline button or entering the **shutdown -h now** command.
2. Install the SSD. For information about installing the SSD, see “Replacing an SSD Drive on an RE-A-1800 or RE-S-1800” in the Hardware Guide for your MX Series router.
3. Boot the Routing Engine.
4. Prepare the SSD to store CDRs.

```
user@host> request system storage unified-edge media prepare
```



NOTE: If you do not want to format the existing content on the SSD, you must specify the **no-format** option.

5. Enable the SSD to start storing CDRs.

```
user@host> request system storage unified-edge charging media start
```

Ejecting the Solid State Disk

To eject the SSD from the Routing Engine:

1. Disable the SSD to close all open files and stop storing CDRs.

```
user@host> request system storage unified-edge charging media stop
```

2. Prepare the SSD for removal from the Routing Engine.

```
user@host> request system storage unified-edge media eject
```

3. Remove the SSD from the Routing Engine. For information about removing the SSD, see “Replacing an SSD Drive on an RE-A-1800 or RE-S-1800” in the Hardware Guide for your MX Series router.

Installing the Solid State Disk

If the SSD on the Routing Engine is reinstalled on the Routing Engine after it was initialized, you must prepare the SSD to store CDRs.

To prepare the SSD for local persistent storage when it has been reinstalled on the Routing Engine:

1. Install the SSD. For information about installing the SSD, see “Replacing an SSD Drive on an RE-A-1800 or RE-S-1800” in the Hardware Guide for your MX Series router.
2. Prepare the SSD to store CDRs.

```
user@host> request system storage unified-edge media prepare
```



NOTE: If you do not want to format the existing content on the SSD, you must specify the **no-format** option.

3. Enable the SSD to start storing CDRs.

```
user@host> request system storage unified-edge charging media start
```

4. Reboot the Routing Engine.

Related Documentation

- [Configuring Persistent Storage on page 21](#)
- [request system storage unified-edge charging media start on page 131](#)
- [request system storage unified-edge charging media stop on page 132](#)
- [request system storage unified-edge media eject on page 133](#)
- [request system storage unified-edge media prepare on page 134](#)

Configuring Transport Profiles

A transport profile provides information for transporting the Charging Data Records (CDRs) from the charging data function (CDF) to the charging gateways or to local persistent storage. A transport profile can be associated with different charging profiles. You can define up to eight transport profiles.

To configure transport profiles:

1. Specify the name of the transport profile that you are configuring for the gateway called MBG1.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging]
user@host# edit transport-profiles profile-name
```

2. Specify a description for the profile.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles profile-name]
user@host# set description string
```

3. Configure offline charging in the transport profile.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles profile-name]
user@host# edit offline charging-gateways
```

4. Configure the order in which the charging gateways are selected. The charging gateway must be defined as a GTP Prime peer. The highest-priority peer is selected first as the active charging gateway. When the active charging gateway goes down, the next higher-priority peer is selected. If all the charging gateways are down and you have configured local persistent storage, then the CDRs are stored on the Routing Engine.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set peer-order peer charging-gateway-peer-name
```

5. Specify the time the CDF must wait before switching back to a higher-priority peer from a lower-priority peer that has become the active charging gateway.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set switch-back-time seconds
```

6. Specify that the persistent storage order is local (on the Routing Engine). You must configure the persistent storage order before CDRs can be stored locally on the Routing Engine.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set persistent-storage-order local-storage
```

7. Configure the CDR format version. The charging format implemented in the 3GPP Release 8 specifications (r8) is the default format version.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set cdr-release (r99 | r7 | r8)
```

8. Specify the number of CDRs in one DRT message.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set cdr-aggregation-limit value
```

9. Configure the maximum transmission unit (MTU) of the DRT message.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging transport-profiles
transport-profile1 offline charging-gateways]
user@host# set mtu value
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Charging Profiles on page 30](#)
- [Charging Profiles on page 9](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring Charging Trigger Events

A trigger profile defines the charging events that cause Charging Data Record (CDR) changes.

To configure trigger profiles:

1. Specify the name of the trigger profile that you are configuring for the gateway called MBG1.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging]
user@host# edit trigger-profiles profile-name
```

2. Specify a description for the profile.


```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name]
user@host# set description string
```

3. Configure offline charging in the trigger profile.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name]
user@host# edit offline
```

4. Specify a time limit for closing the container. A value of zero (0) disables this trigger.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
user@host# set time-limit seconds
```

5. Specify the bearer information change that does not trigger charging data updates. All of these changes trigger a container or CDR closure by default.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
user@host# set exclude bearer-information-change
```

The following table describes the bearer information changes that can be ignored for charging data updates.

Bearer Information Change	Description
ms-timezone-change	MS time zone
plmn-change	Public Land Mobile Network (PLMN)
qos-change	Quality of service (QoS)
rat-change	Radio Access Technology (RAT)
sgsn-sgw-change	SGSN or S-GW limit
user-location-change	User location information

For example:

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
user@host# set exclude user-location-change
```

6. Specify a volume limit trigger for bandwidth, in bytes.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
user@host# set volume-limit value
```

7. Specify the direction for the volume limit trigger. If you specify **both**, the volume limit applies to the combined amount of uplink and downlink traffic.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
user@host# set volume-limit direction (both | uplink)
```

8. Specify the maximum number of containers to limit for each CDR.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
```

```
user@host# set container-limit value
```

9. Specify the number of SGSN or S-GW changes that can occur before the CDR is updated and closed. A value of zero (0) disables this trigger.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
offline]
```

```
user@host# set sgsn-sgw-change-limit value
```

10. Configure the list of times to update CDRs when the tariffs change within a day. These times can be specified in a minimum of 15-minute increments. Specify the tariff time changes in the format *hh:mm*, where *hh* is 00 through 23 (00 is midnight) and *mm* is 00 through 59. The specified time is local time.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name]
```

```
user@host# set tariff-time-list hh:mm
```

For example:

```
[edit unified-edge gateways ggsn-pgw MBG1 charging trigger-profiles profile-name
tariff-time-list]
```

```
user@host# set tariff-time-list 21:00
```

```
user@host# set tariff-time-list 07:00
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring Charging Profiles on page 30](#)
- [Charging Profiles on page 9](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring CDR Attributes

A Charging Data Record (CDR) profile defines the attributes in each CDR.

To configure CDR profiles:

1. Specify the name of the CDR profile that you are configuring for the gateway called MBG1.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging]
```

```
user@host# edit cdr-profiles profile-name
```

2. Specify a description for the profile.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging cdr-profiles profile-name]
```

```
user@host# set description string
```

3. Enable reduced partial CDR (RPC) generation.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging cdr-profiles profile-name]
user@host# set enable-reduced-partial-cdrs
```

4. Set optional information elements to exclude from the CDR. You can specify the excluded information elements so that you can manage the size of the CDR. By default, all informational elements are included in the CDR.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging cdr-profiles profile-name]
user@host# set exclude-ie-options [information element]
```

The following table describes the information elements that can be excluded from CDRs.

Information Element	Information in CDRs
apn-ni	Access point name (APN) network identifier
apn-selection-mode	APN selection mode
cc-selection-mode	Charging characteristic selection mode
dynamic-address	Dynamic Packet Data Protocol (PDP) address indication
list-of-service-data	List of service data
list-of-traffic-volumes	List of traffic volumes
lrsn	Local record sequence number
ms-time-zone	Mobile station (MS) time zone
network-initiation	Network initiation flag
node-id	Node identifier
pdn-connection-id	Packet data network (PDN) connection ID
pdppdn-type	PDP or PDN type
pgw-plmn-identifier	Packet Data Network Gateway (P-GW) Public Land Mobile Network (PLMN) identifier field
rat-type	Radio Access Technology (RAT) type
record-sequence-number	Record sequence number
served-imeisv	Served International Mobile Equipment Identity and Software Version Number (IMEISV)
served-msisdn	Served mobile station ISDN (MSISDN)
served-pdppdn-address	Served PDP context or IP-CAN bearer address

Information Element	Information in CDRs
serving-node-plmn-identifier	Serving node PLMN identifier field
start-time	Time when session established; added to first CDR
stop-time	Time when session terminated; added to last CDR
user-location-information	User location information

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring Charging Profiles on page 30](#)
- [Charging Profiles on page 9](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring Charging Profiles

A charging profile defines the charging behavior applied to a mobile subscriber. The charging profile includes a transport profile, a Charging Data Record (CDR) profile, a trigger profile, and other default service-aware charging information.

To configure charging profiles:

1. Specify the name of the charging profile that you are configuring for the gateway called MBG1.


```
[edit unified-edge gateways ggsn-pgw MBG1 charging]
user@host# edit charging-profiles profile-name
```
2. Specify a profile identifier that is matched against the GPRS tunneling protocol (GTP) charging characteristic or authentication, authorization, and accounting (AAA) charging profile number. The profile identifier must be specified and it must be a unique value across all charging profiles defined for a gateway.


```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set profile-id profile-id
```
3. Specify the transport profile referenced by this charging profile. The transport profile must be defined.


```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set transport-profile profile-name
```
4. (Optional) Specify a description for the profile.


```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
```

```
user@host# set description string
```

- (Optional) Specify the default rating group. This option is useful for the 3GPP Release 8 specifications or for generating a Release 7 service data container.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set default-rating-group integer
```

- (Optional) Specify the default service identifier for the service or the service component. This option is useful for the 3GPP Release 8 specifications or for generating a Release 7 service data container.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set default-service-id integer
```

- (Optional) Specify the CDR profile referenced by this charging profile. The CDR profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set cdr-profile profile-name
```

- (Optional) Specify the trigger profile referenced by this charging profile. The trigger profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging charging-profiles profile-name]
user@host# set trigger-profile profile-name
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Charging Profiles on page 9](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring Charging Profiles for APNs

You can configure charging profiles that apply to access point names (APNs) that are used for the default profile, home subscribers, roaming subscribers, and visiting subscribers.

To configure charging profiles for APNs:

- Specify that you want to configure charging profiles for a particular APN.

```
[edit]
user@host# edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name
charging
```

- Specify the name of the default charging profile. The charging profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name charging]
user@host# set default-profile profile-name
```

3. Specify the name of the charging profile for home subscribers roaming in other Public Land Mobile Networks (PLMNs). The charging profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name charging]  
user@host# set home-profile profile-name
```

4. Specify the name of the charging profile for roaming subscribers between PLMNs. The charging profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name charging]  
user@host# set roamer-profile profile-name
```

5. Specify the name of the charging profile for visiting subscribers from other PLMNs. The charging profile must be defined.

```
[edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name charging]  
user@host# set visitor-profile profile-name
```

6. Specify the profile selection order. You can order the selections by the charging profile sent by the RADIUS server (radius), the charging profile sent by the SGSN or Serving Gateway (serving), or the locally configured charging profile (static).

```
[edit unified-edge gateways ggsn-pgw MBG1 apn-services apns apn-name charging]  
user@host# set profile-selection-order [(serving | radius | static)]
```

**Related
Documentation**

- [Configuring Charging on page 13](#)
- [Charging Profiles on page 9](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

CHAPTER 4

Configuration Statements

- [\[edit unified-edge gateways\] Hierarchy Level](#) on page 33

[\[edit unified-edge gateways\] Hierarchy Level](#)

Each of the following topics lists the statements at a sub-hierarchy of the **[edit unified-edge gateways]** hierarchy.

- [\[edit unified-edge gateways ggsn-pgw <gateway-name>\] Hierarchy Level](#)
- [\[edit unified-edge gateways sgw <gateway-name>\] Hierarchy Level](#)


Related Documentation

- [\[edit unified-edge\] Hierarchy Level](#)
- [Notational Conventions Used in Junos OS Configuration Hierarchies](#)

cdr-aggregation-limit

Syntax	<code>cdr-aggregation-limit value;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the maximum number of Charging Data Records (CDRs) that can be added to a Data Record Transfer (DRT) message before it is transmitted.</p> <p>A DRT message containing the CDRs is transmitted from the charging data function (CDF) to the charging gateway function (CGF) server, when the cdr-aggregation-limit or the mtu size is reached (whichever comes first). For efficient transmissions of DRT messages, you may want to set the cdr-aggregation-limit to the maximum value of 16.</p>
Options	<p>value—Number of CDRs that can be added to a DRT message.</p> <p>Range: 1 through 16</p> <p>Default: 5</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• charging-gateways on page 44• Configuring Transport Profiles on page 25• Configuring Charging on page 13

cdr-profile

Syntax	<code>cdr-profile <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</code>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</code> hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Associate a Charging Data Record (CDR) profile with a charging profile. However, make sure this profile has been previously defined.</p> <p>When a subscriber session is created, the subscriber is bound to a charging profile and the CDR profile configuration associated with this profile determines the information (fields) that is included in the CDRs and is used for billing purposes.</p> <p>Any modification to the existing configuration of this attribute must be done only when the charging profile with which it is associated is under active maintenance mode. Use one of the following commands, as applicable, to bring the charging profile under maintenance mode:</p> <ul style="list-style-type: none"> For the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW)—<code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i> service-mode maintenance</code> For the Serving Gateway (S-GW)—<code>set unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i> service-mode maintenance</code>
	<div>  <p>TIP: If the profile is not already defined, use the one of the following commands, as applicable, to define a new CDR profile:</p> <ul style="list-style-type: none"> GGSN or P-GW—<code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i></code> S-GW—<code>set unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i></code> </div>
Options	<i>profile-name</i> —Name of the CDR profile to be associated with the charging profile.
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> charging-profiles on page 45 Configuring Charging Profiles on page 30

- [Configuring Charging on page 13](#)
- [Charging Profiles on page 9](#)

cdr-profiles

Syntax	<pre> cdr-profiles <i>profile-name</i> { <i>description string</i>; enable-reduced-partial-cdrs; exclude-ie-options { apn-ni; apn-selection-mode; cc-selection-mode; dynamic-address; list-of-service-data; list-of-traffic-volumes; lrsn; ms-time-zone; network-initiation; node-id; pdn-connection-id; pdppdn-type; pgw-address-used; # S-GW only pgw-plmn-identifier; rat-type; record-sequence-number; served-imeisv; served-msisdn; served-pdppdn-address; serving-node-plmn-identifier; sgw-change; # S-GW only start-time; stop-time; user-location-information; } } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure a Charging Data Record (CDR) profile. The configuration in the CDR profile determines the content or the information that is included in a CDR and is used for billing purposes.</p> <p>By default, the Juniper Charging Service (J-CS) module adds all the required fields mandated by the Third-Generation Partnership Project (3GPP) standards to the CDR. However, you can exclude the provisional fields information from the CDR by configuring a CDR profile.</p> <p>The maximum number of CDR profiles supported for the broadband gateway is 255.</p> <p>The remaining statements are explained separately.</p>

Options	<i>profile-name</i> —Name of the CDR profile. Values: 1 through 128 bytes
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • charging on page 40 • Configuring CDR Attributes on page 28 • Configuring Charging on page 13

cdr-release


Syntax	cdr-release (r7 r8 r99);
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	The encoding of the Charging Data Record (CDR) is compliant with the 3GPP technical specification release version that is configured using the statement. The supported versions are 3GPP release versions 7, 8, and 99.



NOTE: 3GPP release versions 7 and 99 are not applicable to the Serving Gateway (S-GW). 3GPP release version 8 is applicable to the GGSN, P-GW, and S-GW.

Options	<p>r7—3GPP release version, 7.</p> <p>r8—3GPP release version, 8.</p> <p>r99—3GPP release version, 99.</p> <p>Default: r8</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • charging-gateways on page 44 • Configuring Transport Profiles on page 25 • Configuring Charging on page 13

cdrs-per-file

Syntax	<code>cdrs-per-file value;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the maximum number of Charging Data Records (CDRs) that can be added to a file after which the temporary CDR log file is closed and moved to a final location within the same disk (<code>/opt/mobility/charging/ggsn/final_log</code>), from where it can be transferred using SSH FTP (SFTP). Files transferred from the final location should be deleted from the local Routing Engine disk after the transfer. Only authorized users can transfer and delete the files (after the transfer).</p> <p>However, any one of the following conditions must be met (whichever comes first) before the files are moved from the temporary location to the final location:</p> <ul style="list-style-type: none"> • Number of CDRs per file reaches the configured or default limit. • Size of the file reaches the configured or default limit. • Age of the file reaches the configured or default limit.
	<div>  <p>NOTE: The default limit is applicable only if you have not configured any value.</p> </div>
Options	<p>value—Maximum number of CDRs that can be added to a file after which it is closed and moved to a location within the Routing Engine disk, from where it can be transferred using SFTP.</p> <p>Range: 5000 through 1,000,000</p> <p>Default: 0, which indicates that there is no trigger for the CDR count per file.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • local-persistent-storage-options on page 76 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

charging

```
Syntax  charging {
        cdr-profiles profile-name {
            description string;
            enable-reduced-partial-cdrs;
            exclude-ie-options {
                apn-ni;
                apn-selection-mode;
                cc-selection-mode;
                dynamic-address;
                list-of-service-data;
                list-of-traffic-volumes;
                lrsn;
                ms-time-zone;
                network-initiation;
                node-id;
                pdn-connection-id;
                pdppdn-type;
                pgw-address-used; # S-GW only
                pgw-plmn-identifier;
                rat-type;
                record-sequence-number;
                served-imeisv;
                served-msisdn;
                served-pdppdn-address;
                serving-node-plmn-identifier;
                sgw-change; # S-GW only
                start-time;
                stop-time;
                user-location-information;
            }
        }
        charging-profiles profile-name {
            cdr-profile profile-name;
            default-rating-group rg-num;
            default-service-id id-num;
            description string;
            profile-id id-num;
            transport-profile profile-name;
            trigger-profile profile-name;
            service-mode maintenance;
        }
        global-profile { # S-GW only
            default-profile default-profile;
            home-profile home-profile;
            profile-selection-order [profile-selection-method];
            roamer-profile roamer-profile;
            visitor-profile visitor-profile;
        }
        gtp {
            destination-port port-number;
            down-detect-time duration;
            echo-interval duration;
        }
    }
```

```

header-type (long | short);
n3-requests requests;
no-path-management;
pending-queue-size value;
peer peer-name {
    destination-ipv4-address address;
    destination-port port-number;
    down-detect-time duration;
    echo-interval duration;
    header-type (long | short);
    n3-requests requests;
    no-path-management;
    pending-queue-size value;
    reconnect-time duration;
    source-interface interface-name [ipv4-address address];
    t3-response response-interval;
    transport-protocol (tcp | udp);
    version (v0 | v1 | v2);
}
reconnect-time duration;
source-interface {
    interface-name;
    ipv4-address address;
}
t3-response response-interval;
transport-protocol (tcp | udp);
version (v0 | v1 | v2);
}
local-persistent-storage-options {
    cdrs-per-file value;
    disable-replication;
    disk-space-policy {
        watermark-level-1 {
            notification-level (both | snmp-alarm | syslog);
            percentage value;
        }
        watermark-level-2 {
            notification-level (both | snmp-alarm | syslog);
            percentage value;
        }
        watermark-level-3 {
            notification-level (both | snmp-alarm | syslog);
            percentage value;
        }
    }
}
file-age {
    age;
    disable;
}
file-creation-policy (shared-file | unique-file);
file-format (3gpp | raw-asn);
file-name-private-extension string;
file-size {
    size;
    disable;
}

```

```

traceoptions {
    file file-name <files number> <match regular-expression> <no-world-readable |
        world-readable> <size size>;
    flag flag;
    level (all | critical | error | info | notice | verbose | warning);
    no-remote-trace;
}
user-name string;
world-readable;
}
traceoptions {
    file file-name <files number> <no-world-readable | world-readable> <size size>;
    flag flag;
    level (all | critical | error | info | notice | verbose | warning);
    no-remote-trace;
}
transport-profiles profile-name {
    description string;
    offline {
        charging-gateways {
            cdr-aggregation-limit value;
            cdr-release (r7 | r8 | r99);
            mtu value;
            peer-order {
                [peer charging-gateway-peer-name];
            }
            persistent-storage-order {
                local-storage;
            }
            switch-back-time seconds;
        }
    }
    service-mode maintenance;
}
trigger-profiles profile-name {
    description string;
    offline {
        container-limit value;
        exclude {
            ms-timezone-change;
            plmn-change;
            qos-change;
            rat-change;
            sgsn-mme-change; #S-GW only
            sgsn-sgw-change; #P-GW only
            user-location-change;
        }
        sgsn-mme-change-limit value; #S-GW only
        sgsn-sgw-change-limit value; #P-GW only
        time-limit value;
        volume-limit {
            value;
            direction (both | uplink);
        }
    }
}
tariff-time-list {

```



```

        [tariff-time];
    }
}

```

Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	The configuration in this hierarchy determines the overall charging configuration for a subscriber. The remaining statements are explained separately.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • ggsn-pgw • Configuring Charging on page 13 • Charging on page 3 • Charging Services Overview on page 3 • Charging Data Records on page 5 • Charging Profiles on page 9 • sgw

charging-gateways

Syntax	<pre> charging-gateways { cdr-aggregation-limit value; cdr-release (r7 r8 r99); mtu value; peer-order { [peer charging-gateway-peer-name]; } persistent-storage-order { local-storage; } switch-back-time seconds; } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure a group of GTP Prime peers, the local Routing Engine disk, or both for Charging Data Record (CDR) file storage. In addition, you can configure the following:</p> <ul style="list-style-type: none"> • The maximum CDRs that can be added to a Data Record Transfer (DRT) message. • The maximum transmission unit of a DRT message. • The generated CDRs to be compliant with a specific 3GPP release. • The duration the charging data function (CDF) waits before transmitting the CDRs to a peer that has recently come up and has the highest priority among all the peers, which are alive. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • offline on page 81 • Configuring Transport Profiles on page 25 • Configuring Charging on page 13

charging-profiles

Syntax	<pre>charging-profiles <i>profile-name</i> { <i>cdr-profile profile-name</i>; <i>default-rating-group rg-num</i>; <i>default-service-id id-num</i>; <i>description string</i>; <i>profile-id id-num</i>; <i>service-mode maintenance</i>; <i>transport-profile profile-name</i>; <i>trigger-profile profile-name</i>; }</pre>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure a charging profile. The charging profile determines the overall charging configuration for a subscriber, such as the data collected in a Charging Data Record (CDR), the events that generate the CDR, where the CDR is stored, and so on for that subscriber.</p> <p>You can configure up to a maximum of 255 charging profiles.</p> <p>The remaining statements are explained separately.</p>
Options	<p><i>profile-name</i>—Name of the charging profile.</p> <p>Values: 1 through 128 bytes</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging on page 40 • Configuring Charging Profiles on page 30 • Charging Profiles on page 9 • Configuring Charging on page 13

container-limit

Syntax	container-limit <i>value</i> ;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure the maximum number of containers that can be added to a Charging Data Record (CDR). When the limit is reached, the CDR is closed.
Options	<i>value</i> —Maximum number of containers. Range: 1 through 15 Default: 5
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• offline on page 82• Configuring Charging Trigger Events on page 26• Configuring Charging on page 13

default-profile

Syntax	<code>default-profile <i>default-profile</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> apn-services apns <i>name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify the default profile. If the profile-selection-order configuration indicates static , and if the corresponding charging profile applicable to the type of subscriber (home, visitor, or roamer) has not been specified, then the default profile is applied.




NOTE: The charging profile must already be configured on the broadband gateway.


The broadband gateway determines the type of subscriber by using the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE) and compares these with the corresponding values configured for the home public land mobile network (HPLMN). Depending on whether a subscriber is a home subscriber, a visitor, or a roamer, the **home-profile**, **visited-profile**, or **roamer-profile** is applied. If the applicable profile is not configured, then the **default-profile**, if configured, is applied. If the **default-profile** is also not configured, then the subscriber session is created with no charging applied.

Options	<i>default-profile</i> —Name of the default profile.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Charging and Local Policy Profiles on a Broadband Gateway APN Configuring S-GW Global Charging Profiles and Selection Order on page 17 charging (APN) charging-profiles on page 45 global-profile (Serving Gateway) on page 72

default-rating-group

Syntax	<code>default-rating-group <i>rg-num</i>;</code>
Hierarchy Level	<code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</code>
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</code> hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Specify a default rating group to be used for charging service data containers. The rating group represents a collection of services.</p> <p>When this option is configured and if the Charging Data Record (CDR) release used is r7, then the P-GW generates a service data container, which is added to the CDR.</p>
<div> NOTE: This configuration is not applicable for the Serving Gateway (S-GW).</div>	
Options	<i>rg-num</i> —Default rating group to be used for charging.
Required Privilege Level	<code>unified-edge</code> —To view this statement in the configuration. <code>unified-edge-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• charging-profiles on page 45• Configuring Charging Profiles on page 30• Charging Profiles on page 9• Configuring Charging on page 13

default-service-id

Syntax	<code>default-service-id <i>id-num</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Specify the default service identifier to be used for charging service data containers. This ID is used to identify the service or the service component.</p> <p>When this option is configured and if the Charging Data Record (CDR) release used is r7, then the P-GW generates a service data container, which is added to the CDR.</p>
<div>  <p>NOTE: This configuration is not applicable for the Serving Gateway (S-GW).</p> </div>	
Options	<i>id-num</i> —Default service identifier to be used for charging.
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging-profiles on page 45 • Configuring Charging Profiles on page 30 • Charging Profiles on page 9 • Configuring Charging on page 13

description

Syntax	<code>description <i>string</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>], and [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Enter a description for the Charging Data Record (CDR) profile, charging profile, transport profile, or trigger profile (which can be used to capture the purpose of the profile). For example, you might have a description to differentiate the default profile from other profiles, as follows:</p> <p>This is the default profile to be used when a subscriber cannot be categorized into any other profile.</p> <p>However, make sure that the description is 255 characters or fewer.</p>
Options	<p><i>string</i>—Description of the profile.</p> <p>Values: Up to 255 characters</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • cdr-profiles on page 37 • charging-profiles on page 45 • transport-profiles on page 108 • trigger-profiles on page 111 • Configuring CDR Attributes on page 28 • Configuring Charging Profiles on page 30 • Configuring Transport Profiles on page 25 • Configuring Charging Trigger Events on page 26

destination-ipv4-address (GTP Prime)

Syntax	<code>destination-ipv4-address <i>address</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure the charging gateway function (CGF) server's (GTP Prime peer's) IPv4 address, to which the Charging Data Records (CDRs) are sent as GTP Prime messages from the charging gateway function (CGF). This is a mandatory configuration.
Options	<i>address</i> —IPv4 address of the CGF server.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • peer (GTP Prime) on page 83 • Configuring GTP Prime Peers on page 20 • Configuring GTP Prime for Charging on page 19

destination-port (GTP Prime)

Syntax	<code>destination-port <i>port-number</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	Configure the TCP or UDP port on which the charging gateway function (CGF) server listens to the GTP Prime messages sent from the charging data function (CDF). When there are global-level and peer-level configurations, the peer-level configuration takes precedence.
Options	<i>port-number</i> —TCP or UDP port on which the CGF server listens to the GTP Prime messages sent from the CDF. Range: 1 through 65535 Default: 3386
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• gtp on page 73• peer (GTP Prime) on page 83• Configuring GTP Prime Peers on page 20• Configuring GTP Prime for Charging on page 19

direction (Trigger Profiles)

Syntax	direction (both uplink);
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline volume-limit], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline volume-limit]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline volume-limit] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify whether the maximum volume of data transmitted includes the data transmitted in both the uplink and downlink directions, or only in the uplink direction. When the configured volume limit is reached, the CDR is updated with the transmitted uplink and downlink bytes and is closed. Any change to the existing configuration does not affect a previously established session. The updated configuration applies only to new sessions.
Default	If you do not configure the direction statement, then the configured volume limit includes the total volume of data transmitted in both uplink and downlink directions.
Options	both —The configured volume limit must include the total volume of data transmitted in both uplink and downlink directions. uplink —The configured volume limit must include the volume of data transmitted only in the uplink direction.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • volume-limit on page 115 • Configuring Charging Trigger Events on page 26 • Configuring Charging on page 13

disable-replication

Syntax	disable-replication;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Specify that Charging Data Records (CDRs) stored on the Routing Engine disk should <i>not</i> be replicated to the standby Routing Engine. Typically, the CDRs stored on Routing Engine disk are replicated to the standby Routing Engine, as a backup.</p> <p>By default, replication is enabled.</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• local-persistent-storage-options on page 76• Configuring Persistent Storage on page 21• Configuring Charging on page 13

disk-space-policy

Syntax	<pre> disk-space-policy { watermark-level-1 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; } watermark-level-2 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; } watermark-level-3 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; } } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>When you use the Routing Engine disk to store Charging Data Records (CDRs), you may want to monitor and raise alerts if the disk space falls below a configured threshold level, which enables you to take appropriate measures to prevent the loss of CDR data.</p> <p>Use the statements within this hierarchy to configure the percentage of disk space you want to allocate for storage, and raise alerts when the limit is reached.</p> <p>You can configure up to a maximum of three threshold levels.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • local-persistent-storage-options on page 76 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

down-detect-time (GTP Prime)

Syntax	<code>down-detect-time <i>duration</i>;</code>
Hierarchy Level	<code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp],</code> <code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</code>
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp]</code> and <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</code> hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the duration for which the charging data function (CDF) must wait for a response from the charging gateway function (CGF) server after the expiry of an $n3 * t3$ cycle, after which the server's status is marked Down. The CDF then sends the GTP Prime messages to the next configured CGF server in the corresponding transport profile.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p><i>duration</i>—Duration the CDF waits after the $n3 * t3$ cycle expiry before declaring a GTP Prime peer as Down. The CDF then sends the GTP Prime messages to the next configured GTP Prime peer in the corresponding transport profile.</p> <p>Range: 0 through 255 seconds</p> <p>Default: 10 seconds</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• gtp on page 73• peer (GTP Prime) on page 83• Configuring GTP Prime Peers on page 20• Configuring GTP Prime for Charging on page 19• Configuring Charging on page 13

echo-interval (GTP Prime)

Syntax	<code>echo-interval <i>duration</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the number of seconds that the charging data function (CDF) must wait before sending an echo request message to the charging gateway function (CGF) server.</p> <p>Echo messages are:</p> <ul style="list-style-type: none"> • Sent only for UDP connections. • Not sent more than once in a minute. <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p><i>duration</i>—Number of seconds that the CDF waits before sending an echo request message to the CGF server.</p> <p>Range: 60 through 255 seconds</p> <p>Default: 60 seconds</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer on page 83 • Configuring GTP Prime Peers on page 20 • Configuring GTP Prime for Charging on page 19 • Configuring Charging on page 13

enable-reduced-partial-cdrs

Syntax	enable-reduced-partial-cdrs;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Enable the generation of reduced partial Charging Data Records (RPCs). RPCs contain mandatory fields as well as information regarding changes in the session parameters relative to the previous CDR. For example, if the user equipment location has not changed, then this information is excluded from the RPC because this information has not changed from the previous CDR.
Default	If this statement is not configured, the generation of fully qualified partial CDR (FQPC) is supported. FQPC contains all the mandatory and conditional fields, as well as those fields that the public land mobile network (PLMN) operator has provisioned to be included in the CDR.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• cdr-profiles on page 37• Configuring CDR Attributes on page 28• Configuring Charging on page 13

exclude (Trigger Profiles)

Syntax	<pre>exclude { ms-timezone-change; plmn-change; qos-change; rat-change; sgsn-mme-change; #S-GW only sgsn-sgw-change; #P-GW only user-location-change; }</pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline] hierarchy level and the sgsn-mme-change option introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Certain signal message updates to the packet data protocol (PDP) context or bearer trigger charging updates. However, using the statements in this hierarchy, you can choose not to record these updates in the Charging Data Record (CDR).</p> <p>For example, a quality-of-service (QoS) change results in a container being added to the CDR. However, the container is not added if you configure to ignore this change, using one of the following commands, as applicable:</p> <ul style="list-style-type: none"> • set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> exclude qos-change for the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW). • set unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> exclude qos-change for the Serving Gateway (S-GW). <p>You may have configured certain information elements (IEs) to be excluded from the CDR using the statements at the [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i> exclude-ie-options] or the [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i> exclude-ie-options] hierarchy levels. Irrespective of this configuration, some of the IEs are to the CDR if the corresponding triggering event is not disabled. The following table lists the triggers and the corresponding IEs.</p>

Table 3: Triggers and Corresponding IEs

Trigger	IE
ms-timezone-change	Mobile Station (MS) time zone
plmn-change	Serving node PLMN identifier
rat-change	RAT type
user-location-change	User location information

Options



NOTE: The following options are applicable to both GGSN or P-GW and S-GW CDRs unless otherwise specified.

- **ms-timezone-change**—If configured, excludes charging data updates to the CDR when there is a change in the MS time zone. Otherwise, when an MS time zone change occurs, the CDR is updated with the charging information and is closed.
- **plmn-change**—If configured, excludes charging data updates to the CDR when there is a PLMN change. Otherwise, when a public land mobile network (PLMN) change occurs, the CDR is updated with the charging information and is closed.
- **qos-change**—If configured, excludes charging data updates to the CDR when there is a QoS change. Otherwise, a container is added to the CDR when there is a QoS change.
- **rat-change**—If configured, excludes charging data updates to the CDR when there is a RAT change. Otherwise, when a Radio Access Technology (RAT) change occurs, the CDR is updated with the charging information and is closed.
- **sgsn-mme-change**—(S-GW only) If configured, excludes charging data updates to the CDR when the SGSN or Mobility Management Entity (MME) changes reach the maximum configured limit (determined by the value set for the **sgsn-mme-change-limit** parameter). Otherwise, when the SGSN or MME changes reach the maximum configured limit, the CDR is updated and closed.
- **sgsn-sgw-change**—(GGSN or P-GW only) If configured, excludes charging data updates to the CDR when the SGSN or S-GW changes reach the maximum configuration limit (determined by the value set for the **sgsn-sgw-change-limit** parameter). Otherwise, when the SGSN or S-GW changes reach the maximum configured limit, the CDR is updated and closed.
- **user-location-change**—If configured, excludes charging data updates to the CDR when there is a change in user location. Otherwise, when a change in the user location information (such as E-UTRAN cell global identifier [ECGI], Tracking Area Identity [TAI], Routing Area Identity [RAI], SAI [Service Area identity], Location Area Identity [LAI], or Cell Global Identity [CGI]) occurs, the open containers are closed and added to the CDR.

Required Privilege unified-edge—To view this statement in the configuration.
Level unified-edge-control—To add this statement to the configuration.

Related Documentation

- [offline on page 82](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring Charging on page 13](#)

exclude-ie-options

Syntax	<pre> exclude-ie-options { apn-ni; apn-selection-mode; cc-selection-mode; dynamic-address; list-of-service-data; list-of-traffic-volumes; lrsn; ms-time-zone; network-initiation; node-id; pdn-connection-id; pdppdn-type; pgw-address-used; # S-GW only pgw-plmn-identifier; rat-type; record-sequence-number; served-imeisv; served-msisdn; served-pdppdn-address; serving-node-plmn-identifier; sgw-change; # S-GW only start-time; stop-time; user-location-information; } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>pgw-address-used and sgw-change options and support for them at the [edit unified-edge gateways sgw <i>gateway-name</i> charging cdr-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>The mobile operator can provision certain optional information elements (parameters) to be excluded from the Charging Data Record (CDR). Use this statement to configure the information elements (IEs) that are to be excluded from the CDR. By default, all informational elements are included in the CDR.</p>



CAUTION: Some of the IEs are added to the CDR irrespective of whether or not you have configured them to be excluded, if the corresponding triggering events are enabled. The **ms-time-zone**, **serving-node-plmn-identifier**, **rat-type**, and **user-location-information** IEs are added to the CDR, unless the corresponding **ms-timezone-change**, **plmn-change**, **rat-change**, and **user-location-change** triggering events are explicitly disabled using the statements under the **trigger-profiles > exclude** hierarchy level.

Options



NOTE: The following options are applicable to both the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW) and Serving Gateway (S-GW) CDRs unless otherwise specified.

- **apn-ni**—The Access Point Name Network Identifier (APN-NI) defines the external network to which the user wants to connect to through the GGSN.
- **apn-selection-mode**—Indicates the origin of the APN and whether or not the Home Location Register (HLR) or Home Subscriber Server (HSS) has verified the user's subscription. The possible values for this mode are:
 - **Mobile Station**—MS-provided APN, subscription not verified.
Indicates that the Mobile Station (MS) provided the APN and that the HLR or HSS did not verify the user's subscription to the network.
 - **Network**—Network-provided APN, subscription not verified.
Indicates that the network provided a default APN because the MS did not provide an APN, and that the HLR or HSS did not verify the user's subscription to the network.
 - **Verified**—MS or network-provided APN, subscription verified.
Indicates that the MS or the network provided the APN and that the HLR or HSS verified the user's subscription to the network.
- **cc-selection-mode**—Indicates the type of charging characteristic that the GGSN or P-GW applies to the CDR: **Home**, **Visiting**, **Roaming**, or **SGSN/S-GW supplied**.
- **dynamic-address**—This field, if present in the CDR, indicates that the packet data protocol (PDP) address has been dynamically allocated for the specific PDP context.
- **list-of-service-data**—This list includes one or more containers and each of the container includes a list of fields which records information about the volume of data transmitted in bytes in the uplink and downlink directions, quality-of-service (QoS) changes, and so on. For the complete list, refer to the 3GPP 32.298 v 8.7.0 technical specification.
- **list-of-traffic-volumes**—This list includes one or more containers and each container includes a list of fields which records information about the volume of data transmitted, in bytes, in the uplink and downlink directions, the reason for closing the container, when the container is closed, and the location of the user equipment when this data transmission occurs.

This IE element is applicable for CDRs that are compliant with the 3GPP R7 and R99 release specifications, only.

- **lrsn**—The Local Record Sequence Number (LRSN) is a unique and sequential number generated by the network node (GGSN or P-GW) and is assigned to the CDRs for tracking any missing billing records.
- **ms-time-zone**—Mobile Station (MS) time zone.

This IE is added to the CDR, irrespective of whether or not you have configured it to be excluded, if the **ms-timezone-change** triggering event is enabled. See [exclude](#) to disable this triggering event.

This IE is applicable for CDRs that are compliant with the 3GPP R7 and R8 release specifications, only.

- **network-initiation**—This field, if present in the CDR, indicates that the PDP context is network initiated.

This information element is applicable for CDRs that are compliant with the 3GPP R7 and R99 release specifications, only.

- **node-id**—ID of the network element node that generates the CDR.

In the MX Series router, the node-id is *ggsn/pgw-ip-address:virtual-spic-id*.

- **pdn-connection-id**—This ID uniquely identifies different records belonging to the same Packet Data Network (PDN) connection. This field includes the charging ID of the first IP-CAN bearer activated within the PDN connection. Together with the P-GW address, it uniquely identifies the PDN connection.

This information element is applicable for CDRs that are compliant with the 3GPP R8 release specification, only.

- **pdppdn-type**—Both PDP Type and PDN Type define the end-user protocol used between the external PDN and the MS.

This information element is applicable for CDRs that are compliant with the 3GPP R8 release specification, only.

- **pgw-address-used**—Exclude the P-GW address-used IE from the CDR. This option is applicable only to the S-GW.

- **pgw-plmn-identifier**—P-GW PLMN identifier (mobile country code and mobile network code).

This information element is applicable for CDRs that are compliant with the 3GPP R8 and R99 release specifications, only.

- **rat-type**—The Radio Access Technology (RAT) type used by the MS: eUTRAN, GERAN, WLAN, GAN, HSPA Evolution, or evolved High Rate Packet Data (eHRPD).

This IE is added to the CDR, irrespective of whether or not you have configured it to be excluded, if the **rat-change** triggering event is enabled. See [exclude](#) to disable this triggering event.

This information element is applicable for CDRs that are compliant with the 3GPP R7 and R8 release specifications, only.

- **record-sequence-number**—A sequential number assigned to each partial CDR of a particular PDP context or IP-CAN bearer. This number is not assigned, if there is only one CDR generated during the lifetime of a subscriber.
- **served-imeisv**—The International Mobile Station Equipment Identity and Software Version Number (IMEISV) IE of the served mobile equipment (ME).
- **served-msisdn**—The MSISDN number of the served equipment.
- **served-pdppdn-address**—The served PDP context or IP-CAN bearer address IE.

- **serving-node-plmn-identifier**—The serving node (SGSN or S-GW) PLMN identifier (mobile country code and mobile network code).

This IE is added to the CDR, irrespective of whether or not you have configured it to be excluded, if the **plmn-change** triggering event is enabled. See [exclude](#) to disable this triggering event.

This information element is applicable for CDRs that are compliant with the 3GPP R8 release specification, only.

- **sgw-change**—Exclude the S-GW change IE from the CDR. This option is applicable only to the S-GW.
- **start-time**—Time when the IP-CAN session is established at the P-GW for the first bearer in this session.

This information element is applicable for CDRs that are compliant with the 3GPP R8 release specification, only.

- **stop-time**—Time when the user IP-CAN session is terminated for the last bearer in this session.

This information element is applicable for CDRs that are compliant with the 3GPP R8 release specification, only.

- **user-location-information**—The location of the user equipment during the service data container recording interval is excluded. If this IE is excluded from the container, then it is also excluded from the CDR.


This IE is added to the CDR, irrespective of whether or not you have configured it to be excluded, if the **user-location-change** triggering event is enabled. See [exclude](#) to disable this triggering event.

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [cdr-profiles on page 37](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging on page 13](#)

file-age

Syntax	<pre>file-age { age; disable; }</pre>
Hierarchy Level	[edit unified-edge gateways <i>ggsn-pgw gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. disable statement and support at the [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the duration, in minutes, after which the temporary Charging Data Record (CDR) log file is closed and moved to a final location within the same disk (<i>/opt/mobility/charging/ggsn/final_log</i>), from where it can be transferred using SSH FTP (SFTP).</p> <p>Files transferred from the final location should be deleted from the local Routing Engine disk after the transfer. Only authorized users can transfer and delete the files (after the transfer). However, any one of the following conditions (whichever comes first) must be met before the files are moved from the temporary location to the final location:</p> <ul style="list-style-type: none"> • The age of the file reaches the configured or default limit. • The size of the file reaches the configured or default limit. • The number of CDRs per file reaches the configured or default limit. <div style="margin-top: 20px;">  <p>NOTE: The default limit is applicable only if you have not configured any value.</p> </div>
Default	If you do not configure this statement, then the trigger based on file age is enabled by default.
Options	<p>age—Duration, in minutes, after which a CDR file is closed and moved to a final location within the Routing Engine disk, from where it can be transferred using SFTP.</p> <p>Range: 20 through 7200 minutes</p> <p>Default: 120 minutes</p> <p>disable—Disable the file age trigger.</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Persistent Storage on page 21](#)
 - [Configuring Charging on page 13](#)
 - [local-persistent-storage-options on page 76](#)

file-creation-policy

Syntax	file-creation-policy (shared-file unique-file);
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure whether Charging Data Records (CDRs) generated for a specific transport profile from all the services PICs should be routed to a single temporary file (shared-file option) or to multiple files, with each file storing CDRs generated from a single services PIC (unique-file configuration).
Default	If you do not include the file-creation-policy statement, CDRs from all the services PICs are routed to a single temporary file (shared-file option)
Options	<p>shared-file—CDRs are routed to the files based on the file-routing criteria of the transport profile. In this configuration, all the CDRs generated for a specific transport profile from all the services PICs are routed to a single CDR temporary file. When a file trigger, such as file size, file age, or CDR count, triggers temporary file closure, the files are moved to the final CDR location (<code>/opt/mobility/charging/ggsn/final_log</code>). This is the default.</p> <p>unique-file—CDRs are routed to the files based on the file routing criteria of the transport profile. In this configuration, all the CDRs generated for a specific transport profile from each services PIC are routed to a separate CDR temporary file. When a file trigger, such as file size, file age, or CDR count, triggers temporary file closure, the files are moved to a final CDR location (<code>/opt/mobility/charging/ggsn/final_log</code>).</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • local-persistent-storage-options on page 76 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

file-format

Syntax	file-format (3gpp raw-asn);
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify the file format for Charging Data Records (CDRs) stored in the CDR log files.
Default	If you do not include the file-format statement, the CDRs are stored in a format compliant with the 3GPP 32297 technical specification release (3gpp option).
Options	3gpp —CDRs are stored in a format that is compliant with the 3GPP 32297 technical specification release. raw-asn —CDRs are stored in raw Abstract Syntax Notation One (ASN.1) format.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• local-persistent-storage-options on page 76• Configuring Persistent Storage on page 21• Configuring Charging on page 13

file-name-private-extension

Syntax	<code>file-name-private-extension <i>string</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify a private extension (string) that is appended to the filenames.



NOTE: The filenaming format is as follows, which is compliant with the Third-Generation Partnership Project (3GPP) 32.297 technical release specification:


NodeID_-RC.date_-_time[.PI][.FE]

- **NodeID**—Name of the host that generated the file (*Host_Name_Gateway_Name*).
- **RC**—A running counter, starting at 1.
- **date**—Date when the CDR file was closed in YYYYMMDD (year, month, day) format.
- **time**—Time when the CDR file was closed in HHMMshhmm format.
 - *HHMM* indicates the local time (hours and minutes) in a 24-hour format.
 - *s* indicates the sign of the local time differential from the UTC (+ or -). If the time differential to the UTC is 0, then the sign can be arbitrarily set to + or -.
 - *hhmm* indicates the time differential (hours and minutes) from the UTC.
- **PI**—Optional private extension.
- **FE**—Optional file extension.

Options	<i>string</i> —Private extension. Values: 1 through 16 bytes
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • local-persistent-storage-options on page 76

- [Configuring Persistent Storage on page 21](#)
- [Configuring Charging on page 13](#)

file-size

Syntax	<pre>file-size { size; disable; }</pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W. disable statement and support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure maximum size that the file can reach, in MB, after which the temporary Charging Data Record (CDR) log file is closed and moved to a final location within the same disk (/opt/mobility/charging/ggsn/final_log), from where it can be transferred using SSH FTP (SFTP).</p> <p>Files transferred from the final location should be deleted from the local Routing Engine disk after the transfer. Only authorized users can transfer and delete the files (after the transfer). However, any one of the following conditions (whichever comes first) must be met before the files are moved from the temporary location to the final location:</p> <ul style="list-style-type: none"> • Size of the file reaches the configured or default limit. • Age of the file reaches the configured or default limit. • Number of CDRs per file reaches the configured or default limit. <div style="margin-top: 20px;">  <p>NOTE: The default limit is applicable only if you have not configured any value.</p> </div>
Default	<p>If you do not configure this statement, then the trigger based on file size is enabled by default.</p>
Options	<p>value—Maximum size that the CDR file can reach, in MB, after which it is closed and moved to a final location within the Routing Engine disk, from where it can be transferred using SFTP.</p> <p>Range: 1 MB to 1024 MB</p> <p>Default: 10 MB</p> <p>disable—Disable the file size trigger.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Configuring Persistent Storage on page 21](#)
 - [Configuring Charging on page 13](#)
 - [local-persistent-storage-options on page 76](#)

global-profile (Serving Gateway)

Syntax `global-profile {
 default-profile default-profile;
 home-profile home-profile;
 profile-selection-order [profile-selection-method];
 roamer-profile roamer-profile;
 visitor-profile visitor-profile;
 }`

Hierarchy Level [edit unified-edge gateways sgw *gateway-name* charging]

Description Configure the global (charging) profiles that will be applicable for the Serving Gateway (S-GW). This is a mandatory configuration if you want to enable charging on the S-GW. Configuring the **profile-selection-order** statement is mandatory if the **global-profile** statement is configured.

The S-GW determines the type of subscriber by using the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE) and compares these with the corresponding values configured for the home public land mobile network (HPLMN). Depending on whether a subscriber is a home subscriber, a visitor, or a roamer, the **home-profile**, **visitor-profile**, or **roamer-profile** is applied. If the applicable profile is not configured, then the **default-profile**, if configured, is applied. If **default-profile** is also not configured, then the subscriber session is created with no charging applied.

The remaining statements are explained separately.

Required Privilege Level unified-edge—To view this statement in the configuration.
 unified-edge-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
 - [charging on page 40](#)

gtp

Syntax	<pre> gtp { destination-port <i>port-number</i>; down-detect-time <i>duration</i>; echo-interval <i>duration</i>; header-type (long short); n3-requests <i>requests</i>; no-path-management; pending-queue-size <i>value</i>; peer <i>peer-name</i> { destination-ipv4-address <i>address</i>; destination-port <i>port-number</i>; down-detect-time <i>duration</i>; echo-interval <i>duration</i>; header-type (long short); n3-requests <i>requests</i>; no-path-management; pending-queue-size <i>value</i>; reconnect-time <i>duration</i>; source-interface <i>interface-name</i> [ipv4-address <i>address</i>]; t3-response <i>response-interval</i>; transport-protocol (tcp udp); version (v0 v1 v2); } reconnect-time <i>duration</i>; source-interface { <i>interface-name</i>; [ipv4-address <i>address</i>; } t3-response <i>response-interval</i>; transport-protocol (tcp udp); version (v0 v1 v2); } </pre>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>The statements in this hierarchy enable you to set global as well as unique configurations for the general packet radio service (GPRS) tunneling protocol Prime (GTP Prime) peers (Charging Gateway Function [CGF] servers). If no separate configuration is defined for a peer, then the global configurations apply for that peer.</p> <p>The charging data function (CDF) sends the Charging Data Records (CDRs) as GTP Prime messages to the GTP Prime peer, based on this configuration.</p> <p>The remaining statements are explained separately.</p>

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [charging on page 40](#)
- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring GTP Prime Peers on page 20](#)
- [Configuring Charging on page 13](#)

header-type (GTP Prime)

Syntax header-type (long | short);

Hierarchy Level [edit unified-edge gateways ggsn-pgw *gateway-name* charging gtp],
[edit unified-edge gateways ggsn-pgw *gateway-name* charging gtp peer *peer-name*],
[edit unified-edge gateways sgw *gateway-name* charging gtp],
[edit unified-edge gateways sgw *gateway-name* charging gtp peer *peer-name*]

Release Information Statement introduced in Junos OS Mobility Release 11.2W.
Support at the [edit unified-edge gateways sgw *gateway-name* charging gtp] and [edit unified-edge gateways sgw *gateway-name* charging gtp peer *peer-name*] hierarchy levels introduced in Junos OS Mobility Release 11.4W.

Description Configure the charging data function (CDF) GTP Prime message header length to match the version supported on the charging gateway function (CGF) server, which can be set to either short (6 bytes) or long (20 bytes). The **long** format is supported only in GTP Prime version 0. GTP Prime versions 1 and 2 support the **short** header length only.

When there are global-level and peer-level configurations, the peer-level configuration takes precedence.

Options **long**—CDF GTP Prime message header length is set to 20 bytes.
short—CDF GTP Prime message header length is set to 6 bytes.

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [gtp on page 73](#)
- [peer \(GTP Prime\) on page 83](#)
- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring GTP Prime Peers on page 20](#)
- [Configuring Charging on page 13](#)

home-profile

Syntax	<code>home-profile <i>home-profile</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> apn-services apns <i>name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify the profile that should be used to charge home subscribers. If the profile-selection-order configuration indicates static , then this profile is used for home subscribers.



NOTE: The charging profile must already be configured on the broadband gateway.

The broadband gateway determines whether the subscriber is a home subscriber by using the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE). If the subscriber's International Mobile Subscriber Identity (IMSI), MCC, and MNC belong to the same PLMN to which both the GGSN or P-GW and the S-GW belong, then the subscriber is deemed a home subscriber and the **home-profile** is applied. If the **home-profile** is not configured, then the **default-profile**, if configured, is applied. If the **default-profile** is also not configured, then the subscriber session is created with no charging applied.

Options	<i>home-profile</i> —Name of the home profile.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Charging and Local Policy Profiles on a Broadband Gateway APN Configuring S-GW Global Charging Profiles and Selection Order on page 17 charging (APN) charging-profiles on page 45 global-profile (Serving Gateway) on page 72

local-persistent-storage-options

```
Syntax  local-persistent-storage-options {
        cdrs-per-file value;
        disable-replication;
        disk-space-policy {
            watermark-level-1 {
                notification-level (both | snmp-alarm | syslog);
                percentage value;
            }
            watermark-level-2 {
                notification-level (both | snmp-alarm | syslog);
                percentage value;
            }
            watermark-level-3 {
                notification-level (both | snmp-alarm | syslog);
                percentage value;
            }
        }
        file-age {
            age;
            disable;
        }
        file-creation-policy (shared-file | unique-file);
        file-format (3gpp | raw-asn);
        file-name-private-extension string;
        file-size {
            size;
            disable;
        }
        traceoptions {
            file file-name <files number> <match regular-expression> <no-world-readable |
                world-readable> <size size> ;
            flag flag;
            level (all | critical | error | info | notice | verbose | warning);
            no-remote-trace;
        }
        user-name string;
        world-readable;
    }
```

Hierarchy Level [edit unified-edge gateways ggsn-pgw *gateway-name* charging],
[edit unified-edge gateways sgw *gateway-name* charging]

Release Information Statement introduced in Junos OS Mobility Release 11.2W.
Support at the [edit unified-edge gateways sgw *gateway-name* charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.

Description Configure the Charging Data Record (CDR) file storage options, which are measures to prevent loss of the CDR data.

You typically store the CDRs on the local Routing Engine disk when you do not have any external charging gateway function (CGF) servers configured to store them or when all the CGF servers are down.

When you choose to store the CDRs locally, the CDRs generated by the services PICs are routed to a file on the Routing Engine disk. Some of the options that can be configured include the following:

- Action to be taken when the disk space falls below the configured watermark level.
- Restricting access to the files to a specific user.
- File routing criteria—CDRs are routed to the files based on the file-routing criteria of the transport profile. Therefore, all CDRs generated for a given transport profile are saved in a specific CDR log file.

The remaining statements are explained separately.

Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • charging on page 40 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

local-storage

Syntax	local-storage;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways persistent-storage-order], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways persistent-storage-order]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways persistent-storage-order] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure the Routing Engine disk as backup storage for the Charging Data Records (CDRs) when the external storage resources (charging gateway function [CGF] servers) are down or if no external servers are configured.
Default	If you do not include the local-storage statement, the backup storage is disabled.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • persistent-storage-order on page 87 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

mtu (Transport Profiles)

Syntax	<code>mtu value;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the maximum transmission unit (MTU) for a Data Record Transfer (DRT) message, which represents the maximum size in bytes that a DRT message can reach before it is transmitted.</p> <p>A DRT message containing the Charging Data Records (CDRs) is transmitted from the charging data function (CDF) to the charging gateway function (CGF) server, when the cdr-aggregation-limit or the mtu size is reached (whichever comes first).</p>
Options	<p>value—Maximum size, in bytes, for a DRT message.</p> <p>Range: 300 through 8000 bytes</p> <p>Default: 1500 bytes</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• charging-gateways on page 44• Configuring Transport Profiles on page 25• Configuring Charging on page 13

n3-requests (GTP Prime)

Syntax	<code>n3-requests <i>requests</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the maximum number of times the charging data function (CDF) attempts to send echo request messages to the charging gateway function (CGF) server, after which the CDF waits for a configured duration (see down-detect-time) for any response before declaring the server as Down.</p> <p>The broadband gateway retransmits the requests to the UDP peers. However, for the TCP peers, the requests are retransmitted to a newer peer (when there is a switchover) or to the same peer (when it becomes alive after being Down).</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p><i>requests</i>—Number of times that the CDF attempts to send a request to a CGF server after which the CDF waits for a configured duration (see down-detect-time) before declaring the server as Down.</p> <p>Range: 1 through 5</p> <p>Default: 3</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer (GTP Prime) on page 83 • Configuring GTP Prime for Charging on page 19 • Configuring GTP Prime Peers on page 20 • Configuring Charging on page 13

no-path-management (GTP Prime)

Syntax	no-path-management;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	Use this statement to disable path management messages. If this statement is configured, no echo messages are sent. However, the router responds to any echo messages that are received.



NOTE:

- Path management refers to the exchange of echo messages between charging data function (CDF) and charging gateway function (CGF) servers (GTP Prime peers) to find out whether a CGF server is alive to process the GTP Prime messages sent from the CDF.
- Echo messages are sent only for UDP connections.

When there are global-level and peer-level configurations, the peer-level configuration takes precedence.

Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer (GTP Prime) on page 83 • Configuring GTP Prime for Charging on page 19 • Configuring GTP Prime Peers on page 20 • Configuring Charging on page 13
------------------------------	---

offline (Transport Profiles)

Syntax	<pre> offline { charging-gateways { cdr-aggregation-limit <i>value</i>; cdr-release (r7 r8 r99); mtu <i>value</i>; peer-order { [<i>peer charging-gateway-peer-name</i>]; } persistent-storage-order { local-storage; } switch-back-time <i>seconds</i>; } } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the transport parameters for offline charging records, such as:</p> <ul style="list-style-type: none"> • The charging gateway peers that store the CDRs. • The maximum Charging Data Records (CDRs) that can be added to a Data Record Transfer (DRT) message. • The maximum transmission unit of a DRT message. • The generated CDRs to be compliant with a specific 3GPP release. • The duration that the charging data function (CDF) waits before transmitting the CDRs to a peer that has recently come up and has the highest priority among all the peers, which are alive. • Whether to use the local Routing Engine disk for CDR storage. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • transport-profiles on page 108 • Configuring Transport Profiles on page 25 • Configuring Charging on page 13

offline (Trigger Profiles)

Syntax	<pre> offline { container-limit value; exclude { ms-timezone-change; plmn-change; qos-change; rat-change; sgsn-mme-change; #S-GW only sgsn-sgw-change; #P-GW only user-location-change; } sgsn-mme-change-limit value; #S-GW only sgsn-sgw-change-limit value; #P-GW only time-limit value; volume-limit { value; direction (both uplink); } } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the attributes that trigger charging updates for offline charging records.</p> <p>For example, you can set the maximum duration that the Charging Data Record (CDR) can remain open (time-limit), maximum volume of data that can be transmitted before closing a CDR (volume-limit), maximum number of containers that can be added to a CDR, or maximum number of Serving Gateway (S-GW) or serving GPRS support node (SGSN) changes that can occur before the CDR is updated and closed.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • trigger-profiles on page 111 • Configuring Charging Trigger Events on page 26 • Configuring Charging on page 13


peer (GTP Prime)

Syntax	<pre> peer <i>peer-name</i> { destination-ipv4-address <i>address</i>; destination-port <i>port-number</i>; down-detect-time <i>duration</i>; echo-interval <i>duration</i>; header-type (long short); n3-requests <i>requests</i>; no-path-management; pending-queue-size <i>value</i>; reconnect-time <i>duration</i>; source-interface { interface-name; ipv4-address <i>address</i>; } t3-response <i>response-interval</i>; transport-protocol (tcp udp); version (v0 v1 v2); } </pre>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure GTP Prime peers (charging gateway function [CGF] servers). You can configure up to a maximum of 24 peers. The charging data function (CDF) sends the Charging Data Records (CDRs) as GTP Prime messages to the GTP Prime peer, based on this configuration.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • Configuring GTP Prime Peers on page 20 • Configuring GTP Prime for Charging on page 19 • Configuring Charging on page 13

peer (Peer Order)

Syntax	<code>peer charging-gateway-peer-name;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways peer-order], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways peer-order]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways peer-order] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the name of the charging gateway peer. However, make sure the peer that you specify here is previously configured for its IP address, name, and so on, using one of the following statements, as applicable. Otherwise, you will encounter a configuration error.</p> <ul style="list-style-type: none">• <code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer</code> for the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW).• <code>set unified-edge gateways sgw <i>gateway-name</i> charging gtp peer</code> for the Serving Gateway (S-GW).
Options	<i>charging-gateway-peer-name</i> —Name of the charging gateway server.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• peer-order on page 85• Configuring GTP Prime Peers on page 20• Configuring GTP Prime for Charging on page 19• Configuring Charging on page 13

peer-order

Syntax	<pre>peer-order { [peer charging-gateway-peer-name]; }</pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the charging gateway function (CGF) servers. You can configure up to a maximum of three servers for a transport profile.</p> <p>When multiple CGF servers are available for storing Charging Data Records (CDRs), the charging data function (CDF) needs to identify the server to which to route the CDRs first. The peer order determines this hierarchy using which the CDF tries to send the CDRs to the server that comes first in this order. The peer that comes first in the order is treated as the highest-priority peer. At any given time, CDRs are sent to only one of the peers and not to all. If for any reason the first server goes down, the CDF tries to send the CDRs to the server that comes next in the order. However, if a higher-priority peer comes up, the CDRs are sent to this peer after a waiting period determined by the switch-back-time configuration.</p> <p>When required, the priority of any peer can be changed by using the configuration option to insert before or insert after the existing peers.</p> <div style="margin-top: 20px;">  <p>NOTE: If all the peers are Down and if you have configured the Routing Engine disk as the backup storage option, then the CDRs are routed to the Routing Engine disk. However, if one or multiple peers come alive, then CDF waits for the configured switch-back-time duration and routes the CDRs to the highest priority peer that is alive after this duration. The CDRs that were getting stored previously on the Routing Engine disk are not routed to the charging gateway (peer) and remain on the disk. You need to transfer the CDRs using SSS FTP (SFTP) from the following location on the disk: /opt/mobility/charging/ggsn/final_log.</p> </div> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>

- Related Documentation**
- [charging-gateways on page 44](#)
 - [Configuring GTP Prime Peers on page 20](#)
 - [Configuring GTP Prime for Charging on page 19](#)
 - [Configuring Charging on page 13](#)


pending-queue-size (GTP Prime)

Syntax	<code>pending-queue-size <i>value</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the maximum number of Data Record Transfer (DRT) messages that can be sent by the charging data function (CDF) without an acknowledgement from the charging gateway function (CGF) server. When the limit is reached, CDF stops sending the messages to that CGF server.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p>value—Maximum number of DRT messages that can be queued without an acknowledgement from the CGF server.</p> <p>Range: 1 through 4096</p> <p>Default: 1024</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• gtp on page 73• peer (GTP Prime) on page 83• Configuring GTP Prime Peers on page 20• Configuring GTP Prime for Charging on page 19• Configuring Charging on page 13


persistent-storage-order

Syntax	<pre>persistent-storage-order { local-storage; }</pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the local storage of Charging Data Records (CDRs). You may want to store the CDRs on the local Routing Engine disk for one of the following reasons:</p> <ul style="list-style-type: none"> • When there are no charging gateway peers configured for a transport profile • When none of the primary, secondary, or tertiary charging gateway peers can be reached (that is, when they are down) <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging-gateways on page 44 • Configuring Transport Profiles on page 25 • Configuring Charging on page 13

profile-id

Syntax	<code>profile-id <i>id-num</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure a unique identifier to be associated with a charging profile. It can range from 1 through 255. This is a mandatory configuration.</p> <p>Based on the user subscription, the Serving Gateway (S-GW), serving GPRS support node (SGSN), or RADIUS server returns the charging profile (identified by the profile ID) that must be used for charging the mobile subscriber. If more than one server returns a profile ID, then the profile selection order configuration determines which server's profile ID must be given higher priority. This profile ID is then matched with the profile-id that you have configured to choose the correct charging profile for that subscriber. However, if a server returns an incorrect or unconfigured charging profile ID, the profile ID returned by the server, which is next in priority, is taken into consideration. If none of the profile IDs match, then charging is disabled for the customer.</p>
	<div>  <p>NOTE: The RADIUS server returns the profile-id as a four-byte hexadecimal value in the access accept message.</p> </div>
Options	<p><i>id-num</i>—A unique number to be associated with a charging profile.</p> <p>Range: 1 through 65534</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging-profiles on page 45 • Configuring Charging Profiles on page 30 • Charging Profiles on page 9 • Configuring Charging on page 13

profile-selection-order (Serving Gateway)

Syntax	<code>profile-selection-order [<i>profile-selection-method</i>];</code>
Hierarchy Level	[edit unified-edge gateways <i>sgw gateway-name</i> charging global-profile]
Release Information	Statement introduced in Junos OS Mobility Release 11.4W.
Description	<p>Specify the order of the methods used to select a charging profile applicable for a subscriber's session on the Serving Gateway (S-GW). You can specify a maximum of three profile selection methods: static, serving, or pgw-cg-addr. If the first choice is not available, then the next choice is considered, and so on.</p> <p>For example, consider a scenario where the profile selection order is static, serving, and pgw-cg-addr. Since static is the first choice, the global (charging) profiles specified are used. If the global profiles are not configured, then the next choice (serving) is considered. If the serving GPRS support node (SGSN) or S-GW does not provide a charging profile ID in the charging characteristics information element (IE) within the GPRS tunneling protocol (GTP) Create Session message, then the next choice (pgw-cg-addr) is considered. With the pgw-cg-addr option, the charging profile is selected based on the IP address of the charging gateway (CG) for the P-GW.</p>
	<div>  <p>NOTE: If the charging profile cannot be selected by any of the methods specified, then charging is disabled for that subscriber.</p> </div>
Options	<p><i>profile-selection-method</i>—One or more profile selection methods, listed in the order in which they should be tried. The method can be one or more of the following:</p> <ul style="list-style-type: none"> • pgw-cg-addr—Use the charging profile based on the on the IP address of the CG for the P-GW. • serving—Use the charging profile sent by the SGSN or the Serving Gateway (S-GW). • static—Use the charging profile configured locally for the S-GW.
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring S-GW Global Charging Profiles and Selection Order on page 17 • global-profile (Serving Gateway) on page 72

reconnect-time (GTP Prime)

Syntax	<code>reconnect-time <i>duration</i>;</code>
Hierarchy Level	<code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>],</code> <code>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>],</code> <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>]</code>
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>]</code> and <code>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtppeer <i>peer-name</i>]</code> hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the duration (in seconds) that the charging data function (CDF) must wait before trying to reconnect to a charging gateway function (CGF) server that was marked Down earlier.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p><i>duration</i>—Duration after which the CDF tries to reconnect to a CGF server that was previously down.</p> <p>Range: 60 through 255 seconds. Enter 0 if you do not want to attempt to reconnect to a peer.</p> <p>Default: 60 seconds</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• gtppeer on page 73• peer (GTP Prime) on page 83• Configuring GTP Prime Peers on page 20• Configuring GTP Prime for Charging on page 19• Configuring Charging on page 13

roamer-profile

Syntax	<code>roamer-profile <i>roamer-profile</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> apn-services apns <i>name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure the profile that should be used to charge roaming subscribers. If the profile-selection-order configuration indicates static , then this profile is used for roaming subscribers.



NOTE: The charging profile must already be configured on the broadband gateway.

The broadband gateway determines whether the subscriber is a roamer by using the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE). If the subscriber's International Mobile Subscriber Identity (IMSI), MCC, and MNC belong to the same PLMN as the GGSN or P-GW, but the S-GW belongs to a different PLMN, then the subscriber is deemed a roamer and the **roamer-profile** is applied. If the **roamer-profile** is not configured, then the **default-profile**, if configured, is applied. If the **default-profile** is also not configured, then the subscriber session is created with no charging applied.

Options	<i>roamer-profile</i> —Name of the roamer profile.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Charging and Local Policy Profiles on a Broadband Gateway APN Configuring S-GW Global Charging Profiles and Selection Order on page 17 charging (APN) charging-profiles on page 45 global-profile (Serving Gateway) on page 72

service-mode (Charging Profiles)

Syntax	service-mode maintenance;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Place the respective charging profile under maintenance mode.</p> <p>When you have to make the following changes to the existing charging profile configuration, you must put the charging profile in maintenance mode:</p> <ul style="list-style-type: none">• Change the CDR profile, transport profile, or the trigger profile associated with this charging profile• Change the profile ID configuration• Delete the charging profile <p>In maintenance mode, no new subscribers are accepted for that charging profile. However, maintenance mode does not become active until no existing subscriber sessions are using that charging profile and all the corresponding CDRs have been flushed out. Unless the maintenance mode becomes active, you cannot modify the above-mentioned charging profile attributes or delete the charging profile. Use the following commands to help you with maintenance mode tasks:</p> <ul style="list-style-type: none">• To verify that the charging profile has entered active maintenance mode, use one of the following commands, as applicable:<ul style="list-style-type: none">• For the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW)—show unified-edge ggsn-pgw charging service-mode gateway <i>gateway-name</i> charging-profile <i>profile-name</i>• For the Serving Gateway (S-GW)—show unified-edge sgw charging service-mode gateway <i>gateway-name</i> charging-profile <i>profile-name</i>• To verify that the subscriber count has reached zero, use one of the following commands, as applicable:<ul style="list-style-type: none">• For the GGSN or P-GW—show unified-edge ggsn-pgw subscribers charging charging-profile <i>profile-name</i> gateway <i>gateway-name</i>• For the S-GW—show unified-edge sgw subscribers charging charging-profile <i>profile-name</i> gateway <i>gateway-name</i>• To verify that all CDRs for the transport profile referred to by this charging profile have been flushed out, use one of the following commands, as applicable:

- For the GGSN or P-GW—**show unified-edge ggsn-pgw charging transfer status transport-profile-name *profile-name***
- For the S-GW—**show unified-edge sgw charging transfer status transport-profile-name *profile-name***
- To explicitly end any subscriber sessions, use one of the following commands, as applicable:
 - For the GGSN or P-GW—**clear unified-edge ggsn-pgw subscribers charging charging-profile *profile-name* gateway *gateway-name***
 - For the S-GW—**clear unified-edge sgw subscribers charging charging-profile *profile-name* gateway *gateway-name***
- To explicitly flush all the CDRs for the transport profile referred to by this charging profile, use the one of the following commands, as applicable:
 - For the GGSN or P-GW—**clear unified-edge ggsn-pgw charging cdr transport-profile-name *profile-name* gateway-name *name***
 - For the S-GW—**clear unified-edge sgw charging cdr transport-profile-name *profile-name* gateway-name *name***

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [charging-profiles on page 45](#)
- Changing a Charging Profile
- Mobility Maintenance Mode Overview

service-mode (Transport Profiles)

Syntax	service-mode maintenance;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Place the respective transport profile under maintenance mode.</p> <p>To make the following changes to the existing transport profile configuration, you must put that transport profile in maintenance mode:</p> <ul style="list-style-type: none"> • Change the CDR encoding format to comply with a different 3GPP technical specification release (that is, changing the cdr-release configuration) • Delete the transport profile <p>In maintenance mode, no new subscribers are accepted for that transport profile. However, the maintenance mode does not become active until no existing subscriber sessions are using that transport profile and all corresponding CDRs have been flushed out. Unless the maintenance mode becomes active, you cannot modify the above-mentioned transport profile attributes or delete the transport profile. Use the following commands to help you with the maintenance mode tasks:</p> <ul style="list-style-type: none"> • To verify that the transport profile has entered active maintenance mode, use one of the following commands, as applicable: <ul style="list-style-type: none"> • For the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW)—show unified-edge ggsn-pgw charging service-mode gateway <i>gateway-name</i> transport-profile <i>profile-name</i> • For the Serving Gateway (S-GW)—show unified-edge sgw charging service-mode gateway <i>gateway-name</i> transport-profile <i>profile-name</i> • To verify that the subscriber count has reached zero, use one of the following commands, as applicable: <ul style="list-style-type: none"> • For the GGSN or P-GW—show unified-edge ggsn-pgw subscribers charging transport-profile <i>profile-name</i> gateway <i>gateway-name</i> • For the S-GW—show unified-edge sgw subscribers charging transport-profile <i>profile-name</i> gateway <i>gateway-name</i> • To verify that all CDRs for the transport profile have been flushed out, use one of the following commands, as applicable: <ul style="list-style-type: none"> • For the GGSN or P-GW—show unified-edge ggsn-pgw charging transfer status transport-profile-name <i>profile-name</i>

- For the S-GW—**show unified-edge sgw charging transfer status transport-profile-name *profile-name***
- To explicitly end any subscriber sessions, use one of the following commands, as applicable:
 - For the GGSN or P-GW—**clear unified-edge ggsn-pgw subscribers charging transport-profile *profile-name* gateway *gateway-name***
 - For the S-GW—**clear unified-edge sgw subscribers charging transport-profile *profile-name* gateway *gateway-name***
- To explicitly flush all the CDRs for the transport profile, use one of the following commands, as applicable:
 - For the GGSN or P-GW—**clear unified-edge ggsn-pgw charging cdr transport-profile-name *profile-name***
 - For the S-GW—**clear unified-edge sgw charging cdr transport-profile-name *profile-name***

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [transport-profiles on page 108](#)
- Changing a Transport Profile
- Mobility Maintenance Mode Overview

sgsn-mme-change-limit (Serving Gateway)

Syntax `sgsn-mme-change-limit value;`

Hierarchy Level [edit unified-edge gateways sgw *gateway-name* charging trigger-profiles *profile-name* offline]

Release Information Statement introduced in Junos OS Mobility Release 11.4W.

Description Configure the maximum number of serving GPRS support node (SGSN) or Mobility Management Entity (MME) changes that can occur before the Charging Data Record (CDR) is updated and closed.

Options *value*—Maximum number of SGSN or MME changes.
Range: 1 through 5.
Default: 4

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [offline on page 82](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring Charging on page 13](#)

source-interface (GTP Prime)

Syntax	<pre>source-interface { interface-name; ipv4-address address; }</pre>
Hierarchy Level	<pre>[edit unified-edge gateways ggsn-pgw gateway-name charging gtp], [edit unified-edge gateways ggsn-pgw gateway-name charging gtp peer peer-name], [edit unified-edge gateways sgw gateway-name charging gtp], [edit unified-edge gateways sgw gateway-name charging gtp peer peer-name]</pre>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the <code>[edit unified-edge gateways sgw gateway-name charging gtp]</code> and <code>[edit unified-edge gateways sgw gateway-name charging gtp peer peer-name]</code> hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the name of the local loopback interface and its IPv4 address as the source interface from which the GTP Prime packets are sent to the charging gateway function (CGF) servers. This is a mandatory configuration. However, before specifying this configuration, make sure that the interface has been previously defined.</p> <p>The following is a sample configuration:</p> <pre>gtp { source-interface { lo0.0; ipv4-address 10.10.10.10; } }</pre> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p>address—IPv4 address of the local loopback interface from which the GTP Prime packets are sent. This is a mandatory configuration.</p> <p>interface-name—Name of the local loopback interface from which the GTP Prime packets are sent. This is a mandatory configuration.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer (GTP Prime) on page 83 • Configuring GTP Prime for Charging on page 19 • Configuring GTP Prime Peers on page 20 • Configuring Charging on page 13

switch-back-time

Syntax	<code>switch-back-time seconds;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways], [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i> offline charging-gateways] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	The charging data function (CDF) transmits Charging Data Records (CDRs) to the highest-priority peer. The priority is determined by the peer-order configuration. If for any reason the highest-priority peer goes down, the CDF transmits the CDRs to the next high-priority peer and so on. If none of the peers are up, then the CDRs are transmitted to the local Routing Engine disk, if it is configured. During this transmission, it is possible that a peer or a peer that is higher in priority might come up. Instead of immediately switching over the transmission of the CDRs to the peer that recently came up, you can configure the duration that the CDF must wait to transmit the CDRs to the highest-priority peer that becomes available after this duration.



NOTE: If all the peers are down, in order not to lose any CDR data, you might want to configure the local storage on the Routing Engine disk using the following statement:

- `set unified-edge gateways ggsn-pgw gateway-name charging transport-profiles profile-name offline charging-gateways persistent-storage-order local-storage` for the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW).
- `set unified-edge gateways sgw gateway-name charging transport-profiles profile-name offline charging-gateways persistent-storage-order local-storage` for the Serving Gateway (S-GW).

However, even if the Routing Engine disk is not configured for storage, the CDR data is not lost because it gets buffered in the services PICs. Services PICs can buffer up to a maximum of 2 GB of data, after which a call admission control (CAC) is triggered.

In the meantime, if one or multiple peers come alive, then CDF waits for the configured `switch-back-time` duration and routes the CDRs to the highest-priority peer that is alive after this duration. The CDRs that were stored previously on the Routing Engine disk are not routed to the charging gateway (peer) and remain on the disk. You need to transfer the CDRs using SSH FTP (SFTP) from the following location on the disk:

`/opt/mobility/charging/ggsn/final_log.`

Options	seconds —Time, in seconds, CDF waits before transmitting the CDRs to the highest-priority peer. Range: 0 through 300 seconds Default: 30 seconds
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• charging-gateways on page 44• Configuring Transport Profiles on page 25• Configuring Charging on page 13

t3-response (GTP Prime)

Syntax	t3-response <i>response-interval</i> ;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp], [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.
Description	Configure the duration (in seconds) that the charging data function (CDF) must wait before resending a GTP Prime message when the response to a request has not been received. When there are global-level and peer-level configurations, the peer-level configuration takes precedence.
Options	response-interval —Time that the CDF waits before resending a GTP Prime message when the response to a request has not been received. Range: 1 through 5 seconds Default: 5 seconds
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• gtp on page 73• peer (GTP Prime) on page 83• Configuring GTP Prime for Charging on page 19• Configuring GTP Prime Peers on page 20• Configuring Charging on page 13


tariff-time-list

Syntax	<code>tariff-time-list { [<i>tariff-time</i>]; }</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure a list of local times (in hh:mm format) at which the tariff changes and Charging Data Records (CDRs) are generated to reflect the change in tariff. Because you can configure multiple values, make sure that there is a difference of at least 15 minutes between these values. You can configure up to a maximum of 24 values.</p> <p>Any change to the existing configuration applies to both existing and new subscriber sessions.</p>
Options	<i>tariff-time</i> —Local time at which to generate a CDR, in hh:mm format, when the tariff changes.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • trigger-profiles on page 111 • Configuring Charging Trigger Events on page 26 • Configuring Charging on page 13

time-limit

Syntax	<code>time-limit <i>value</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline], [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the duration, in seconds, (since the previous trigger) after which the Charging Data Record (CDR) is updated with the uplink and downlink bytes transmitted in this duration and is closed. For example, if the duration is set to 3600 seconds, then the total resource utilization for the past hour is added to the CDR and the CDR is closed.</p> <p>Any change to the existing configuration does not affect a previously established session. The updated configuration applies only to new sessions.</p>
Options	<p>value—Duration in seconds.</p> <p>Range: 600 through 65,535 seconds</p> <p>Default: 0, indicates that no time limit is set.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• offline on page 82• Configuring Charging Trigger Events on page 26• Configuring Charging on page 13

traceoptions (Charging)

Syntax	<pre> traceoptions { file <i>file-name</i> <files <i>number</i>> <no-world-readable world-readable> <size <i>size</i>>; flag <i>flag</i>; level (all critical error info notice verbose warning); no-remote-trace; } </pre>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W.
Description	Specify tracing options for charging.
Options	<p>file <i>file-name</i>—Name of the file to receive the output of the tracing operation. The router appends -msfpc#pic# to the filename and places the file in the /var/log directory. For example, if you configured the filename as smd, then the actual log filename on the router is smd-ms50, where ms stands for multiservices card, and 5 and 0 are the FPC and PIC slot numbers.</p> <p>Range: 1 through 1024 bytes</p> <p>files <i>number</i>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>Range: 2 through 1000 files</p> <p>Default: 3 files</p> <p>flag <i>flag</i>—Specify which operations are to be traced. To specify more than one operation, include multiple flag statements.</p>
	<div>  <p>CAUTION: You might want to enable traceoptions only when you want to debug specific charging operations. Enabling the traceoption flags might have an impact on the system performance.</p> </div>
	<ul style="list-style-type: none"> • all—Trace all operations of all charging submodules. • cdr-encoding—Trace ASN1 encoding of the CDRs. • client-fsm—Trace the charging-specific finite state machine (FSM) in the application framework (mobile-smd). • config—Trace configuration events on both daemons (chargemand and mobile-smd). • fsm—Trace FSM. • general—Trace general events that do not fit in any specific traces, such as errors in chargemand.

- **group-fsm**—Trace the transport-profile FSM in chargemand.
- **init**—Trace initialization events.
- **ipc**—Trace the interprocess communication (IPC) messages between mobile-smd and chargemand.
- **path-management**—Trace path management operations within the path manager module within chargemand.
- **request**—This flag is currently disabled.
- **resource**—Trace resources, such as memory, counters, and so on.
- **response**—This flag is currently disabled.
- **timers**—Trace resources associated with timer processing.
- **transport**—Trace transport-profile-level operations in chargemand.
- **triggers**—Trace trigger-profile-related operations used by the mobile-smd charging module.

level—Level of tracing to perform. You can specify any of the following levels:

- **all**—Match all levels.
- **critical**—Match error conditions.
- **error**—Match error conditions.
- **info**—Match informational messages.
- **notice**—Match conditions that must be handled specially.
- **verbose**—Match verbose messages.
- **warning**—Match warning messages.

no-remote-trace—(Optional) Disable remote tracing.

no-world-readable—(Optional) Disable unrestricted file access.

size size—(Optional) Maximum size of each trace file, in kilobytes (KB) or megabytes (MB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the trace-file again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum number of files, you must also specify a maximum file size with the size option.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB.

Range: 10,240 through 1,073,741,824 bytes

Default: 128 KB

world-readable—(Optional) Enable unrestricted file access.

Required Privilege	trace and unified-edge—To view this statement in the configuration.
Level	trace-control and unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• charging on page 40• Tracing Charging Operations on page 165

traceoptions (Local Persistent Storage)

Syntax	<pre> traceoptions { file <i>file-name</i> <files <i>number</i>> <match <i>regular-expression</i>> <no-world-readable world-readable> <size <i>size</i>>; flag <i>flag</i>; level (all critical error info notice verbose warning); no-remote-trace; } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	Specify tracing options related to the storage of Charging Data Records (CDRs) on the local Routing Engine disk.

Options	<p>file <i>filename</i>—Name of the file to receive the output of the tracing operation.</p> <p>Range: 1 through 1024 bytes</p> <p>files <i>number</i>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>Range: 2 through 1000 files</p> <p>Default: 3 files</p> <p>flag <i>flag</i>—Specify which operations are to be traced. To specify more than one operation, include multiple flag statements.</p>
----------------	--



CAUTION: You may want to enable traceoptions only when you want to debug specific charging operations. Enabling the traceoption flags might have an impact on the system performance.

- **all**—Trace all operations.
- **connection**—Trace the connection establishment between Routing Engine and all services PICs for CDR file backup.
- **file-operations**—Trace all file open, write, and close operations.
- **general**—Trace general operations.

- **journaling**—Trace journaling operations. Journaling creates a log for each file-write operation, which helps to sanitize the CDR data in temporary log files after a reboot.
- **mirror**—Trace mirroring operations. Mirroring enables you to synchronize the CDR file information onto backup.

level—Level of tracing to perform. You can specify any of the following levels:

- **all**—Match all levels.
- **critical**—Match critical conditions.
- **error**—Match error conditions.
- **info**—Match informational messages.
- **notice**—Match conditions that must be handled specially.
- **verbose**—Match verbose messages.
- **warning**—Match warning messages.

match *regex*—(Optional) Refine the output to include lines that contain the regular expression (*regex*).

no-remote-trace—(Optional) Disable remote tracing.

no-world-readable—(Optional) Disable unrestricted file access.

size *size*—(Optional) Maximum size of each trace file, in kilobytes (KB) or megabytes (MB). When a trace file named *trace-file* reaches this size, it is renamed **trace-file.0**. When the trace-file again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and *trace-file* is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum number of files, you must also specify a maximum file size with the *size* option.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB.

Range: 10,240 through 1,073,741,824 bytes

Default: 128 KB


world-readable—(Optional) Enable unrestricted file access.

Required Privilege Level trace and unified-edge—To view this statement in the configuration.
trace-control and unified-edge-control—To add this statement to the configuration.

Related Documentation

- [local-persistent-storage-options on page 76](#)
- [Configuring Persistent Storage on page 21](#)

transport-profile

Syntax	<code>transport-profile <i>profile-name</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Associate a transport profile with a charging profile. However, make sure this profile has been previously defined. This is a mandatory configuration.</p> <p>When a subscriber session is created, the subscriber is bound to a charging profile and the transport profile configuration associated with this profile determines the transport of the CDRs generated for this subscriber from the charging data function (CDF) to the external charging gateway function (CGF) servers or the local Routing Engine disk, or both.</p> <p>Any modification to the existing configuration of this attribute must be done only when the charging profile with which it is associated is under active maintenance mode. Use one of the following commands, as applicable, to bring the charging profile under maintenance mode:</p> <ul style="list-style-type: none"> For the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW)—<code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i> service-mode maintenance</code> For the Serving Gateway (S-GW)—<code>set unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i> service-mode maintenance</code> <div style="margin-top: 20px;">  <p>TIP: If the profile is not already defined, use one of the following commands, as applicable, to define a new transport profile:</p> <ul style="list-style-type: none"> GGSN or P-GW—<code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i></code> S-GW—<code>set unified-edge gateways sgw <i>gateway-name</i> charging transport-profiles <i>profile-name</i></code> </div>
Options	<i>profile-name</i> —Name of the transport profile to be associated with the charging profile.
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>

- Related Documentation**
- [charging-profiles on page 45](#)
 - [Configuring Charging Profiles on page 30](#)
 - [Charging Profiles on page 9](#)
 - [Configuring Charging on page 13](#)


transport-profiles

Syntax	<pre> transport-profiles <i>profile-name</i> { <i>description string</i>; offline { charging-gateways { <i>cdr-aggregation-limit value</i>; <i>cdr-release</i> (r7 r8 r99); <i>mtu value</i>; peer-order { [<i>peer charging-gateway-peer-name</i>]; } persistent-storage-order { <i>local-storage</i>; } <i>switch-back-time seconds</i>; } } <i>service-mode</i> maintenance; } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure a transport profile, which determines how the Charging Data Records (CDRs) are transported from the charging data function (CDF) to a storage resource, which can be external charging gateway function (CGF) servers or the local Routing Engine disk, or both. This is a mandatory configuration.</p> <p>You can configure up to a maximum of eight transport profiles.</p> <p>The remaining statements are explained separately.</p>
Options	<p><i>profile-name</i>—Name of the transport profile. Range: 1 through 128 bytes</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging on page 40 • Configuring Transport Profiles on page 25 • Configuring Charging on page 13

transport-protocol (GTP Prime)

Syntax	<code>transport-protocol (tcp udp);</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the transport protocol for transmitting the GTP Prime packets from the charging data function (CDF) to the charging gateway function (CGF) server, which can be either GTP Prime over UDP or GTP Prime over TCP.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p>tcp—Transport protocol used is TCP.</p> <p>udp—Transport protocol used is UDP.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer (GTP Prime) on page 83 • Configuring GTP Prime for Charging on page 19 • Configuring GTP Prime Peers on page 20 • Configuring Charging on page 13

trigger-profile

Syntax	<code>trigger-profile <i>profile-name</i>;</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging charging-profiles <i>profile-name</i>] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Associate a trigger profile with a charging profile. However, make sure this profile has been previously defined.</p> <p>When a subscriber session is created, the subscriber is bound to a charging profile and the trigger profile configuration associated with this profile determines the events that result in the creation of a CDR, the addition of a container to a CDR, and the closure of a CDR.</p> <div style="display: flex; align-items: flex-start; margin-top: 10px;">  <div> <p>TIP: If the profile is not already defined, use one of the following commands, as applicable, to define a new trigger profile:</p> <ul style="list-style-type: none"> • For the gateway GPRS support node (GGSN) or Packet Data Network Gateway (P-GW)—<code>set unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i></code> • For the Serving Gateway (S-GW)—<code>set unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i></code> </div> </div>
Options	<i>profile-name</i> —Name of the trigger profile to be associated with the charging profile.
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • charging-profiles on page 45 • Configuring Charging Profiles on page 30 • Charging Profiles on page 9 • Configuring Charging on page 13

trigger-profiles

Syntax `trigger-profiles profile-name {
 description string;
 offline {
 container-limit value;
 exclude {
 ms-timezone-change;
 plmn-change;
 qos-change;
 rat-change;
 sgsn-mme-change; #S-GW only
 sgsn-sgw-change; #P-GW only
 user-location-change;
 }
 sgsn-mme-change-limit value; #S-GW only
 sgsn-sgw-change-limit value; #P-GW only
 time-limit value;
 volume-limit {
 value;
 direction (both | uplink);
 }
 }
 tariff-time-list {
 tariff-time;
 }
}`

Hierarchy Level [edit unified-edge gateways ggsn-pgw *gateway-name* charging],
 [edit unified-edge gateways sgw *gateway-name* charging]

Release Information Statement introduced in Junos OS Mobility Release 11.2W.
 Support at the [edit unified-edge gateways sgw *gateway-name* charging] hierarchy level introduced in Junos OS Mobility Release 11.4W.

Description Configure a trigger profile, which determines the events that trigger the creation of a Charging Data Record (CDR), addition of a container to a CDR, and the closure of a CDR.

You can configure up to a maximum of 16 trigger profiles.



NOTE: The CDR profile determines the content of a CDR, whereas the transport profile determines how the generated CDRs are transmitted to the charging gateway function (CGF) server.

The remaining statements are explained separately.

Options *profile-name*—Name of the trigger profile.

Values: 1 through 128 bytes

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [charging on page 40](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring Charging on page 13](#)

user-name (Local Persistent Storage)

Syntax `user-name string;`

Hierarchy Level [edit unified-edge gateways ggsn-pgw *gateway-name* charging local-persistent-storage-options],
[edit unified-edge gateways sgw *gateway-name* charging local-persistent-storage-options]

Release Information Statement introduced in Junos OS Mobility Release 11.2W.
Support at the [edit unified-edge gateways sgw *gateway-name* charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.

Description Restrict access to the Charging Data Record (CDR) files to a specific user.

In addition to the non-root user who is authorized using this statement, the root user always has access permissions.

Options *string*—Username.
Values: 1 through 32 bytes

Required Privilege Level unified-edge—To view this statement in the configuration.
unified-edge-control—To add this statement to the configuration.

Related Documentation

- [local-persistent-storage-options on page 76](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Charging on page 13](#)

version (GTP Prime)

Syntax	<code>version (v0 v1 v2);</code>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp] and [edit unified-edge gateways sgw <i>gateway-name</i> charging gtp peer <i>peer-name</i>] hierarchy levels introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the latest GTP Prime version that is supported on the configured local loopback source interface's IP address from which the GTP Prime packets are sent to the charging gateway function (CGF) server. The possible values are: v0, v1, or v2.</p> <p>When there are global-level and peer-level configurations, the peer-level configuration takes precedence.</p>
Options	<p>v0—GTP Prime version supported is v0.</p> <p>v1—GTP Prime version supported is v1.</p> <p>v2—GTP Prime version supported is v2.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • gtp on page 73 • peer (GTP Prime) on page 83 • Configuring GTP Prime for Charging on page 19 • Configuring GTP Prime Peers on page 20 • Configuring Charging on page 13

visitor-profile

Syntax	<code>visitor-profile <i>visitor-profile</i>;</code>
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> apn-services apns <i>name</i> charging], [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging global-profile] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Specify the profile that should be used to charge visiting subscribers. If the profile-selection-order configuration indicates static , then this profile is used for visiting subscribers.



NOTE: The charging profile must already be configured on the broadband gateway.

The broadband gateway determines whether the subscriber is a visitor by using the mobile country code (MCC) and the mobile network code (MNC) values in the Create Session Request message from the subscriber's user equipment (UE). If the subscriber's International Mobile Subscriber Identity (IMSI), MCC, and MNC do not belong to the PLMN to which both the GGSN or P-GW and the S-GW belong, then the subscriber is deemed a visitor and the **visitor-profile** is applied. If the **visitor-profile** is not configured, then the **default-profile**, if configured, is applied. If the **default-profile** is also not configured, then the subscriber session is created with no charging applied.

Options	<i>visitor-profile</i> —Name of the visitor profile.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Charging and Local Policy Profiles on a Broadband Gateway APN Configuring S-GW Global Charging Profiles and Selection Order on page 17 charging (APN) charging-profiles on page 45 global-profile (Serving Gateway) on page 72

volume-limit

Syntax	<pre> volume-limit { value; direction (both uplink); } </pre>
Hierarchy Level	<p>[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline],</p> <p>[edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W.</p> <p>Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging trigger-profiles <i>profile-name</i> offline] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the volume of data, in bytes, that is transmitted (since the previous trigger) before the Charging Data Record (CDR) is updated with the transmitted bytes and is closed. In addition, you can specify whether the maximum volume of data transmitted includes the data transmitted in both the uplink and downlink directions, or only in the uplink direction.</p> <p>Any change to the existing configuration does not affect a previously established session. The updated configuration applies only to new sessions.</p>
Default	If you do not include the volume-limit statement, the volume limit trigger is disabled.
Options	<p>value—Maximum volume of data transmitted, in bytes, after which the CDR is updated and closed.</p> <p>Range: 1 through 4 GB</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration.</p> <p>unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • offline on page 82 • Configuring Charging Trigger Events on page 26 • Configuring Charging on page 13

watermark-level-1

Syntax	<pre>watermark-level-1 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; }</pre>
Hierarchy Level	[edit unified-edge gateways <i>ggsn-pgw gateway-name</i> charging local-persistent-storage-options disk-space-policy], [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Configure the percentage of Routing Engine disk space to be used for storage and the action to be taken when this limit is reached, such as raise SNMP alarms, record the alert information in the system logs, or both. You can then take appropriate measures to prevent any loss of Charging Data Record (CDR) data.
Options	<p>notification-level (both snmp-alarm syslog)—Specify whether you want to raise SNMP alarms, log information on the system logs, or both, when the watermark level is reached.</p> <ul style="list-style-type: none">• both—Log the alert information on system log files and also raise an SNMP alarm.• snmp-alarm—Raise an SNMP alarm.• syslog—Log the alert information on system log files. <p>Default: syslog</p> <p>percentage <i>value</i>—Percentage of Routing Engine disk space to be used for storage after which you get an alert (if it is configured). Entering 0 disables the checking for the watermark level.</p> <p>Default: 70 percent of the Routing Engine disk space</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• disk-space-policy on page 55• Configuring Persistent Storage on page 21• Configuring Charging on page 13

watermark-level-2

Syntax	<pre>watermark-level-2 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; }</pre>
Hierarchy Level	<p>[edit unified-edge gateways <i>ggsn-pgw gateway-name</i> charging local-persistent-storage-options disk-space-policy], [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy]</p>
Release Information	<p>Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy] hierarchy level introduced in Junos OS Mobility Release 11.4W.</p>
Description	<p>Configure the percentage of Routing Engine disk space to be used for storage and also the action to be taken when this limit is reached, such as raise SNMP alarms, record the alert information in the system logs, or both. You can then take appropriate measures to prevent any loss of Charging Data Record (CDR) data.</p>
Options	<p>notification-level (both snmp-alarm syslog)—Specify whether you want to raise SNMP alarms, log information on the system logs, or both when the watermark level is reached.</p> <ul style="list-style-type: none"> • both—Log the alert information on system log files and raise an SNMP alarm. • snmp-alarm—Raise an SNMP alarm. • syslog—Log the alert information on system log files. <p>Default: syslog</p> <p>percentage <i>value</i>—Percentage of Routing Engine disk space to be used for storage after which you get an alert (if it is configured). Entering 0 disables the checking for the watermark level.</p> <p>Default: 80 percent of the Routing Engine disk space</p>
Required Privilege Level	<p>unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • disk-space-policy on page 55 • Configuring Persistent Storage on page 21 • Configuring Charging on page 13

watermark-level-3

Syntax	<pre>watermark-level-3 { notification-level (both snmp-alarm syslog); percentage <i>value</i>; }</pre>
Hierarchy Level	[edit unified-edge gateways <i>ggsn-pgw gateway-name</i> charging local-persistent-storage-options disk-space-policy], [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways <i>sgw gateway-name</i> charging local-persistent-storage-options disk-space-policy] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	<p>Configure the percentage of Routing Engine disk space to be used for storage and also the action to be taken when this limit is reached, such as raise SNMP alarms, record the alert information in the system logs, or both.</p> <p>When this watermark level is reached, the charging daemon stops writing the Charging Data Records (CDRs) to the local Routing Engine disk till the CDR storage space is restored by transferring the files using SSH FTP (SFTP) and deleting the files from the CDR log directory. However, the data is not immediately lost because the services PICs buffer up to 2 GB of data.</p>
Options	<p>notification-level (both snmp-alarm syslog)—Specify whether you want to raise SNMP alarms, log information on the system logs, or both when the watermark level is reached.</p> <ul style="list-style-type: none">• both—Log the alert information on system log files and also raise an SNMP alarm.• snmp-alarm—Raise an SNMP alarm.• syslog—Log the alert information on system log files. <p>Default: syslog</p> <p>percentage <i>value</i>—Percentage of Routing Engine disk space to be used for storage after which you get an alert (if it is configured). Entering 0 disables the checking for the watermark level.</p> <p>Default: 90 percent of the Routing Engine disk space</p>
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• disk-space-policy on page 55• Configuring Persistent Storage on page 21• Configuring Charging on page 13

world-readable (Local Persistent Storage)

Syntax	world-readable;
Hierarchy Level	[edit unified-edge gateways ggsn-pgw <i>gateway-name</i> charging local-persistent-storage-options], [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options]
Release Information	Statement introduced in Junos OS Mobility Release 11.2W. Support at the [edit unified-edge gateways sgw <i>gateway-name</i> charging local-persistent-storage-options] hierarchy level introduced in Junos OS Mobility Release 11.4W.
Description	Allow all users to have read permissions on the Charging Data Record (CDR) files. By default, this is disabled.
Required Privilege Level	unified-edge—To view this statement in the configuration. unified-edge-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• local-persistent-storage-options on page 76• Configuring Persistent Storage on page 21• Configuring Charging on page 13

PART 3

Administration

- [Monitoring the Charging Configuration on page 123](#)
- [Operational Commands on page 125](#)

Monitoring the Charging Configuration

- [Verifying and Managing the Charging Configuration on page 123](#)

Verifying and Managing the Charging Configuration

Purpose Display or clear information about the charging configuration.

- Action**
- To display information about the local persistent storage statistics:
user@host> show unified-edge ggsn-pgw charging local-persistent-storage statistics
 - To display information about the path management message statistics:
user@host> show unified-edge ggsn-pgw charging path statistics
 - To display information about the status of the configured peers:
user@host> show unified-edge ggsn-pgw charging path status
 - To display information about the transfer statistics for configured transport profiles:
user@host> show unified-edge ggsn-pgw charging transfer statistics
 - To display information about the transfer status for configured transport profiles:
user@host> show unified-edge ggsn-pgw charging transfer status
 - To display information about the trigger profiles:
user@host> show unified-edge ggsn-pgw charging trigger-profile
 - To clear the locally-stored CDRs:
user@host> clear unified-edge ggsn-pgw charging cdr
 - To clear the local persistent storage statistics:
user@host> clear unified-edge ggsn-pgw charging local-persistent-storage statistics
 - To clear the path management message statistics:
user@host> clear unified-edge ggsn-pgw charging path statistics
 - To clear the transfer statistics:
user@host> clear unified-edge ggsn-pgw charging transfer statistics

Related Documentation • [Configuring Persistent Storage on page 21](#)

- [Configuring GTP Prime for Charging on page 19](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

CHAPTER 6

Operational Commands

clear unified-edge sgw charging cdr

Syntax	clear unified-edge sgw charging cdr gateway-name <i>name</i> <transport-profile-name <i>profile-name</i>>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Clear the Charging Data Records (CDRs) from the services PICs for the configured transport profiles on the specified Serving Gateway (S-GW).
Options	gateway-name <i>name</i> —Clear the CDRs from the services PICs for the specified gateway. transport-profile-name <i>profile-name</i> —(Optional) Clear the CDRs from the services PICs for the specified transport profile.
Required Privilege Level	clear, unified-edge
Related Documentation	<ul style="list-style-type: none">• clear unified-edge sgw charging cdr wfa on page 127• show unified-edge sgw charging transfer status on page 158
List of Sample Output	clear unified-edge sgw charging cdr gateway-name SGW on page 126
Output Fields	No message is displayed on successful execution of this command; otherwise an error message is displayed.

Sample Output

```
clear unified-edge sgw charging cdr gateway-name SGW
user@host> clear unified-edge sgw charging cdr gateway-name SGW
```

clear unified-edge sgw charging cdr wfa

Syntax	<code>clear unified-edge sgw charging cdr wfa gateway-name <i>name</i> <transport-profile-name <i>profile-name</i>></code>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Clear from the services PICs (for one or more Serving Gateways [S-GWs]) the Charging Data Records (CDRs) that have not received an acknowledgement from the charging gateway function (CGF), the Routing Engine, or both.
Options	<p>gateway-name <i>name</i>—Clear the unacknowledged CDRs from the services PICs for the specified S-GW.</p> <p>transport-profile-name <i>profile-name</i>—(Optional) Clear the unacknowledged CDRs from the services PICs only for the specified transport profile.</p>
Required Privilege Level	clear, unified-edge
Related Documentation	<ul style="list-style-type: none"> • clear unified-edge sgw charging cdr on page 126 • show unified-edge sgw charging transfer status on page 158
List of Sample Output	clear unified-edge sgw charging cdr wfa gateway-name name on page 127
Output Fields	No message is displayed on successful execution of this command; otherwise an error message is displayed.

Sample Output

```
clear unified-edge sgw charging cdr wfa gateway-name name
user@host> clear unified-edge sgw charging cdr wfa gateway-name PGW
```

clear unified-edge sgw charging local-persistent-storage statistics

Syntax	<code>clear unified-edge sgw charging local-persistent-storage statistics gateway-name <i>name</i></code>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Clear the storage statistics of the Charging Data Record (CDR) files on the local Routing Engine disk on the specified Serving Gateway (S-GW).
Options	<code>gateway-name <i>name</i></code> —Clear the storage statistics for the specified gateway.
Required Privilege Level	clear, unified-edge
Related Documentation	<ul style="list-style-type: none">• show unified-edge sgw charging local-persistent-storage statistics on page 138
List of Sample Output	clear unified-edge sgw charging local-persistent-storage statistics gateway-name SGW on page 128
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear unified-edge sgw charging local-persistent-storage statistics gateway-name SGW	user@host> clear unified-edge sgw charging local-persistent-storage statistics gateway-name SGW Cleared charging local persistent storage statistics
--	---

clear unified-edge sgw charging path statistics

Syntax	<pre>clear unified-edge sgw charging path statistics <fpc-slot slot-number> <gateway-name name> <gtp-peer-addr ipv4-address> <gtp-peer-name peer-name> <pic-slot slot-number></pre>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Clear the path management message statistics (between the charging data function [CDF] and the charging gateway function [CGF] servers) on one or more Serving Gateways (S-GWs). If a gateway name is not specified, then the path management statistics for all S-GWs are cleared.
Options	<p>fpc-slot slot-number—(Optional) Clear the path management message statistics for the specified FPC slot number.</p> <p>gateway-name name—(Optional) Clear the path management message statistics for the specified gateway.</p> <p>gtp-peer-addr ipv4-address—(Optional) Clear the path management message statistics for the GTP Prime peer with the specified IPv4 address.</p> <p>gtp-peer-name peer-name—(Optional) Clear the path management message statistics for the GTP Prime peer with the specified name.</p> <p>pic-slot slot-number—(Optional) Clear the path management message statistics for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.</p>
Required Privilege Level	clear, unified-edge
Related Documentation	<ul style="list-style-type: none"> • show unified-edge sgw charging path statistics on page 144
List of Sample Output	clear unified-edge sgw charging path statistics on page 129
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
clear unified-edge sgw charging path statistics
user@host> clear unified-edge sgw charging path statistics
Cleared charging path statistics
```

clear unified-edge sgw charging transfer statistics

Syntax	<code>clear unified-edge sgw charging transfer statistics</code> <code><fpc-slot <i>slot-number</i>></code> <code><gateway-name <i>name</i>></code> <code><pic-slot <i>slot-number</i>></code> <code><transport-profile-name <i>profile-name</i>></code>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Clear the transfer statistics on one or more Serving Gateways (S-GWs). If a gateway name is not specified, then the transfer statistics for all S-GWs are cleared.
Options	<p>none—Clear the transfer statistics for all S-GWs.</p> <p>fpc-slot <i>slot-number</i>—(Optional) Clear the transfer statistics for the specified FPC slot number.</p> <p>gateway-name <i>name</i>—(Optional) Clear the transfer statistics for the specified gateway.</p> <p>pic-slot <i>slot-number</i>—(Optional) Clear the transfer statistics for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.</p> <p>transport-profile-name <i>profile-name</i>—(Optional) Clear the transfer statistics for the specified transport profile.</p>
Required Privilege Level	clear, unified-edge
Related Documentation	<ul style="list-style-type: none">• show unified-edge sgw charging transfer statistics on page 154
List of Sample Output	clear unified-edge sgw charging transfer statistics on page 130
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

<code>clear unified-edge sgw charging transfer statistics</code>	<code>user@host> clear unified-edge sgw charging transfer statistics</code> Cleared charging transfer statistics
--	--

request system storage unified-edge charging media start

Syntax	request system storage unified-edge charging media start <re0 re1>
Release Information	Command introduced in Junos OS Mobility Release 11.2W.
Description	Enable use of local persistent storage for Charging Data Records (CDRs).
Options	re0 re1 —(Optional) On routers that support dual or redundant Routing Engines, use the disk on the Routing Engine in slot 0 (re0) or Routing Engine in slot 1 (re1).
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system storage unified-edge media prepare on page 134 • request system storage unified-edge charging media stop on page 132 • show unified-edge ggsn-pgw charging local-persistent-storage statistics
List of Sample Output	request system storage unified-edge charging media start on page 131
Output Fields	When you enter this command, there is no output for success but an error displays if the command fails to complete.

Sample Output

```
request system user@host> request system storage unified-edge charging media start
storage unified-edge
charging media start
```

[request system storage unified-edge charging media stop](#)

Syntax	<code>request system storage unified-edge charging media stop <re0 re1></code>
Release Information	Command introduced in Junos OS Mobility Release 11.2W.
Description	Disable use of local persistent storage for Charging Data Records (CDRs).
Options	re0 re1 —(Optional) On routers that support dual or redundant Routing Engines, use the disk on the Routing Engine in slot 0 (re0) or Routing Engine in slot 1 (re1).
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• request system storage unified-edge media eject on page 133• request system storage unified-edge charging media start on page 131
List of Sample Output	request system storage unified-edge charging media stop on page 132
Output Fields	When you enter this command, there is no output for success but an error displays if the command fails to complete.

Sample Output

<code>request system storage unified-edge charging media stop</code>	<code>user@host> request system storage unified-edge charging media stop</code>
--	--


request system storage unified-edge media eject

Syntax	request system storage unified-edge media eject <re0 re1>
Release Information	Command introduced in Junos OS Mobility Release 11.2W.
Description	Prepare the Solid State Disk (SSD) for removal from the Routing Engine. This command unmounts the SSD from /opt/mobility .
Options	re0 re1 —(Optional) On routers that support dual or redundant Routing Engines, prepare the disk on the Routing Engine in slot 0 (re0) or Routing Engine in slot 1 (re1).
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• request system storage unified-edge charging media stop on page 132
List of Sample Output	request system storage unified-edge media eject on page 133
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system storage unified-edge media eject	user@host> request system storage unified-edge media eject Media successfully ejected
---	--

request system storage unified-edge media prepare

Syntax	request system storage unified-edge media prepare <no-format> <re0 re1>
Release Information	Command introduced in Junos OS Mobility Release 11.2W.
Description	Prepare the Solid State Disk (SSD) on the Routing Engine for local persistent storage of Charging Data Records (CDRs). This command formats the SSD and mounts it to <code>/opt/mobility</code> .
	<div>  <p>NOTE: If you do not want to format the existing content on the SSD, you must specify the <code>no-format</code> option.</p> </div>
Options	<p>no-format—(Optional) Do not format the existing content on the SSD when preparing the disk on the Routing Engine.</p> <p>re0 re1—(Optional) On routers that support dual or redundant Routing Engines, prepare the disk on the Routing Engine in slot 0 (re0) or Routing Engine in slot 1 (re1).</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none"> • request system storage unified-edge charging media start on page 131 • show unified-edge ggsn-pgw charging local-persistent-storage statistics
List of Sample Output	request system storage unified-edge media prepare on page 134
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

```

request system user@host> request system storage unified-edge media prepare
storage unified-edge Creating filesystem
media prepare Mounting media
Media successfully prepared

```

show unified-edge sgw charging global statistics

Syntax	show unified-edge sgw charging global statistics <brief detail> <fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> > <gateway <i>gateway-name</i> >
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the global statistics for charging for one or more Serving Gateways (S-GWs). If an S-GW is not specified, then the statistics for all S-GWs are displayed.
Options	<p>none—(Same as brief) Display the global statistics for charging, in brief.</p> <p>brief detail—(Optional) Display the specified level of output. The brief option displays the statistics per GGSN or P-GW for all services PICs. The detail option displays the statistics per GGSN or P-GW for each services PIC.</p> <p>fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i>—(Optional) Display the global statistics for charging only for the specified FPC slot number and PIC slot number.</p> <p>gateway <i>gateway-name</i>—(Optional) Display the global statistics for charging for the specified GGSN or P-GW.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show unified-edge sgw charging local-persistent-storage statistics on page 138 • show unified-edge sgw charging path statistics on page 144 • show unified-edge sgw charging transfer statistics on page 154
List of Sample Output	show unified-edge sgw charging global statistics brief on page 136 show unified-edge sgw charging global statistics detail on page 136
Output Fields	Table 4 on page 135 lists the output fields for the show unified-edge sgw charging global statistics command. Output fields are listed in the approximate order in which they appear.

Table 4: show unified-edge sgw charging global statistics Output Fields

Field Name	Field Description	Level of Output
Gateway	Name of the S-GW.	All levels none
FPC/PIC	FPC slot number and PIC slot number for which the statistics are displayed.	detail

Table 4: show unified-edge sgw charging global statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
CDR Send Errors	Number of CDR send errors. This counter indicates an internal error while closing the CDR.	All levels none
CDR Encode Errors	Number of CDR encoding failures. For example, if the buffer is insufficient then the CDR encoding does not take place.	All levels none
CDR Alloc Failures	Number of CDR allocation failures. For example, if there is insufficient memory then the CDR allocation can fail.	All levels none
Container Failures	Number of internal failures pertaining to charging containers.	All levels none
Charging Bearers Created	Number of bearers for which charging is enabled.	All levels none
Charging Bearers Destroyed	Number of charging bearers destroyed.	All levels none

Sample Output

```

show unified-edge sgw charging global statistics brief
user@host> show unified-edge sgw charging global statistics brief
Gateway: SGW
Charging Global Statistics

CDR Send Errors           : 2
CDR Encode Errors         : 0
CDR Alloc Failures        : 2
Container Failures        : 0
Charging Bearers Created   : 133
Charging Bearers Destroyed : 14

```

```

show unified-edge sgw charging global statistics detail
user@host> show unified-edge sgw charging global statistics detail
Gateway: SGW
Charging Global Statistics
FPC/PIC: 1/1
CDR Send Errors           : 2
CDR Encode Errors         : 0
CDR Alloc Failures        : 2
Container Failures        : 0
Charging Bearers Created   : 100
Charging Bearers Destroyed : 10

FPC/PIC: 3/1
CDR Send Errors           : 0
CDR Encode Errors         : 0
CDR Alloc Failures        : 0

```

Container Failures	: 0
Charging Bearers Created	: 33
Charging Bearers Destroyed	: 4

show unified-edge sgw charging local-persistent-storage statistics

Syntax	show unified-edge sgw charging local-persistent-storage statistics <gateway gateway>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the storage statistics of the Charging Data Record (CDR) files on the local Routing Engine disk for the Serving Gateways (S-GWs). If a gateway name is not specified, then the status for all S-GWs is displayed.
Options	none —Display the storage statistics for all S-GWs. gateway gateway —(Optional) Display the storage statistics for the specified gateway.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear unified-edge sgw charging local-persistent-storage statistics on page 128
List of Sample Output	show unified-edge sgw charging local-persistent-storage statistics on page 142
Output Fields	Table 5 on page 138 lists the output fields for the show unified-edge sgw charging local-persistent-storage statistics command. Output fields are listed in the approximate order in which they appear.

Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields

Field Name	Field Description
Batch Messages received	Total number of batch messages sent from services PICs to the Routing Engine disk. CDRs generated in services PICs are sent to the local Routing Engine disk as batch messages.
Batch Responses sent	Total number of responses sent to the batch messages received.
Invalid Messages received	Total number of invalid batch messages sent from services PICs to the Routing Engine disk.
Number of temp log files opened	<p>Total number of temporary CDR files opened on the Routing Engine disk.</p> <p>These files are closed and copied from the temporary location to a final location (/opt/mobility/charging/ggsn/final_log) within the same Routing Engine disk from where the files can be transferred using SSH FTP (SFTP). Files are closed when the file size, file age, or the maximum number of CDRs added to the file reaches the configured limit (or the default limit, if the limit is not configured).</p>

Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields (*continued*)

Field Name	Field Description
Number of journal files opened	Total number of open journal files. Journal files are used to remove any unfinished file writes from the temporary log files if a daemon or router crash interrupts the kernel file write. When the daemon or router come back up, the journal log files are read to ensure that the contents of the temporary log file are sane. If there is any unfinished CDR data, the temporary log file is truncated to the last-known successful file write. For each temporary log CDR file, a separate journal file is opened.
Number of journal files closed	Total number of journal files closed.
Number of CDR log files closed	Total number of temporary CDR log files closed. Authorized users can use SFTP to transfer these files from the <code>/opt/mobility/charging/ggsn/final_log</code> location.
Number of CDR files closed due to file-age	Total number of temporary CDR log files closed because the age of the files reached the configured limit (or the default limit, if the limit is not configured). The default file age is 120 minutes.
Number of CDR files closed due to file-size	Total number of temporary CDR log files closed because the size of the files reached the configured limit (or the default limit, if the limit is not configured). The default file size is 10 megabytes (MB).
Number of CDR files closed due to cdr-count	Total number of temporary CDR log files closed because the maximum number of CDRs added to the files reached the configured limit. There is no default limit.
Abnormal file closures	Total number of abnormal temporary CDR log file closures. This counter is incremented when the charging daemon comes up after a system reboot or crash and temporary CDR log file closures are triggered.
Normal file closures	Total number of temporary CDR log file closures. This counter is incremented when changes in the configuration, such as a change in the file format, trigger temporary CDR log file closures.
Number of CDR log files closed in TS_32_297 format	Total number of closed temporary CDR log files that are compliant with the format specified in the 32297 technical specification release.
Number of CDR log files closed in raw asn1 format	Total number of closed temporary CDR log files that are in the raw ASN1 format.
Total number of CDRs backed up	Total number of CDRs backed up to the standby Routing Engine.

Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields (*continued*)

Field Name	Field Description
Disk Full messages sent	<p>Total number of messages sent by the Routing Engine to the services PICs to indicate that its disk is already full and is unable to accept any more charging data.</p> <p>Use SFTP to transfer the files from the <code>/opt/mobility/charging/ggsn/final_log</code> location to free disk space, or remove the disk and copy the files.</p> <p>You can remove the disk by issuing the following commands in this order:</p> <ul style="list-style-type: none"> • request system storage unified-edge charging media stop • request system storage unified-edge media eject
Disk Full resolve messages sent	Total number of disk full resolve messages sent. When the disk space is freed, the Routing Engine sends messages to the services PICs indicating that it can receive charging data.
Number of async IO reqs written	Number of asynchronous I/O requests written. This counter is incremented once for every write operation into the temporary log CDR file.
Disk space status	<p>Indicates whether disk space is available for storage. The possible values are:</p> <ul style="list-style-type: none"> • DISK_AVAILABLE • DISK_AT_WATERMARK_LEVEL1 • DISK_AT_WATERMARK_LEVEL2 • DISK_AT_WATERMARK_LEVEL3 • DISK_OFFLINE—Indicates that a disk is not present or the request system storage unified-edge charging media stop command has been issued. • DISK_OFFLINE_PENDING—Indicates whether any CDRs are being written or mirrored on the backup Routing Engine. This interim status message is displayed after the request system storage unified-edge charging media stop command has been issued but before the disk goes offline.
Watermark level1 at (MB)	<p>Indicates the percentage of the total Routing Engine disk space configured for storage. By default, watermark level 1 is set to 70 percent of the total disk space.</p> <p>When this limit is reached, an alert (if configured) is sent and you can take corrective measures to free the disk space.</p>
Watermark level2 at (MB)	<p>Indicates the percentage of the total Routing Engine disk space for storage. By default, watermark level 2 is set to 80 percent of the total disk space.</p> <p>When this limit is reached, an alert (if configured) is sent and you can take corrective measures to free the disk space.</p>

Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields (*continued*)

Field Name	Field Description
Watermark level3 at (MB)	<p>Indicates the percentage of the total Routing Engine disk space configured for storage. By default, watermark level 3 is set to 90 percent of the total disk space.</p> <p>When this limit is reached, an alert (if configured) is sent and you can take any corrective measures to free the disk space. Otherwise, the services PICs stop sending the charging data to the Routing Engine disk and you must transfer the files via SFTP to free the disk space. However, the charging data is not lost because it is buffered in the services PICs. Services PICs can buffer up to a maximum of 2 GB of data after which a call admission control (CAC) is triggered.</p>
Temporary CDR log file Statistics	
NOTE: The information about temporary CDR log files is displayed only if temporary CDR log files are currently open.	
File Name	Name of the temporary CDR log file.
Journal file name	Name of the journal file.
Current number of CDRs	Total number of CDRs currently added to the temporary CDR log file.
Current file size (bytes)	Current size, in bytes, of the temporary CDR log file.
File age trigger (mins)	Configured duration, in minutes, after which the temporary CDR log file is closed, in minutes. If this parameter is not configured, then the default value is displayed.
File size trigger (bytes)	Configured size, in bytes, that the temporary CDR log file can reach after which it is closed. If this parameter is not configured, then the default value is displayed.
CDR count trigger	Configured maximum number of CDRs that can be added to the temporary CDR log file, after which it is closed. If this parameter is not configured, then the default value is displayed.
Global Statistics	
Disk Offline messages sent	<p>Total number of messages sent by the Routing Engine to the services PICs to indicate that its disk is offline or is not mounted, and that it is unable to accept any more charging data.</p> <p>You can configure the disk (storage media) to store charging data by issuing these commands:</p> <ul style="list-style-type: none"> • request system storage unified-edge media prepare • request system storage unified-edge charging media start
Disk Available messages sent	When the disk is prepared and mounted, the Routing Engine sends messages to the services PICs to indicate that it can now receive charging data. This field indicates the total number of these messages sent.

Table 5: show unified-edge sgw charging local-persistent-storage statistics Output Fields (*continued*)

Field Name	Field Description
Number of CDR storage files on disk	Total number of CDR files stored on the local Routing Engine disk.
Current storage space in use (MB)	Storage space, in MB, that is currently being used.
Available storage space on disk (MB)	Total free space, in MB, available for storage on the disk.
Total storage space on disk (MB)	Total storage space, in MB, on the disk.
Mirroring Connection Information	
Connection state	State of the mirroring connection. The following states are possible: <ul style="list-style-type: none"> • Active—Indicates that the mirroring status on Routing Engine is active. • Standalone—Indicates that the backup Routing Engine is down, or that graceful Routing Engine switchover (GRES) is not configured. • Standby—Indicates that the backup Routing Engine is on standby.
Other RE mirroring connection present	Indicates whether the mirroring connection is established with the other Routing Engine or not
GRES configured	Indicates whether graceful Routing Engine switchover (GRES) is configured or not.

Sample Output

```

show unified-edge sgw charging local-persistent-storage statistics
user@host> show unified-edge sgw charging local-persistent-storage statistics
Gateway: SGW
Charging local-persistent-storage Statistics
Batch Messages received                : 76
Batch Responses sent                   : 76
Invalid Messages received               : 0
Number of temp log files opened         : 1
Number of journal files opened          : 1
Number of journal files closed          : 0
Number of CDR log files closed          : 0
Number of CDR files closed due to file-age : 0
Number of CDR files closed due to file-size : 0
Number of CDR files closed due to cdr-count : 0
Abnormal file closures                 : 0
Normal file closures                   : 0
Number of CDR log files closed in TS_32_297 format : 0
Number of CDR log files closed in raw asn1 format : 0
Total number of CDRs backed up         : 2095
Disk Full messages sent                : 0
Disk Full resolve messages sent         : 0
Number of async IO reqs written        : 76
Disk space status                      : DISK_AVAILABLE
Watermark level1 at(MB)                : 618(70%)
Watermark level2 at(MB)                : 707(80%)
Watermark level3 at(MB)                : 795(90%)

```

Temporary CDR log file Statistics

File Name: /opt/mobility/charging/ggsn/temp_log/templog_file_1.log
Journal file name : /opt/mobility/charging/ggsn/jrn1/jrn1_1.log
Current number of CDRs : 2095
Current file size(bytes) : 553028
File age trigger(mins) : 60
File size trigger(bytes) : 10485760
CDR count trigger : 0

Global Statistics

Disk Offline messages sent : 0
Disk Available messages sent : 0
Number of CDR storage files on disk : 0
Current storage space in use(MB) : 301
Available storage space on disk(MB) : 583
Total storage space on disk(MB) : 884

Mirroring Connection Information

Connection state : ACTIVE
Other RE mirroring connection present : YES
GRES configured : NO

show unified-edge sgw charging path statistics

Syntax	show unified-edge sgw charging path statistics <brief detail> <fpc-slot <i>slot-number</i>> <gateway-name <i>name</i>> <gtp-peer-addr <i>ipv4-address</i>> <gtp-peer-name <i>peer-name</i>> <pic-slot <i>slot-number</i>>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the path management message statistics (between the charging data function [CDF] and the charging gateway function [CGF] servers) on one or more Serving Gateways (S-GWs). If a gateway name is not specified, then the path management statistics for all S-GWs are displayed.
Options	<p>none—(Same as brief) Display the path management message statistics for all S-GWs.</p> <p>brief detail—(Optional) Display the specified level of output. The brief option displays the statistics per S-GW for all services PICs. The detail option displays the statistics per S-GW for each services PIC.</p> <p>fpc-slot <i>slot-number</i>—(Optional) Display the path management message statistics for the specified FPC slot number.</p> <p>gateway-name <i>name</i>—(Optional) Display the path management message statistics for the specified gateway.</p> <p>gtp-peer-addr <i>ipv4-address</i>—(Optional) Display the path management message statistics for the GTP Prime peer with the specified IPv4 address.</p> <p>gtp-peer-name <i>peer-name</i>—(Optional) Display the path management message statistics for the GTP Prime peer with the specified name.</p> <p>pic-slot <i>slot-number</i>—(Optional) Display the path management message statistics for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear unified-edge sgw charging path statistics on page 129• show unified-edge sgw charging path status on page 149
List of Sample Output	show unified-edge sgw charging path statistics brief on page 146 show unified-edge sgw charging path statistics detail on page 147

Output Fields Table 6 on page 145 lists the output fields for the **show unified-edge sgw charging path statistics** command. Output fields are listed in the approximate order in which they appear.

Table 6: show unified-edge sgw charging path statistics Output Fields

Field Name	Field Description	Level of Output
Gateway	Name of the S-GW.	All levels
Charging Path Statistics		
FPC/PIC	FPC slot number and PIC slot number for which the statistics are displayed.	detail
CGF Address	Address of the CGF server (GTP Prime peer).	All levels
CGF Server Name	Name of the CGF server (GTP Prime peer).	All levels
Echo Requests Rx	Total number of echo requests received by the CDF from the CGF server.	All levels
Echo Responses Tx	Total number of echo responses transmitted by the CDF to the CGF server.	All levels
Echo Responses Rx	Total number of echo responses received by the CDF from the CGF server.	All levels
Echo Requests Tx	Total number of echo requests transmitted by the CDF to the CGF server.	All levels
Node-Alive Requests Rx	Total number of node alive requests received by the CDF from the CGF server.	All levels
Node-Alive Responses Tx	Total number of responses transmitted by the CDF to the node alive requests received from the CGF server.	All levels
Version Not Supported Rx	Total number of Version Not Supported messages received by the CDF from the CGF server. The CGF server sends these messages to the CDF to indicate that the GTP Prime messages sent by the CDF are incompatible with the GTP Prime version supported by the CGF server.	All levels
Version Not Supported Tx	Total number of Version Not Supported messages transmitted by the CDF to the CGF server. The CDF sends these messages to indicate that the GTP Prime messages sent by the CGF server are incompatible with the GTP Prime version supported by the CDF.	All levels
Echo Requests timed out	Total number of echo requests sent by the CDF for which there were no responses from the CGF server and that have timed out.	All levels
Echo Interval	Configured echo interval, in seconds. If the echo interval is not configured, then the default value is displayed.	All levels
Down Detection Interval	Configured down detect time, in seconds. If the down detect time is not configured, then the default value is displayed.	All levels
Reconnect Time Interval	Configured reconnect time, in seconds. If the reconnect time is not configured, then the default value is displayed.	All levels

Table 6: show unified-edge sgw charging path statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
Destination Port	Configured destination port. If the destination port is not configured, then the default port (3386) is displayed.	All levels
Pending Queue Size	Configured pending queue size. If the pending queue size is not configured, then the default value (1024) is displayed.	All levels
Path Manager FPC Slot	FPC slot that manages the path management messages.	All levels
Path Manager PIC Slot	PIC slot that manages the path management messages.	All levels
Path Manager Port	Port used for path management messages.	All levels
T3 Response Time Interval	Configured T3 response time interval, in seconds. If the T3 response time interval is not configured, then the default value (5 seconds) is displayed.	All levels
Source Interface Valid	Indicates whether the source interface is valid or not.	All levels
GTPP Header Type	Configured header type for the GTP Prime messages.	All levels
N3 Requests	Configured value for N3 requests . If the N3 requests is not configured, then the default value (3) is displayed.	All levels
Local Address	Address of the local loopback source interface from which the GTP Prime packets are sent to the CGF server.	All levels
GTPP Version	Configured version that is supported on the configured local loopback source interface's IP address, from which the GTP Prime packets are sent to the CGF server.	All levels
Transport Protocol	Configured transport protocol for sending the GTP Prime packets from CDF to the CGF server.	All levels
TCP Port Range Start	Start of the range of source ports from which the TCP connection from each services PIC to the CGF server can originate. The S-GW assigns a range of source ports internally.	All levels
TCP Port Range End	End of the range of source ports from which the TCP connection from each services PIC to the CGF server can originate. The S-GW assigns a range of source ports internally.	All levels
TCP Connection State	Indicates whether the TCP connection state on the services PIC has been established or not.	detail

Sample Output

```

show unified-edge sgw charging path statistics brief
user@host> show unified-edge sgw charging path statistics brief
Gateway: SGW
Charging Path Statistics

```



```

CGF Address          : 2.2.2.2      CGF Server Name      : s_cgf
Echo Requests        Rx: 0          Echo Responses       Tx: 0
Echo Responses       Rx: 0          Echo Requests        Tx: 0
Node-Alive Requests  Rx: 0          Node-Alive Responses Tx: 0
Version Not Supported Rx: 0          Version Not Supported Tx: 0
Echo Requests timed out : 0        Echo Interval        : 0
Down Detection Interval : 10        Reconnect Time Interval : 60
Destination Port      : 3386        Pending Queue Size    : 1000
Path Manager FPC Slot : 2           Path Manager PIC Slot : 0
T3 Response Time Interval : 5       Path Manager Port     : 30275
Source Interface Valid : Yes        GTPP Header Type     : long
N3 Requests          : 1           Local Address        : 13.4.1.1

GTPP Version         : V0           Transport Protocol    : TCP
TCP Port Range Start : 30277        TCP Port Range End    : 30308

```

Gateway: SGW2
Charging Path Statistics

```

CGF Address          : 2.2.2.2      CGF Server Name      : s_cgf
Echo Requests        Rx: 0          Echo Responses       Tx: 0
Echo Responses       Rx: 0          Echo Requests        Tx: 0
Node-Alive Requests  Rx: 0          Node-Alive Responses Tx: 0
Version Not Supported Rx: 0          Version Not Supported Tx: 0
Echo Requests timed out : 0        Echo Interval        : 0
Down Detection Interval : 10        Reconnect Time Interval : 60
Destination Port      : 3386        Pending Queue Size    : 1000
Path Manager FPC Slot : 2           Path Manager PIC Slot : 1
T3 Response Time Interval : 5       Path Manager Port     : 30241
Source Interface Valid : Yes        GTPP Header Type     : long
N3 Requests          : 1           Local Address        : 12.4.1.1

GTPP Version         : V0           Transport Protocol    : TCP
TCP Port Range Start : 30243        TCP Port Range End    : 30274

```

show unified-edge sgw charging path statistics detail
user@host> show unified-edge sgw charging path statistics detail
Gateway: SGW
Charging Path Statistics
FPC/PIC: 2/0

```

CGF Address          : 2.2.2.2      CGF Server Name      : s_cgf
Echo Requests        Rx: 0          Echo Responses       Tx: 0
Echo Responses       Rx: 0          Echo Requests        Tx: 0
Node-Alive Requests  Rx: 0          Node-Alive Responses Tx: 0
Version Not Supported Rx: 0          Version Not Supported Tx: 0
Echo Requests timed out : 0        Echo Interval        : 0
Down Detection Interval : 10        Reconnect Time Interval : 60
Destination Port      : 3386        Pending Queue Size    : 1000
Path Manager FPC Slot : 2           Path Manager PIC Slot : 0
T3 Response Time Interval : 5       Path Manager Port     : 30275
Source Interface Valid : Yes        GTPP Header Type     : long
N3 Requests          : 1           Local Address        : 13.4.1.1

GTPP Version         : V0           Transport Protocol    : TCP
TCP Port Range Start : 30277        TCP Port Range End    : 30308
TCP Connection State : Established
FPC/PIC: 5/0

```

```

CGF Address          : 2.2.2.2      CGF Server Name      : s_cgf
Echo Requests        Rx: 0          Echo Responses       Tx: 0

```

Echo Responses	Rx: 0	Echo Requests	Tx: 0
Node-Alive Requests	Rx: 0	Node-Alive Responses	Tx: 0
Version Not Supported	Rx: 0	Version Not Supported	Tx: 0
Echo Requests timed out	: 0	Echo Interval	: 0
Down Detection Interval	: 10	Reconnect Time Interval	: 60
Destination Port	: 3386	Pending Queue Size	: 1000
Path Manager FPC Slot	: 2	Path Manager PIC Slot	: 0
T3 Response Time Interval	: 5	Path Manager Port	: 30275
Source Interface Valid	: Yes	GTPP Header Type	: long
N3 Requests	: 1	Local Address	: 13.4.1.1
GTPP Version	: V0	Transport Protocol	: TCP
TCP Port Range Start	: 30277	TCP Port Range End	: 30308
TCP Connection State	: Not Established		

Gateway: SGW2
 Charging Path Statistics
 FPC/PIC: 2/1

CGF Address	: 2.2.2.2	CGF Server Name	: s_cgf
Echo Requests	Rx: 0	Echo Responses	Tx: 0
Echo Responses	Rx: 0	Echo Requests	Tx: 0
Node-Alive Requests	Rx: 0	Node-Alive Responses	Tx: 0
Version Not Supported	Rx: 0	Version Not Supported	Tx: 0
Echo Requests timed out	: 0	Echo Interval	: 0
Down Detection Interval	: 10	Reconnect Time Interval	: 60
Destination Port	: 3386	Pending Queue Size	: 1000
Path Manager FPC Slot	: 2	Path Manager PIC Slot	: 1
T3 Response Time Interval	: 5	Path Manager Port	: 30241
Source Interface Valid	: Yes	GTPP Header Type	: long
N3 Requests	: 1	Local Address	: 12.4.1.1
GTPP Version	: V0	Transport Protocol	: TCP
TCP Port Range Start	: 30243	TCP Port Range End	: 30274
TCP Connection State	: Not Established		

FPC/PIC: 5/1

CGF Address	: 2.2.2.2	CGF Server Name	: s_cgf
Echo Requests	Rx: 0	Echo Responses	Tx: 0
Echo Responses	Rx: 0	Echo Requests	Tx: 0
Node-Alive Requests	Rx: 0	Node-Alive Responses	Tx: 0
Version Not Supported	Rx: 0	Version Not Supported	Tx: 0
Echo Requests timed out	: 0	Echo Interval	: 0
Down Detection Interval	: 10	Reconnect Time Interval	: 60
Destination Port	: 3386	Pending Queue Size	: 1000
Path Manager FPC Slot	: 2	Path Manager PIC Slot	: 1
T3 Response Time Interval	: 5	Path Manager Port	: 30241
Source Interface Valid	: Yes	GTPP Header Type	: long
N3 Requests	: 1	Local Address	: 12.4.1.1
GTPP Version	: V0	Transport Protocol	: TCP
TCP Port Range Start	: 30243	TCP Port Range End	: 30274
TCP Connection State	: Not Established		

show unified-edge sgw charging path status

Syntax `show unified-edge sgw charging path status`
`<brief | detail>`
`<fpc-slot slot-number>`
`<gateway-name name>`
`<gtp-peer-addr ipv4-address>`
`<gtp-peer-name peer-name>`
`<pic-slot slot-number>`

Release Information Command introduced in Junos OS Mobility Release 11.4W.

Description Display the status of the configured GPRS tunneling protocol (GTP) Prime peers for the Serving Gateways (S-GWs). If a gateway name is not specified, then the status for all S-GWs is displayed.

The status includes information about whether the GTP Prime peers are connected, down, or still in the process of establishing a connection, and whether the echo messages are enabled or disabled



NOTE: In charging, the terms GTP Prime peers and charging gateway function (CGF) server are used interchangeably.

Options `none`—(Same as `brief`) Display the status of the configured GTP Prime peers for all S-GWs.

`brief | detail`—(Optional) Display the specified level of output.

`fpc-slot slot-number`—(Optional) Display the status of the configured GTP Prime peers for the specified FPC slot number.

`gtp-peer-addr ipv4-address`—(Optional) Display the status of the GTP Prime peer with the specified IPv4 address.

`gtp-peer-name peer-name`—(Optional) Display the status of the GTP Prime peer with the specified name.

`pic-slot slot-number`—(Optional) Display the status of the configured GTP Prime peers for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.

Required Privilege Level `view`

Related Documentation

- [show unified-edge sgw charging path statistics on page 144](#)

List of Sample Output [show unified-edge sgw charging path status brief on page 150](#)
[show unified-edge sgw charging path status detail on page 150](#)

Output Fields Table 7 on page 150 lists the output fields for the **show unified-edge sgw charging path status** command. Output fields are listed in the approximate order in which they appear.

Table 7: show unified-edge sgw charging path status Output Fields

Field Name	Field Description	Level of Output
Gateway	Name of the S-GW.	All levels
Peer-Address	Address of the charging gateway function (CGF) server (GTP Prime peer).	All levels
Peer-Name	Name of the CGF server (GTP Prime peer).	All levels
Local-Address	IPv4 address of the local loopback source interface from where the GTP Prime packets are sent to the CGF server (GTP Prime peer).	All levels
Status	Status of the CGF server: <ul style="list-style-type: none"> • Connected • Down • In-Progress 	All levels
Echo	Indicates whether echo messages are enabled or disabled. The possible values are: <ul style="list-style-type: none"> • Enabled or Disabled for UDP connections • N/A (Not Applicable) for TCP connections 	All levels
Cause	Probable cause for the current status of the CGF peer. This field is displayed only when the CGF server is down or the connection has not been established.	detail
FPC/PIC	FPC and PIC slot numbers.	detail

Sample Output

```

show unified-edge sgw charging path status brief
user@host> show unified-edge sgw charging path status brief
Gateway: SGW
Charging Path Status
Peer-Address  Peer-Name  Local-Address  Status      Echo
3.3.3.3      test       13.4.1.1       In-Progress  N/A
2.2.2.2      s_cgf      13.4.1.1       Connected    N/A

```

```

show unified-edge sgw charging path status detail
user@host> show unified-edge sgw charging path status detail
Gateway: SGW
Charging Path Status

FPC/PIC 2/1
Peer-Address 3.3.3.3
Peer-Name test
Local-Address 13.4.1.1
Status Down
Cause Server Not Responding

```

Echo	N/A
Peer-Address	2.2.2.2
Peer-Name	s_cgf
Local-Address	13.4.1.1
Status	Connected
Echo	N/A

show unified-edge sgw charging service-mode

Syntax	show unified-edge sgw charging service-mode gateway-name <i>gateway-name</i> <brief detail> <charging-profile-name <i>profile-name</i>> <transport-profile-name <i>profile-name</i>>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the charging service mode information for the specified Serving Gateway (S-GW).
Options	<p>gateway-name <i>gateway-name</i>—Display the charging service mode information for the specified gateway.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>charging-profile-name <i>profile-name</i>—(Optional) Display the service mode information for the specified charging profile.</p> <p>transport-profile-name <i>profile-name</i>—(Optional) Display the service mode information for the specified transport profile.</p>
Required Privilege Level	view
List of Sample Output	show unified-edge sgw charging service-mode gateway SGW brief on page 153 show unified-edge sgw charging service-mode gateway SGW detail on page 153
Output Fields	Table 8 on page 152 lists the output fields for the show unified-edge sgw charging service-mode command. Output fields are listed in the approximate order in which they appear.

Table 8: show unified-edge sgw charging service-mode Output Fields

Field Name	Field Description	Level of Output
Gateway Name	Name of the S-GW.	All levels
Service Mode	Service mode for the gateway. The following service modes are possible: <ul style="list-style-type: none"> Operational—Gateway is in operational mode. Maintenance—Gateway is in maintenance mode. MM Active Phase—In this mode, you can make changes to any of the configuration options under the [edit unified-edge gateways sgw gateway-name charging charging-profiles] or the [edit unified-edge gateways sgw gateway-name charging transport-profiles] hierarchy levels. MM In/Out Phase—In this mode, you cannot make changes to the configuration options under the [edit unified-edge gateways sgw gateway-name charging charging-profiles] or the [edit unified-edge gateways sgw gateway-name charging transport-profiles] hierarchy levels. 	All levels
Charging Profile(s) or Charging Profile	Name of the charging profile.	All levels

Table 8: show unified-edge sgw charging service-mode Output Fields (*continued*)

Field Name	Field Description	Level of Output
Service Mode	Service mode for the charging profile.	All levels
Transport Profile(s) or Transport Profile	Name of the transport profile.	brief
Service Mode	Service mode for the transport profile.	All levels
Pending Maintenance Mode Ready Ack	Lists the components or modules that are not yet ready to accept the configuration changes. Maintenance mode becomes active only after all the components or modules are ready to accept these changes.	detail

Sample Output

```

show unified-edge sgw charging service-mode gateway SGW brief
user@host> show unified-edge sgw charging service-mode gateway SGW brief
Maintenance Mode
  MM Active Phase - System is ready to accept configuration changes for all
                    attributes of this object and its sub-hierarchies.
  MM In/Out Phase - System is ready to accept configuration changes only for
                    non-maintenance mode attributes of this object and
                    its sub-hierarchies.
.
Gateway Name      : SGW
Service Mode      : Operational

Charging Profile(s)      Service Mode
p_juniper               Operational
Transport Profile(s)     Service Mode
p_tsp                   Operational

show unified-edge sgw charging service-mode gateway SGW detail
user@host> show unified-edge sgw charging service-mode gateway SGW detail
Gateway Name      : SGW
Service Mode      : Operational

Charging Profile: p_juniper
Service Mode      : Operational
Transport Profile: p_tsp
Service Mode      : Operational

```

show unified-edge sgw charging transfer statistics

Syntax	<pre>show unified-edge sgw charging transfer statistics <brief detail> <fpc-slot slot-number> <gateway-name name> <pic-slot slot-number> <transport-profile-name profile-name></pre>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the transfer statistics for the configured transport profiles on one or more Serving Gateways (S-GWs). If a gateway name is not specified, then the transfer statistics for all S-GWs are displayed.
Options	<p>none—(Same as brief) Display the transfer statistics for all S-GWs.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>fpc-slot slot-number—(Optional) Display the transfer statistics for the specified FPC slot number.</p> <p>gateway-name name—(Optional) Display the transfer statistics for the specified gateway.</p> <p>pic-slot slot-number—(Optional) Display the transfer statistics for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.</p> <p>transport-profile-name profile-name—(Optional) Display the transfer statistics for the specified transport profile.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear unified-edge sgw charging transfer statistics on page 130
List of Sample Output	show unified-edge sgw charging transfer statistics brief on page 156 show unified-edge sgw charging transfer statistics detail on page 156
Output Fields	Table 9 on page 154 lists the output fields for the show unified-edge sgw charging transfer statistics command. Output fields are listed in the approximate order in which they appear.

Table 9: show unified-edge sgw charging transfer statistics Output Fields

Field Name	Field Description	Level of Output
Gateway	Name of the S-GW.	All levels
Transport-Profile	Name of the transport profile.	All levels

Table 9: show unified-edge sgw charging transfer statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
Redirection Requests Rx	<p>Total number of redirection request messages received by the charging data function (CDF) from the charging gateway function (CGF) server.</p> <p>The CGF server sends these messages to inform the CDF about the following:</p> <ul style="list-style-type: none"> • The CGF server is about to stop service (possibly due to an error or for maintenance). • The next node in the chain (such as a billing server) has lost its connection to the CGF server. 	All levels
Redirection Responses Tx	Total number of redirection response messages transmitted as responses to the redirection requests received. Redirection response messages indicate whether a redirection request message was successful or not.	All levels
DRT Responses Rx	Total number of Data Record Transfer (DRT) response messages received for the DRT request messages sent. DRT response messages indicate whether a DRT request was successful or not.	All levels
DRT Requests Tx	Total number of DRT request messages transmitted to the CGF server. These messages are used to transfer Charging Data Records (CDRs) from the CDF to the CGF server.	All levels
DRT successful Responses Rx	Total number of successful DRT response messages received for the DRT request messages sent.	All levels
DRT Error Responses Rx	Total number of DRT error response messages received for the DRT request messages sent.	All levels
DRT Requests timed out	Total number of DRT requests sent that timed out before receiving a response from the CGF server.	All levels
CGF Switch Back Times	Total number of times the CGF servers were switched, which indicates the number of times that the CGF servers were either offline or down for maintenance.	All levels
Batch Requests Tx	Total number of batch requests transmitted from services PICs for a transport profile.	All levels
Batch Response Errors Rx	Total number of error responses, sent by the Routing Engine to the services PICs, for the batch requests messages received.	All levels
Batch CDR's Tx	Total number of CDRs transmitted from services PICs to the Routing Engine.	All levels
CDR Count	Total number of CDRs transmitted to the CGF server.	All levels
Total WFA	Total number of request messages awaiting acknowledgements from the Routing Engine or the CGF server.	All levels

Table 9: show unified-edge sgw charging transfer statistics Output Fields (*continued*)

Field Name	Field Description	Level of Output
Open Batch Requests Timed out	Number of open batch requests timed out.	All levels
	Batch message requests are sent to write CDRs into local storage. This counter indicates that no response was received and that the request was timed out.	none
FPC/PIC	FPC and PIC slot numbers.	detail

Sample Output

```

show unified-edge sgw charging transfer statistics brief
user@host> show unified-edge sgw charging transfer statistics brief
Gateway: SGW
Charging Transfer Statistics
Transport-Profile : trans_p
  Redirection Requests    Rx: 0    Redirection Responses    Tx: 0
  DRT Responses          Rx: 0    DRT Requests             Tx: 0
  DRT successful Responses Rx: 0    DRT Error Responses      Rx: 0
  DRT Requests timed out  : 0    CGF Switch Back Times    : 0
  Batch Requests         Tx: 0    Batch Response Errors    Rx: 0
  Batch CDR's            Tx: 0    CDR Count                : 0
  Total WFA               : 0    Open Batch Requests Timed out : 0

Transport-Profile : trans_p2
  Redirection Requests    Rx: 0    Redirection Responses    Tx: 0
  DRT Responses          Rx: 0    DRT Requests             Tx: 0
  DRT successful Responses Rx: 0    DRT Error Responses      Rx: 0
  DRT Requests timed out  : 0    CGF Switch Back Times    : 0
  Batch Requests         Tx: 0    Batch Response Errors    Rx: 0
  Batch CDR's            Tx: 0    CDR Count                : 0
  Total WFA               : 0    Open Batch Requests Timed out : 0

show unified-edge sgw charging transfer statistics detail
user@host> show unified-edge sgw charging transfer statistics detail
Gateway: SGW
Charging Transfer Statistics
FPC/PIC: 1/1
Transport-profile : trans_p
  Redirection Requests    Rx: 0    Redirection Responses    Tx: 0
  DRT Responses          Rx: 0    DRT Requests             Tx: 0
  DRT successful Responses Rx: 0    DRT Error Responses      Rx: 0
  DRT Requests timed out  : 0    CGF Switch Back Times    : 0
  Batch Requests         Tx: 0    Batch Response Errors    Rx: 0
  Batch CDR's            Tx: 0    CDR Count                : 0
  Total WFA               : 0    Open Batch Requests Timed out : 0

Transport-profile : trans_p2
  Redirection Requests    Rx: 0    Redirection Responses    Tx: 0
  DRT Responses          Rx: 0    DRT Requests             Tx: 0
  DRT successful Responses Rx: 0    DRT Error Responses      Rx: 0
  DRT Requests timed out  : 0    CGF Switch Back Times    : 0
  Batch Requests         Tx: 0    Batch Response Errors    Rx: 0
  Batch CDR's            Tx: 0    CDR Count                : 0
  Total WFA               : 0    Open Batch Requests Timed out : 0

```

FPC/PIC: 3/1

Transport-profile : trans_p

Redirection Requests	Rx: 0	Redirection Responses	Tx: 0
DRT Responses	Rx: 0	DRT Requests	Tx: 0
DRT successful Responses	Rx: 0	DRT Error Responses	Rx: 0
DRT Requests timed out	: 0	CGF Switch Back Times	: 0
Batch Requests	Tx: 0	Batch Response Errors	Rx: 0
Batch CDR's	Tx: 0	CDR Count	: 0
Total WFA	: 0	Open Batch Requests Timed out	: 0

Transport-profile : trans_p2

Redirection Requests	Rx: 0	Redirection Responses	Tx: 0
DRT Responses	Rx: 0	DRT Requests	Tx: 0
DRT successful Responses	Rx: 0	DRT Error Responses	Rx: 0
DRT Requests timed out	: 0	CGF Switch Back Times	: 0
Batch Requests	Tx: 0	Batch Response Errors	Rx: 0
Batch CDR's	Tx: 0	CDR Count	: 0
Total WFA	: 0	Open Batch Requests Timed out	: 0

show unified-edge sgw charging transfer status

Syntax	show unified-edge sgw charging transfer status <brief detail> <fpc-slot <i>slot-number</i>> <gateway-name <i>name</i>> <pic-slot <i>slot-number</i>> <transport-profile-name <i>profile-name</i>>
Release Information	Command introduced in Junos OS Mobility Release 11.4W.
Description	Display the Charging Data Record (CDR) transfer status for the transport profiles on one or more Serving Gateways (S-GWs). If a gateway name is not specified, then the transfer status for all S-GWs are displayed.
Options	<p>none—(Same as brief) Display the total number of unacknowledged and buffered CDRs for the configured transport profiles for all S-GWs.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>fpc-slot <i>slot-number</i>—(Optional) Display the total number of unacknowledged and buffered CDRs for the configured transport profiles for the specified FPC slot number.</p> <p>gateway-name <i>name</i>—(Optional) Display the total number of unacknowledged and buffered CDRs for the configured transport profiles for the specified gateway.</p> <p>pic-slot <i>slot-number</i>—(Optional) Display the total number of unacknowledged and buffered CDRs for the configured transport profiles for the specified PIC slot number. You must first specify an FPC slot number before specifying the PIC slot number.</p> <p>transport-profile-name <i>profile-name</i>—(Optional) Display the total number of unacknowledged and buffered CDRs for the configured transport profiles for the specified transport profile.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show unified-edge sgw charging transfer statistics on page 154
List of Sample Output	show unified-edge sgw charging transfer status brief on page 159 show unified-edge sgw charging transfer status detail on page 159
Output Fields	Table 10 on page 158 lists the output fields for the show unified-edge sgw charging transfer status command. Output fields are listed in the approximate order in which they appear.

Table 10: show unified-edge sgw charging transfer status Output Fields

Field Name	Field Description	Level of Output
Gateway	Name of the S-GW.	All levels

Table 10: show unified-edge sgw charging transfer status Output Fields (*continued*)

FPC/PIC	FPC and PIC slot numbers.	detail
Transport-Profile	Name of the transport profile.	All levels
Transport-profile Id	ID of the transport profile.	detail
Total UnAck CDR's	Total number of CDRs (for the transport profile) sent to the charging gateway function (CGF) servers for which no acknowledgements were received.	All levels
Total Buffered CDR's	Total number of buffered CDRs (for the transport profile) in the services PICs.	All levels

Sample Output

```

show unified-edge sgw charging transfer status brief
user@host> show unified-edge sgw charging transfer status brief
Gateway: SGW
Charging Transfer Status
Transport-Profile : s_tsp
  Total UnAck CDR's      : 0
  Total Buffered CDR's   : 10

Transport-Profile : s_tsp2
  Total UnAck CDR's      : 0
  Total Buffered CDR's   : 0

show unified-edge sgw charging transfer status detail
user@host> show unified-edge sgw charging transfer status detail
Gateway: SGW
Charging Transfer Status
FPC/PIC: 2/1
Transport-profile      : s_tsp
Transport-profile Id   : 1
Total UnAck CDR's     : 0
Total Buffered CDR's   : 2

Transport-profile      : s_tsp2
Transport-profile Id   : 2
Total UnAck CDR's     : 0
Total Buffered CDR's   : 0

FPC/PIC: 3/1
Transport-profile      : s_tsp
Transport-profile Id   : 1
Total UnAck CDR's     : 0
Total Buffered CDR's   : 8

Transport-profile      : s_tsp2
Transport-profile Id   : 2
Total UnAck CDR's     : 0
Total Buffered CDR's   : 0

```

show unified-edge sgw charging trigger-profile

Syntax	show unified-edge ggsn-pgw charging trigger-profile <gateway <i>gateway-name</i>> <trigger-profile-name <i>profile-name</i>>
Release Information	Statement introduced in Junos OS Mobility Release 11.4W.
Description	Display the configuration of the trigger profiles for one or more Serving Gateways (S-GWs). If a gateway name is not specified, then information for all S-GWs are displayed.
Options	gateway <i>gateway-name</i> —(Optional) Display the trigger profile information for the specified gateway. trigger-profile-name <i>profile-name</i> —(Optional) Display the information for the specified trigger profile.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • trigger-profiles on page 111
List of Sample Output	show unified-edge sgw charging trigger-profile gateway SGW on page 161
Output Fields	Table 11 on page 160 lists the output fields for the show unified-edge sgw charging trigger-profile command. Output fields are listed in the approximate order in which they appear.

Table 11: show unified-edge sgw charging trigger-profile Output Fields

Field Name	Field Description
Gateway Name	Name of the S-GW
Profile Name	Name of the trigger profile.
Profile ID	ID of the trigger profile.
Time Limit	The time limit for the trigger profile, if any.
Volume Limit	The volume limit (in bytes) for the trigger profile, if any.
PLMN change trigger	<p>Indicates whether the public land mobile network (PLMN) change trigger is enabled or not.</p> <p>If this trigger is enabled, a PLMN change usually results in the Charging Data Record (CDR) being updated with the charging information and then closed.</p>
QoS change trigger	<p>Indicates whether the QoS change trigger is enabled or not.</p> <p>If this trigger is enabled, a QoS change usually results in a container being added to the CDR.</p>

Table 11: show unified-edge sgw charging trigger-profile Output Fields (*continued*)

Field Name	Field Description
RAT change trigger	Indicates whether the RAT change trigger is enabled or not. If this trigger is enabled, a RAT change usually results in the CDR being updated with the charging information and then closed.
SGSN/MME change trigger	Indicates whether the Serving GPRS Support Node (SGSN) or Mobility Management Entity (MME) change trigger is enabled or not. If this trigger is enabled, then for each change, the SGSN or MME address is recorded in the CDR.
User location change trigger	Indicates whether the user-location change trigger is enabled or not. If this trigger is enabled, a user location change usually results in the current container being closed and added to the CDR.
MS Timezone change trigger	Indicates whether the Mobile Station (MS) time zone change trigger is enabled. If this trigger is enabled, an MS time zone change usually results in the CDR being updated with the charging information and then closed.

Sample Output

```

show unified-edge sgw charging trigger-profile gateway SGW
user@host> show unified-edge sgw charging trigger-profile gateway SGW
Gateway Name: SGW
Profile Name: s_tp
Profile ID : 1
Profile Name: s_tp
Profile ID : 1
Time Limit: None
Volume Limit: 1024 Byte (Uplink and Downlink Combined)
PLMN change trigger: Enabled
QOS change trigger : Enabled
RAT change trigger : Enabled
SGSN/MME change trigger : Enabled
User location change trigger: Enabled
MS Timezone change trigger: Enabled

```


PART 4

Troubleshooting

- [Acquiring Troubleshooting Information on page 165](#)

CHAPTER 7

Acquiring Troubleshooting Information

- [Tracing Charging Operations on page 165](#)
- [Configuring S-GW Local Persistent Storage Traceoptions on page 167](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Tracing Charging Operations

Charging tracing operations track mobile charging operations and record them in a log file. The error descriptions captured in the log file provide detailed information to help you solve problems.

All log files are located in the `/var/log` directory. You cannot change the directory in which trace files are located. When the trace file reaches its maximum size, a `.0` is appended to the filename, then a new file is created with a `.1`, and finally a `.2`. When the maximum number of trace files is reached, the oldest trace file is overwritten.



NOTE: You should use care when tracing charging operations because it can have a performance impact.

To configure charging tracing operations:

1. Specify that you want to configure tracing options for charging operations.

[edit]

`user@host# edit unified-edge gateways ggsn-pgw MBG1 charging traceoptions`

2. (Optional) Configure the name for the file used for the trace output.
3. (Optional) Configure flags to filter the operations to be logged.

The mobile charging traceoptions configuration tasks are described in the following topics:

- [Configuring the Trace Log Filename on page 166](#)
- [Configuring the Tracing Flags on page 166](#)

Configuring the Trace Log Filename

By default, the name of the file that records trace output for mobile charging is **mobile-smd**. You can specify a different name with the **file** option to distinguish trace output for different session Dense Port Concentrators (DPCs). For example, you can specify the filename in the format *filename-msnumberfpcnumberpicnumber*.

To configure the filename for mobile charging tracing operations:

- Specify the name of the file used for the trace output.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging traceoptions]
user@host# set file filename
```

Configuring the Tracing Flags

To configure the flags for the events to be logged:

- Configure the flags.

```
[edit unified-edge gateways ggsn-pgw MBG1 charging traceoptions]
user@host# set flag flag
```

By default, only important events are logged. You can specify which trace operations are logged by including specific tracing flags. The following table describes the flags that you can include.

Flag	Description
all	Trace all operations
cdr-encoding	Trace CDR encoding
client-fsm	Trace client finite state machine (FSM)
config	Trace configuration events
fsm	Trace FSM
general	Trace general flow
group-fsm	Trace group FSM
init	Trace initialization events
ipc	Trace IPC
path-management	Trace path management module
request	Trace requests
resource	Trace resources

Flag	Description
response	Trace responses
timers	Trace timers
transport	Trace transport group
triggers	Trace trigger information

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring S-GW Local Persistent Storage Traceoptions

Local persistent storage tracing operations record detailed messages about the operation of Serving Gateway (S-GW) charging information storage services on the MobileNext Broadband Gateway. You can trace various types of S-GW local persistent storage operations such as file operations, journaling, mirroring, and other information. You can specify which trace operations are logged by including specific tracing flags and levels.

[Table 12 on page 167](#) describes the flags relating to the S-GW that you can include at the `[edit unified-edge gateways sgw gateway-name charging local-persistent-storage traceoptions flag]` hierarchy level.

Table 12: S-GW Local Persistent Storage Trace Flags

Flag	Description
all	Trace everything.
connection	Trace connection establishment with peers.
file-operations	Trace file open, write, and close operations.
general	Trace miscellaneous operations.
journaling	Trace file journaling operations.
mirror	Trace mirroring operations.

[Table 13 on page 168](#) describes the levels you can include.

Table 13: S-GW Local Persistent Storage Trace Levels

Level	Description
all	Match all levels.
error	Match error conditions.
info	Match informational messages.
notice	Match conditions that should be specially handled.
verbose	Match verbose messages.
warning	Match warning messages.

To configure tracing options for local persistent storage operations:

1. Specify that you want to configure tracing options for local persistent storage operations.

```
[edit unified-edge gateways sgw MBG2 charging local-persistent-storage]
user@host# edit traceoptions
```



NOTE: You can use the `no-remote-trace` statement at this level to disable remote tracing capabilities.

2. Configure the filename for the trace file.

```
[edit unified-edge gateways sgw MBG2 charging local-persistent-storage traceoptions]
user@host# set file datapath-log
```

3. (Optional) Configure the maximum size of each trace file.

```
[edit unified-edge gateways sgw MBG2 charging local-persistent-storage traceoptions]
user@host# set file size 100m
```



NOTE: When a trace file (for example, `sgw-lps-log`) reaches its maximum size, it is renamed `sgw-lps-log.0`, then `sgw-lps-log.1`, and so on, until the maximum number of trace files is reached. The oldest archived file is then overwritten.

4. Configure the tracing flag.

```
[edit unified-edge gateways sgw MBG2 charging local-persistent-storage traceoptions]
user@host# set flag all
```



NOTE: You should use care when tracing all operations on a gateway. This can have a performance impact.

5. Configure the tracing level.

```
[edit unified-edge gateways sgw MBG2 charging local-persistent-storage traceoptions]
user@host# set level error
```

6. View the trace file.

```
user@host# file show /var/log/sgw-lps-log
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)
- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)
- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)
- [Tracing Charging Operations on page 165](#)
- [Charging Data Records on page 5](#)
- [Configuring S-GW Traceoptions](#)
- [Configuring S-GW Data Path Traceoptions](#)
- [Configuring S-GW GTP Traceoptions](#)
- [Configuring S-GW Charging Traceoptions on page 169](#)

Configuring S-GW Charging Traceoptions

Charging tracing operations record detailed messages about the operation of Serving Gateway (S-GW) charging services on the MobileNext Broadband Gateway. You can trace various types of S-GW charging operations such as triggers, resources, configuration events, and other information. You can specify which trace operations are logged by including specific tracing flags and levels.

[Table 14 on page 169](#) describes the flags relating to the S-GW that you can include at the `[edit unified-edge gateways sgw gateway-name charging traceoptions flag]` hierarchy level.

Table 14: S-GW Charging Trace Flags

Flag	Description
<code>all</code>	Trace everything.
<code>cdr-encoding</code>	Trace Charging Detail Record (CDR) encoding.

Table 14: S-GW Charging Trace Flags (*continued*)

client-fsm	Trace client finite state machine (FSM).
config	Trace configuration events.
fsm	Trace FSM events.
general	Trace general events.
group-fsm	Trace group FSM events.
init	Trace initialization events.
ipc	Trace IPC events.
path-management	Trace path management module.
request	Trace requests.
resource	Trace resources.
response	Trace response.
timers	Trace timers.
transport	Trace transport group.
triggers	Trace trigger information.

[Table 15 on page 170](#) describes the levels you can include.

Table 15: S-GW Charging Trace Levels

Level	Description
all	Match all levels.
error	Match error conditions.
info	Match informational messages.
notice	Match conditions that should be specially handled.
verbose	Match verbose messages.
warning	Match warning messages.

To configure tracing options for charging operations:

1. Specify that you want to configure tracing options for charging operations.


```
[edit unified-edge gateways sgw MBG2 charging]
user@host# edit traceoptions
```



NOTE: You can use the `no-remote-trace` statement at this level to disable remote tracing capabilities.

2. Configure the filename for the trace file.

```
[edit unified-edge gateways sgw MBG2 charging traceoptions]
user@host# set file datapath-log
```

3. (Optional) Configure the maximum size of each trace file.

```
[edit unified-edge gateways sgw MBG2 charging traceoptions]
user@host# set file size 100m
```



NOTE: When a trace file (for example, `sgw-charging-log`) reaches its maximum size, it is renamed `sgw-charging-log.0`, then `sgw-charging-log.1`, and so on, until the maximum number of trace files is reached. The oldest archived file is then overwritten.

4. Configure the tracing flag.

```
[edit unified-edge gateways sgw MBG2 charging traceoptions]
user@host# set flag all
```



NOTE: You should use care when tracing all operations on a gateway. This can have a performance impact.

5. Configure the tracing level.

```
[edit unified-edge gateways sgw MBG2 charging traceoptions]
user@host# set level error
```

6. View the trace file.

```
user@host# file show /var/log/sgw-charging-log
```

Related Documentation

- [Configuring Charging on page 13](#)
- [Configuring S-GW-Specific Charging Parameters on page 15](#)
- [Configuring S-GW Global Charging Profiles and Selection Order on page 17](#)
- [Configuring S-GW Local Persistent Storage Traceoptions on page 167](#)
- [Configuring GTP Prime for Transferring CDRs on page 19](#)
- [Configuring Persistent Storage on page 21](#)
- [Configuring Transport Profiles on page 25](#)
- [Configuring Charging Trigger Events on page 26](#)

- [Configuring CDR Attributes on page 28](#)
- [Configuring Charging Profiles on page 30](#)
- [Configuring Charging Profiles for APNs on page 31](#)
- [Tracing Charging Operations on page 165](#)
- [Charging Data Records on page 5](#)
- [Configuring S-GW Traceoptions](#)
- [Configuring S-GW Data Path Traceoptions](#)
- [Configuring S-GW GTP Traceoptions](#)
- [Configuring S-GW Local Persistent Storage Traceoptions on page 167](#)

PART 5

Index

- [Index on page 175](#)

Index

Symbols

#, comments in configuration statements.....	xiii
(), in syntax descriptions.....	xiii
< >, in syntax descriptions.....	xii
[], in configuration statements.....	xiii
{ }, in configuration statements.....	xiii
(pipe), in syntax descriptions.....	xiii

B

braces, in configuration statements.....	xiii
brackets	
angle, in syntax descriptions.....	xii
square, in configuration statements.....	xiii
broadband gateway	
configuring charging.....	15
configuring S-GW global charging profiles.....	17
traceoptions.....	167, 169

C

CDR profiles	
configuring.....	28
cdr-aggregation-limit statement.....	34
cdr-profile statement.....	35
cdr-profiles statement.....	37
cdr-release statement	
charging gateways.....	38
CDRs	
GTP Prime properties.....	19
cdrs-per-file statement.....	39
charging	
configuring.....	13
configuring on broadband gateway.....	15
configuring S-GW global profiles.....	17
configuring S-GW selection order.....	17
disabling persistent storage.....	132
enabling persistent storage.....	131
S-GW local persistent storage	
traceoptions.....	167
S-GW traceoptions.....	169

charging configurations	
managing.....	123
monitoring.....	123
charging profiles	
APN	
configuring.....	31
CDR profiles.....	28
configuring.....	30
transport profiles.....	25
trigger profiles.....	26
charging statement.....	40
charging-gateways statement.....	44
charging-profiles statement.....	45
clear unified-edge sgw charging cdr	
command.....	126
clear unified-edge sgw charging cdr wfa	
command.....	127
clear unified-edge sgw charging	
local-persistent-storage statistics	
command.....	128
clear unified-edge sgw charging path statistics	
command.....	129
clear unified-edge sgw charging transfer statistics	
command.....	130
comments, in configuration statements.....	xiii
configuring S-GW	
charging configuration.....	15, 17
container-limit statement.....	46
conventions	
text and syntax.....	xii
curly braces, in configuration statements.....	xiii
customer support.....	xiii
contacting JTAC.....	xiii
D	
default-profile statement.....	47
default-rating-group statement.....	48
default-service-id statement.....	49
description statement	
CDR profiles.....	50
charging profiles.....	50
transport profiles.....	50
trigger profiles.....	50
destination-ipv4-address statement	
GTP Prime.....	51
destination-port statement	
GTP Prime.....	52
direction statement	
trigger profiles.....	53

disable-replication statement.....	54	mobile charging	
disk-space-policy statement.....	55	flags for tracing operations.....	166
documentation		log filenames for tracing operations.....	166
comments on.....	xiii	tracing operations.....	165
down-detect-time statement		mobile subscribers	
GTP Prime.....	56	CDR profiles.....	28
E		charging profiles.....	30
echo-interval statement		APN.....	31
GTP Prime.....	57	monitoring.....	123
edit unified-edge gateways statement		persistent storage of CDR.....	21
hierarchy.....	33	tracing operations.....	165
enable-reduced-partial-cdrs statement.....	58	transport profiles.....	25
exclude statement		trigger profiles.....	26
trigger profiles.....	59	mtu statement	
exclude-ie-options statement.....	62	transport profiles.....	78
F		N	
file-age statement.....	66	n3-requests statement	
file-creation-policy statement.....	67	GTP Prime.....	79
file-format statement.....	68	no-path-management statement	
file-name-private-extension statement.....	69	GTP Prime.....	80
file-size statement.....	71	O	
font conventions.....	xii	offline charging	
G		configuring.....	13
global-profile statement		offline statement	
Serving Gateway.....	72	transport profiles.....	81
GTP Prime peers		trigger profiles.....	82
GTP Prime properties.....	20	P	
GTP Prime properties		parentheses, in syntax descriptions.....	xiii
configuring.....	19, 20	peer statement	
gtp statement.....	73	GTP Prime.....	83
H		peer order	
header-type statement		charging gateways.....	84
GTP Prime.....	74	peer-order statement	
home-profile statement.....	75	charging gateways.....	85
L		pending-queue-size statement	
local persistent storage		GTP Prime.....	86
S-GW traceoptions.....	167	persistent storage	
local-persistent-storage-options statement.....	76	configuring.....	21
local-storage statement.....	77	configuring the SSD.....	23, 24
M		disabling for charging.....	132
manuals		ejecting the SSD.....	24
comments on.....	xiii	enabling for charging.....	131
		formatting SSD.....	134
		initializing the SSD.....	23
		preparing SSD.....	133, 134

removing SSD.....	133
tracing operations.....	22
persistent-storage-order statement.....	87
profile-id statement.....	88
profile-selection-order statement	
Serving Gateway.....	89

R

reconnect-time statement	
GTP Prime.....	90
request system storage unified-edge charging	
media start command.....	131
request system storage unified-edge charging	
media stop command.....	132
request system storage unified-edge media eject	
command.....	133
request system storage unified-edge media prepare	
command.....	134
roamer-profile statement.....	91

S

S-GW	
charging traceoptions.....	169
configuring global charging profiles.....	17
local persistent storage traceoptions.....	167
selection order	
S-GW charging configuration.....	17
service-mode statement	
charging profiles.....	92
transport profiles.....	94
sgsn-mme-change-limit statement	
serving gateway.....	95
show unified-edge sgw charging global statistics	
command.....	135
show unified-edge sgw charging path statistics	
command.....	144
show unified-edge sgw charging path status.....	149
show unified-edge sgw charging service-mode	
command.....	152
show unified-edge sgw charging transfer statistics	
command.....	154
show unified-edge sgw charging transfer status	
command.....	158
show unified-edge sgw charging trigger-profile	
command.....	160
show unified-edge sgw local-persistent-storage	
statistics.....	138

source-interface statement	
GTP Prime.....	96
peer.....	96
support, technical See technical support	
switch-back-time statement.....	97
syntax conventions.....	xii

T

t3-response statement	
GTP Prime.....	98
tariff-time-list statement.....	99
technical support	
contacting JTAC.....	xiii
time-limit statement.....	100
traceoptions	
charging.....	169
local persistent storage.....	167
traceoptions statement	
charging.....	101
local persistent storage.....	104
tracing operations	
for persistent storage.....	22
mobile charging.....	165
mobile subscribers.....	165
transport profiles	
configuring.....	25
transport-profile statement.....	106
transport-profiles statement.....	108
transport-protocol statement	
GTP Prime.....	109
trigger profiles	
configuring.....	26
trigger-profile statement.....	110
trigger-profiles statement.....	111

U

user-name statement	
local persistent storage.....	112

V

version statement	
GTP Prime.....	113
visitor-profile statement.....	114
volume-limit statement.....	115

W

watermark-level-1 statement.....	116
watermark-level-2 statement.....	117
watermark-level-3 statement.....	118

world-readable statement	
local persistent storage.....	119