

## Built-In Ethernet Port for the SRX210 Services Gateway

---

The SRX210 Services Gateway uses `ge-0/0/0` as a management port to perform initial device setup.

Before initial configuration, when the factory default configuration is active, the device attempts to perform autoinstallation by obtaining a device configuration through all its connected interfaces, including `ge-0/0/0`. The services gateway acts as a DHCP client out of the built-in Ethernet ports.

If the services gateway does not find a DHCP server within a few seconds, the device acts as a DHCP server and assigns an IP address as `192.168.1.1/24`.

With the device temporarily acting as a DHCP server, you can manually configure it with the J-Web interface. Any DHCP client host, for example, a PC or laptop computer, directly connected to `ge-0/0/0` receives an address on the `192.168.1.1/24` network.



**NOTE:** The DHCP functionality for initial setup is different from the configurable DHCP server functionality of the services gateway during operation.

---

Once you connect your laptop or PC to `ge-0/0/0`, you can use a Web browser to visit the address `192.168.1.1/24`, access the J-Web Quick Configuration Set Up page, and complete the initial configuration of the device.

After you perform the initial configuration and commit it by clicking **OK** on the Quick Configuration Set Up page, the configured device can no longer act as a DHCP server. Therefore, to continue using the device as a management interface you should configure the IP address of the interface as part of the initial configuration.

- Related Topics**
- SRX210 Services Gateway Basic Connectivity Overview
  - SRX210 Services Gateway Basic Connectivity Settings
  - Management Access for the SRX210 Services Gateway
  - Connecting an SRX210 Services Gateway to the J-Web Interface
  - Connecting an SRX210 Services Gateway to the CLI Locally

---

Published: 2009-10-26