

EX 4200 Switch—Front-Panel LEDs

The front panel of an EX 4200 switch has three LEDs on the far right side of the panel, next to the LCD (see Figure 1 on page 1).

Figure 1: Front Panel LEDs in an EX 4200 Switch

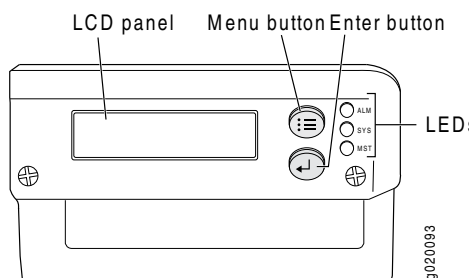


Table 1 on page 1 describes the LEDs in an EX 4200 switch, their colors and state, and the status they indicate.

Table 1: Front Panel LEDs in an EX 4200 Switch

LED Label	Color	State and Description
ALM (Alarm)	Unlit	There is no alarm.
	Red	There is an alarm.
SYS (System)	Green	<ul style="list-style-type: none"> ■ On steadily—JUNOS software for EX-series switches has been loaded on the switch. ■ Blinking—The switch is booting.
MST (Master)	Green	<ul style="list-style-type: none"> ■ On steadily—The switch is the master in the virtual chassis configuration. ■ Blinking—The switch is the backup in the virtual chassis configuration. ■ Off—The switch is a member (linecard member) in the virtual chassis configuration.

- Related Topics**
- EX 4200 Switch—Front-Panel Description
 - Power Supplies in EX-series Switches

