

J-series™ Services Router

Getting Started Guide

Release 7.2

Juniper Networks, Inc.

1194 North Mathilda Avenue

Sunnyvale, California 94089

USA

408-745-2000

www.juniper.net

Part Number: 530-013027-01, Revision 1

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., Copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, the Juniper Networks logo, NetScreen, NetScreen Technologies, the NetScreen logo, NetScreen-Global Pro, ScreenOS, and GigaScreen are registered trademarks of Juniper Networks, Inc. in the United States and other countries.

The following are trademarks of Juniper Networks, Inc.: ERX, ESP, E-series, Instant Virtual Extranet, Internet Processor, J2300, J4300, J6300, J-Protect, J-series, J-Web, JUNOS, JUNOScope, JUNOScript, JUNOSe, M5, M7i, M10, M10i, M20, M40, M40e, M160, M320, M-series, MMD, NetScreen-5GT, NetScreen-5XP, NetScreen-5XT, NetScreen-25, NetScreen-50, NetScreen-204, NetScreen-208, NetScreen-500, NetScreen-5200, NetScreen-5400, NetScreen-IDP 10, NetScreen-IDP 100, NetScreen-IDP 500, NetScreen-Remote Security Client, NetScreen-Remote VPN Client, NetScreen-SA 1000 Series, NetScreen-SA 3000 Series, NetScreen-SA 5000 Series, NetScreen-SA Central Manager, NetScreen Secure Access, NetScreen-SM 3000, NetScreen-Security Manager, NMC-RX, SDX, Stateful Signature, T320, T640, T-series, and TX Matrix. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners. All specifications are subject to change without notice.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Copyright © 2005, Juniper Networks, Inc. All rights reserved.

J-series™ Services Router Getting Started Guide, Release 7.2
Copyright © 2005, Juniper Networks, Inc.
All rights reserved. Printed in USA.

Writing: Michael Bushong, Taffy Everts, Walter Goralski, Joshua Kim, Jerry Isaac, Archana Maheshwari, Laura Phillips, Cheryl Potter, Frank Reade, Swapna Steiger, and Alan Twigg
Editing: Taffy Everts and Stella Hackell
Illustration: Faith Bradford Brown and Nathaniel Woodward
Cover Design: Edmonds Design

Revision History
13 April 2005—Revision 1.

The information in this document is current as of the date listed in the revision history.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer or otherwise revise this publication without notice.

Products made or sold by Juniper Networks (including the ERX-310, ERX-705, ERX-710, ERX-1410, ERX-1440, M5, M7i, M10, M10i, M20, M40, M40e, M160, M320, and T320 routers, T640 routing node, and the JUNOS and SDX-300 software) or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. The JUNOS software has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

SOFTWARE LICENSE

The terms and conditions for using this software are described in the software license contained in the acknowledgment to your purchase order or, to the extent applicable, to any reseller agreement or end-user purchase agreement executed between you and Juniper Networks. By using this software, you indicate that you understand and agree to be bound by those terms and conditions. Generally speaking, the software license restricts the manner in which you are permitted to use the software and may contain prohibitions against certain uses. The software license may state conditions under which the license is automatically terminated. You should consult the license for further details. For complete product documentation, please see the Juniper Networks Web site at www.juniper.net/techpubs.

End User License Agreement

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are Juniper Networks, Inc. and its subsidiaries (collectively "Juniper"), and the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, and updates and releases of such software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

a. Customer shall use the Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller, unless the applicable Juniper documentation expressly permits installation on non-Juniper equipment.

b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees.

c. Other Juniper documentation for the Software (such as product purchase documents, documents accompanying the product, the Software user manual(s), Juniper's website for the Software, or messages displayed by the Software) may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, concurrent users, sessions, subscribers, nodes, or transactions, or require the purchase of separate licenses to use particular features, functionalities, or capabilities, or provide temporal or geographical limits. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use the Software on non-Juniper equipment where the Juniper documentation does not expressly permit installation on non-Juniper equipment; (j) use the Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; or (k) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** If the Software is distributed on physical media (such as CD), Juniper warrants for 90 days from delivery that the media on which the Software is delivered will be free of defects in material and workmanship under normal use. This limited warranty extends only to the Customer. Except as may be expressly provided in separate documentation from Juniper, no other warranties apply to the Software, and the Software is otherwise provided AS IS. Customer assumes all risks arising from use of the Software. Customer's sole remedy and Juniper's entire liability under this limited warranty is that Juniper, at its option, will repair or replace the media containing the Software, or provide a refund, provided that Customer makes a proper warranty claim to Juniper, in writing, within the warranty period. Nothing in this Agreement shall give rise to any obligation to support the Software. Any such support shall be governed by a separate, written agreement. To the maximum extent permitted by law, Juniper shall not be liable for any liability for lost profits, loss of data or costs or procurement of substitute goods or services, or for any special, indirect, or consequential damages arising out of this Agreement, the Software, or any Juniper or Juniper-supplied software. In no event shall Juniper be liable for damages arising from unauthorized or improper use of any Juniper or Juniper-supplied software.

EXCEPT AS EXPRESSLY PROVIDED HEREIN OR IN SEPARATE DOCUMENTATION PROVIDED FROM JUNIPER AND TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES

JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees for the Software are exclusive of taxes, withholdings, duties, or levies (collectively "Taxes"). Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to you may contain encryption or other capabilities restricting your ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14(ALT III) as applicable.

13. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement.

If you have any questions about this agreement, contact Juniper Networks at the following address:

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, CA 94089
USA
Attn: Contracts Administrator

Abbreviated Table of Contents

About This Guide

xiii

Part 1

J-series Overview

| | | |
|------------------|---|-----------|
| Chapter 1 | Introducing the J-series Services Router | 3 |
| Chapter 2 | System Overview | 7 |
| Chapter 3 | J-series User Interface Overview | 33 |

Part 2

Installing a Services Router

| | | |
|------------------|--|------------|
| Chapter 4 | Preparing for Router Installation | 53 |
| Chapter 5 | Installing and Connecting a Services Router | 63 |
| Chapter 6 | Establishing Basic Connectivity | 75 |
| Chapter 7 | Configuring Autoinstallation | 97 |
| Chapter 8 | Installing and Managing J-series Licenses | 103 |

Part 3

Maintaining a Services Router

| | | |
|-------------------|---|------------|
| Chapter 9 | Replacing and Troubleshooting Hardware Components | 117 |
| Chapter 10 | Contacting Customer Support and Returning Hardware | 139 |

| | | |
|-------------------|---|------------|
| Part 4 | J-series Requirements and Specifications | |
| | <hr/> | |
| Chapter 11 | Network Cable Specifications and Connector Pinouts | 149 |
| Chapter 12 | Safety and Regulatory Compliance Information | 161 |
| Part 5 | Index | |
| | <hr/> | |

Table of Contents

| | |
|---|-------------|
| About This Guide | xiii |
| Objectives | xiii |
| Audience..... | xiv |
| How to Use This Guide | xiv |
| Document Conventions | xv |
| Related Juniper Networks Documentation..... | xvi |
| Documentation Feedback..... | xviii |
| Requesting Support..... | xviii |

Part 1

J-series Overview

| | | |
|------------------|---|----------|
| Chapter 1 | Introducing the J-series Services Router | 3 |
| | J-series Services Router Overview | 3 |
| | J-series Software Features and Licenses..... | 4 |
| Chapter 2 | System Overview | 7 |
| | J2300 Services Router Hardware Features | 7 |
| | J2300 Chassis | 7 |
| | J2300 Routing Engine | 10 |
| | J2300 Boot Devices | 10 |
| | J2300 Boot Sequence | 10 |
| | J2300 Front Panel..... | 11 |
| | ALARM LED..... | 11 |
| | Power Button and POWER ON LED | 11 |
| | CONFIG Button and LED | 12 |
| | Console Port | 13 |
| | J2300 USB Port | 13 |
| | J2300 Physical Interface Module (PIM)..... | 13 |
| | J2300 LAN Ports..... | 14 |
| | J2300 Power System..... | 15 |
| | J2300 Cooling System | 15 |
| | J4300 and J6300 Services Router Hardware Features | 16 |
| | J4300 and J6300 Chassis..... | 17 |
| | Midplane..... | 21 |
| | J4300 and J6300 Routing Engine | 21 |
| | J4300 and J6300 Boot Devices..... | 22 |
| | J4300 and J6300 Boot Sequence..... | 22 |
| | J4300 and J6300 Front Panel | 22 |
| | ALARM LED..... | 23 |

| | | |
|------------------|---|-----------|
| | Power Button and POWER ON LED | 23 |
| | CONFIG Button and Configuration LED | 23 |
| | Console Port | 23 |
| | J4300 and J6300 USB Port | 23 |
| | J4300 and J6300 LAN Ports | 24 |
| | J4300 and J6300 Removable Compact Flash Drive | 24 |
| | J4300 and J6300 Physical Interface Modules (PIMs) | 25 |
| | J4300 Power System | 26 |
| | J6300 Power System | 26 |
| | J4300 and J6300 Cooling System | 27 |
| | Software Overview | 28 |
| | Routing Engine and Packet Forwarding Engine | 29 |
| | Kernel and Microkernel | 29 |
| | Processes | 29 |
| | Management Process | 30 |
| | Chassis Process | 30 |
| | Routing Protocols Process | 30 |
| | Interface Process | 31 |
| | Forwarding Process | 31 |
| | User Interfaces | 31 |
| Chapter 3 | J-series User Interface Overview | 33 |
| | User Interface Overview | 33 |
| | J-Web Overview | 33 |
| | CLI Overview | 34 |
| | Comparison of Configuration Interfaces | 34 |
| | Before You Begin | 36 |
| | Using the J-Web Interface | 36 |
| | Starting the J-Web Interface | 37 |
| | J-Web Layout | 37 |
| | J-Web Sessions | 41 |
| | Using the Command-Line Interface | 41 |
| | CLI Command Hierarchy | 41 |
| | Starting the CLI | 42 |
| | CLI Operational Mode | 43 |
| | CLI Configuration Mode | 44 |
| | CLI Basics | 45 |
| | Editing Keystrokes | 45 |
| | Command Completion | 46 |
| | Online Help | 46 |
| | Configuring the CLI Environment | 47 |
| Part 2 | Installing a Services Router | |
| Chapter 4 | Preparing for Router Installation | 53 |
| | General Site Guidelines | 53 |
| | Desktop and Wall Mounting Requirements | 54 |
| | Rack Requirements | 54 |
| | Rack Size and Strength | 54 |

| | | |
|------------------|--|-----------|
| | Spacing of Mounting Holes..... | 55 |
| | Connection to Building Structure | 55 |
| | Router Environmental Tolerances | 55 |
| | Fire Safety Requirements | 56 |
| | Fire Suppression | 56 |
| | Fire Suppression Equipment | 56 |
| | Power Guidelines, Requirements, and Specifications | 57 |
| | Site Electrical Wiring Guidelines | 57 |
| | Signaling Limitations..... | 57 |
| | Radio Frequency Interference..... | 58 |
| | Electromagnetic Compatibility | 58 |
| | Router Power Requirements | 58 |
| | AC Power, Connection, and Power Cord Specifications | 59 |
| | Network Cable Specifications..... | 60 |
| | Site Preparation Checklist..... | 60 |
| Chapter 5 | Installing and Connecting a Services Router | 63 |
| | Before You Begin..... | 63 |
| | Unpacking the J-series Services Router | 64 |
| | Installing the J2300 Services Router..... | 65 |
| | Installing the J2300 Services Router on a Desk..... | 65 |
| | Installing the J2300 Services Router on a Wall | 66 |
| | Installing the J2300 Services Router into a Rack | 67 |
| | Installing the J4300 or J6300 Services Router | 68 |
| | Connecting Interface Cables to the Services Router | 69 |
| | Chassis Grounding..... | 70 |
| | Connecting Power to the Services Router..... | 70 |
| | Powering a Services Router On and Off | 72 |
| Chapter 6 | Establishing Basic Connectivity | 75 |
| | Basic Connectivity Terms | 75 |
| | Basic Connectivity Overview | 76 |
| | Router Identification..... | 77 |
| | Root Password..... | 77 |
| | Time Zone and System Time | 77 |
| | Network Settings..... | 77 |
| | Default Gateway..... | 78 |
| | Backup Router..... | 78 |
| | Loopback Address..... | 78 |
| | Management Interface Address..... | 79 |
| | Before Initial Configuration..... | 79 |
| | During Initial Configuration | 79 |
| | After Initial Configuration | 79 |
| | Management Access | 80 |
| | Secure Sockets Layer Access | 80 |
| | Before You Begin..... | 81 |
| | Configuring the Services Router with J-Web Quick Configuration | 82 |
| | Connecting to the J-Web Interface..... | 82 |
| | Configuring Basic Settings with Quick Configuration | 83 |
| | Configuring HTTPS Web Access with Quick Configuration | 86 |
| | Configuring the Services Router with a Configuration Editor | 88 |
| | Connecting to the CLI..... | 88 |

| | | |
|------------------|--|------------|
| | Configuring Basic Settings with a Configuration Editor | 90 |
| | Verifying Basic Connectivity | 95 |
| | Displaying Basic Connectivity Configurations | 95 |
| Chapter 7 | Configuring Autoinstallation | 97 |
| | Autoinstallation Terms | 97 |
| | Autoinstallation Overview | 98 |
| | Autoinstallation Interfaces | 98 |
| | Autoinstallation Process on Services Router | 98 |
| | Automatic Configuration of a New Services Router | 99 |
| | Before You Begin | 100 |
| | Configuring Autoinstallation with a Configuration Editor | 100 |
| | Verifying Autoinstallation | 102 |
| | Verifying Autoinstallation Status | 102 |
| Chapter 8 | Installing and Managing J-series Licenses | 103 |
| | J-series License Overview | 103 |
| | Software Feature Licenses | 104 |
| | Port Licenses | 104 |
| | License Key Components | 105 |
| | Before You Begin | 105 |
| | Managing J-series Licenses with the J-Web Interface | 106 |
| | Adding New Licenses with the J-Web Interface | 108 |
| | Deleting Licenses with the J-Web Interface | 108 |
| | Displaying License Keys with the J-Web Interface | 108 |
| | Downloading Licenses with the J-Web Interface | 109 |
| | Managing J-series Licenses with the CLI | 109 |
| | Adding New Licenses with the CLI | 109 |
| | Deleting a License with the CLI | 110 |
| | Saving License Keys with the CLI | 110 |
| | Verifying J-series License Management | 110 |
| | Displaying Installed Licenses | 110 |
| | Displaying License Usage | 112 |
| | Displaying Installed License Keys | 112 |
| Part 3 | Maintaining a Services Router | |

| | | |
|------------------|--|------------|
| Chapter 9 | Replacing and Troubleshooting Hardware Components | 117 |
| | Replacing Hardware Components | 117 |
| | Tools and Parts Required | 118 |
| | Replacing the Console Port Cable | 118 |
| | Replacing a PIM | 118 |
| | Removing a PIM | 119 |
| | Installing a PIM | 120 |
| | Replacing PIM Cables | 121 |
| | Removing a PIM Cable | 121 |
| | Installing a PIM Cable | 122 |
| | Removing and Installing the Primary Compact Flash Disk | 123 |

| | |
|---|-----|
| Removing the Primary Compact Flash Disk | 123 |
| Installing the Primary Compact Flash Disk | 124 |
| Removing and Installing the Removable Compact Flash Disk | 125 |
| Removing the Removable Compact Flash Disk | 125 |
| Installing the Removable Compact Flash Disk | 126 |
| Removing and Installing the USB Storage Device | 127 |
| Removing the USB Storage Device | 128 |
| Installing the USB Storage Device | 128 |
| Removing and Installing DRAM Modules | 129 |
| Removing a DRAM Module | 130 |
| Installing a DRAM Module | 132 |
| Replacing a Power Supply Cord in a J2300 or J4300 Router | 132 |
| Replacing Power System Components in a J6300 Router | 133 |
| Removing a Power Supply in a J6300 Router | 133 |
| Installing a Power Supply in a J6300 Router | 134 |
| Replacing a Power Supply Cord in a J6300 Router | 135 |
| Troubleshooting Hardware Components | 136 |
| Chassis Alarm Conditions | 136 |
| Contacting the Juniper Networks Technical Assistance Center | 138 |

Chapter 10 Contacting Customer Support and Returning Hardware 139

| | |
|--|-----|
| Locating Component Serial Numbers | 139 |
| PIM Serial Number Label | 141 |
| J6300 Power Supply Serial Number Labels | 141 |
| Contacting Customer Support | 141 |
| Information You Might Need to Supply to JTAC | 142 |
| Return Procedure | 142 |
| Packing a Router or Component for Shipment | 143 |
| Tools and Parts Required | 143 |
| Packing the Services Router for Shipment | 143 |
| Packing Components for Shipment | 145 |

Part 4

J-series Requirements and Specifications

Chapter 11 Network Cable Specifications and Connector Pinouts 149

| | |
|--|-----|
| Serial PIM Cable Specifications | 149 |
| RS-232 DTE Cable Pinout | 150 |
| RS-232 DCE Cable Pinout | 150 |
| RS-422/449 (EIA-449) DTE Cable Pinout | 151 |
| RS-422/449 (EIA-449) DCE Cable Pinout | 152 |
| EIA-530A DTE Cable Pinout | 153 |
| EIA-530A DCE Cable Pinout | 154 |
| V.35 DTE Cable Pinout | 154 |
| V.35 DCE Cable Pinout | 155 |
| X.21 DTE Cable Pinout | 156 |
| X.21 DCE Cable Pinout | 157 |
| RJ-45 Connector Pinouts for the Routing Engine (Ethernet) Port | 157 |
| DB-9 Connector Pinouts for the Console Port | 157 |
| E1 and T1 RJ-48 Cable Pinouts | 158 |
| ADSL RJ-11 Connector Pinout | 160 |

| | | |
|-------------------|--|------------|
| Chapter 12 | Safety and Regulatory Compliance Information | 161 |
| | Definition of Safety Warning Levels | 161 |
| | Safety Guidelines and Warnings | 163 |
| | General Safety Guidelines and Warnings | 163 |
| | Qualified Personnel Warning | 165 |
| | Preventing Electrostatic Discharge Damage | 165 |
| | Electrical Safety Guidelines and Warnings | 166 |
| | General Electrical Safety Guidelines | 167 |
| | AC Power Electrical Safety Guidelines | 168 |
| | Grounded Equipment Warning | 168 |
| | Warning Statement for Norway and Sweden | 169 |
| | In Case of Electrical Accident | 169 |
| | Multiple Power Supplies Disconnection Warning | 170 |
| | Power Disconnection Warning | 171 |
| | TN Power Warning | 172 |
| | Telecommunication Line Cord Warning | 174 |
| | Installation Safety Guidelines and Warnings | 175 |
| | Chassis Lifting Guidelines | 175 |
| | Installation Instructions Warning | 176 |
| | Rack-Mounting Requirements and Warnings | 177 |
| | Ramp Warning | 181 |
| | Laser and LED Safety Guidelines and Warnings | 182 |
| | General Laser Safety Guidelines | 182 |
| | Class 1 Laser Product Warning | 183 |
| | Class 1 LED Product Warning | 183 |
| | Laser Beam Warning | 184 |
| | Radiation from Open Port Apertures Warning | 185 |
| | Maintenance and Operational Safety Guidelines and Warnings | 187 |
| | Battery Handling Warning | 187 |
| | Jewelry Removal Warning | 189 |
| | Lightning Activity Warning | 191 |
| | Operating Temperature Warning | 192 |
| | Product Disposal Warning | 194 |
| | Agency Approvals | 196 |
| | Compliance Statements for EMC Requirements | 197 |
| | Canada | 197 |
| | Japan | 198 |
| | Taiwan | 198 |
| | United States | 198 |
| | FCC Part 15 Statement | 199 |
| | FCC Part 68 Statement | 199 |
| Part 5 | Index | |
| | Index | 203 |

About This Guide

This preface provides the following guidelines for using this manual and related Juniper Networks, Inc., technical documents:

- Objectives on page xiii
- Audience on page xiv
- How to Use This Guide on page xiv
- Document Conventions on page xv
- Related Juniper Networks Documentation on page xvi
- Documentation Feedback on page xviii
- Requesting Support on page xviii

Objectives

This guide contains an overview, basic instructions, and specifications for J-series Services Routers. It explains how to prepare your site for installation, unpack and install a Services Router and its components, power on the router, install licenses, and establish basic connectivity.



NOTE: This guide documents Release 7.2 of the JUNOS software. For additional information about J-series Services Routers—either corrections to or omissions from this guide—see the *J-series Services Router Release Notes* at <http://www.juniper.net>.

J-series Services Router operations are controlled by the JUNOS Internet software. You direct the JUNOS software through either a Web browser or a command-line interface (CLI) to perform the tasks shown in Table 1.

Table 1: Capabilities of J-series Interfaces

| J-series Interface | Capabilities |
|-----------------------------------|---|
| J-Web graphical browser interface | <ul style="list-style-type: none"> ■ Quick (basic) configuration ■ Monitoring, configuration, diagnosis, and management |
| JUNOS CLI | Monitoring, configuration, diagnosis, and management |

J-series Services Router guides provide complete instructions for using the J-Web interface, but they are not a comprehensive resource for using the JUNOS CLI. For CLI information, see the JUNOS software manuals listed in “Related Juniper Networks Documentation” on page xvi.

Audience

This guide is designed for anyone who installs and sets up a J-series Services Router or prepares a site for Services Router installation. The guide is intended for the following audiences:

- Customers with technical knowledge of and experience with networks and the Internet
- Network administrators who install, configure, and manage Internet routers but are unfamiliar with the JUNOS software
- Network administrators who install, configure, and manage products of Juniper Networks

Personnel operating the equipment must be trained and competent; must not conduct themselves in a careless, willfully negligent, or hostile manner; and must abide by the instructions provided by the documentation.

How to Use This Guide

Because you can configure and manage a Services Router in several ways, most chapters in J-series Services Router guides contain multiple sets of instructions:

- Configuration—For many Services Router features, you can use J-Web Quick Configuration for basic setup. For more extensive configuration of all Services Router features, use the J-Web configuration editor or the JUNOS CLI configuration editor.
- Maintenance—To monitor, diagnose, and manage a Services Router, use the J-Web interface for common tasks, or use CLI operational mode commands.

J-series Services Routers are documented in three guides. Table 2 shows where Services Router instructions are located.

Table 2: Location of Tasks in J-series Guides

| Services Router Tasks | Location of Instructions |
|---|---|
| Installing hardware and establishing basic connectivity | <i>J-series Services Router Getting Started Guide</i> |
| Configuring interfaces and routing protocols | <i>J-series Services Router Configuration Guide</i> |
| Managing users and operations, monitoring performance, upgrading software, and diagnosing common problems | <i>J-series Services Router Administration Guide</i> |

Document Conventions

Table 3 defines the notice icons used in this guide.

Table 3: Notice Icons




| Icon | Meaning | Description |
|--|--------------------|---|
|  | Informational note | Indicates important features or instructions. |
|  | Caution | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning | Alerts you to the risk of personal injury or death. |

Table 4 defines the text and syntax conventions used in this guide.

Table 4: Text and Syntax Conventions

| Convention | Description | Examples |
|---------------------------------|--|--|
| Bold sans serif typeface | Represents text that you type. | To enter configuration mode, type the <code>configure</code> command: user@host> configure |
| Fixed-width typeface | Represents output that appears on the terminal screen. | user@host> show chassis alarms No alarms currently active |
| <i>Italic typeface</i> | <ul style="list-style-type: none"> Introduces important new terms. Identifies book names. Identifies RFC and Internet draft titles. | <ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>JUNOS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i> |

| Convention | Description | Examples |
|-----------------------------------|---|--|
| <i>Italic sans serif typeface</i> | Represents variables (options for which you substitute a value) in commands or configuration statements. | Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i> |
| Sans serif typeface | Represents names of configuration statements, commands, files, and directories; IP addresses; configuration hierarchy levels; or labels on routing platform components. | <ul style="list-style-type: none"> ■ To configure a stub area, include the stub statement at the [edit protocols ospf area <i>area-id</i>] hierarchy level. ■ The console port is labeled CONSOLE. |
| < > (angle brackets) | Enclose optional keywords or variables. | stub <default-metric <i>metric</i> >; |
| (pipe symbol) | Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity. | broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>) |
| # (pound sign) | Indicates a comment specified on the same line as the configuration statement to which it applies. | rsvp { # Required for dynamic MPLS only |
| [] (square brackets) | Enclose a variable for which you can substitute one or more values. | community name members [<i>community-ids</i>] |
| Indentation and braces ({ }) | Identify a level in the configuration hierarchy. | [edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } } |
| ; (semicolon) | Identifies a leaf statement at a configuration hierarchy level. | |
| J-Web GUI Conventions | | |
| Bold typeface | Represents J-Web graphical user interface (GUI) items you click or select. | <ul style="list-style-type: none"> ■ In the Logical Interfaces box, select All Interfaces. ■ To cancel the configuration, click Cancel. |
| > (bold right angle bracket) | Separates levels in a hierarchy of J-Web selections. | In the configuration editor hierarchy, select Protocols > Ospf . |

Related Juniper Networks Documentation

J-series Services Routers are documented in three guides. Although the J-series guides provide instructions for configuring and managing a Services Router with the JUNOS CLI, they are not a comprehensive JUNOS software resource. For complete

documentation of the statements and commands described in J-series guides, see the JUNOS software manuals listed in Table 5.

Table 5: J-series Guides and Related JUNOS Software Publications

| Chapter in a J-series Guide | Corresponding JUNOS Software Manual |
|---|---|
| J-series Services Router Getting Started Guide | |
| “J-series User Interface Overview” | <i>JUNOS System Basics Configuration Guide</i> |
| “Establishing Basic Connectivity” | |
| “Configuring Autoinstallation” | |
| J-series Services Router Configuration Guide | |
| “Using J-series Configuration Tools” | <i>JUNOS System Basics Configuration Guide</i> |
| “Configuring Network Interfaces” | ■ <i>JUNOS Network Interfaces and Class of Service Configuration Guide</i> |
| “Configuring Point-to-Point Protocol over Ethernet” | ■ <i>JUNOS Network and Services Interfaces Command Reference</i> |
| “Routing Overview” | ■ <i>JUNOS Routing Protocols Configuration Guide</i> |
| “Configuring Static Routes” | ■ <i>JUNOS Protocols, Class of Service, and System Basics Command Reference</i> |
| “Configuring a RIP Network” | |
| “Configuring an OSPF Network” | |
| “Configuring BGP Sessions” | |
| “Multiprotocol Label Switching Overview” | ■ <i>JUNOS MPLS Applications Configuration Guide</i> |
| “Configuring Signaling Protocols for Traffic Engineering” | ■ <i>JUNOS Routing Protocols Configuration Guide</i> |
| “Configuring Virtual Private Networks” | ■ <i>JUNOS VPNs Configuration Guide</i> |
| “Configuring IPsec for Secure Packet Exchange” | ■ <i>JUNOS System Basics Configuration Guide</i> |
| | ■ <i>JUNOS Services Interfaces Configuration Guide</i> |
| | ■ <i>JUNOS Network and Services Interfaces Command Reference</i> |
| “Multicast Overview” | <i>JUNOS Multicast Protocols Configuration Guide</i> |
| “Configuring a Multicast Network” | |
| “Policy, Firewall Filter, and Class-of-Service Overview” | <i>JUNOS Policy Framework Configuration Guide</i> |
| “Configuring Routing Policies” | |
| “Configuring Firewall Filters and NAT” | ■ <i>JUNOS Network Interfaces and Class of Service Configuration Guide</i> |
| | ■ <i>JUNOS Policy Framework Configuration Guide</i> |
| | ■ <i>JUNOS Services Interfaces Configuration Guide</i> |

| Chapter in a J-series Guide | Corresponding JUNOS Software Manual |
|--|---|
| "Configuring Class of Service with DiffServ" | <ul style="list-style-type: none"> ■ <i>JUNOS Network Interfaces and Class of Service Configuration Guide</i> ■ <i>JUNOS Protocols, Class of Service, and System Basics Command Reference</i> |
| J-series Services Router Administration Guide | |
| "Managing Users and Operations" | <i>JUNOS System Basics Configuration Guide</i> |
| "Configuring SNMP for Network Management" | <i>JUNOS Network Management Configuration Guide</i> |
| "Configuring the DHCP Server" | <i>JUNOS System Basics Configuration Guide</i> |
| "Configuring and Monitoring Alarms" | <i>JUNOS System Basics Configuration Guide</i> |
| "Monitoring and Diagnosing a Services Router" | <ul style="list-style-type: none"> ■ <i>JUNOS Protocols, Class of Service, and System Basics Command Reference</i> ■ <i>JUNOS Network and Services Interfaces Command Reference</i> |
| "Monitoring Real-Time Performance" | <i>JUNOS Network and Services Interfaces Command Reference</i> |

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <http://www.juniper.net/techpubs/docbug/docbugreport.html>. If you are using e-mail, be sure to include the following information with your comments:

- Document name
- Document part number
- Page number
- Software release version

Requesting Support

For technical support, open a support case with the Case Manager link at <http://www.juniper.net/support/> or call 1-888-314-JTAC (from the United States, Canada, or Mexico) or 1-408-745-9500 (from elsewhere).

Part 1

J-series Overview

- Introducing the J-series Services Router on page 3
- System Overview on page 7
- J-series User Interface Overview on page 33

Chapter 1

Introducing the J-series Services Router

J-series Services Routers provide stable, reliable, efficient IP routing, WAN and LAN connectivity, and management services for small to medium-sized enterprise networks. Services Routers typically connect small, branch, or regional offices to a central site router, and link Internet service provider (ISP) networks.

This chapter contains the following topics:

- J-series Services Router Overview on page 3
- J-series Software Features and Licenses on page 4

J-series Services Router Overview

J-series Services Routers are available in three models of increasing bandwidth, described in Table 6.

All J-series Services Routers run on the JUNOS software and are reachable through the J-Web browser interface on the JUNOS command-line interface. For details, see “J-series User Interface Overview” on page 33.

Table 6: J-series Models

| Model | Description | Bandwidth |
|-----------------------|--|---|
| J2300 Services Router | Remote or branch office router. Smaller chassis (1 U) with a nonredundant AC power supply, 256 MB to 512 MB of memory, and a Universal Serial Bus (USB) port for external storage. Three available versions have two Fast Ethernet LAN interfaces plus one of the following sets of fixed WAN and serial interfaces: <ul style="list-style-type: none">■ Dual T1 interfaces■ Dual E1 interfaces■ Two synchronous serial ports | Up to twice the capacity of a T1, E1, or serial interface |

| Model | Description | Bandwidth |
|-----------------------|---|---|
| J4300 Services Router | <p>Regional or branch office router.</p> <p>Larger chassis (2 U) with a nonredundant AC power supply, 256 MB to 512 MB of memory, and a Universal Serial Bus (USB) port for external storage. In addition to two fixed Fast Ethernet LAN interfaces, this model has six open slots for the following Physical Interface Modules (PIMs):</p> <ul style="list-style-type: none"> ■ 2-port Fast Ethernet PIM ■ 2-port T1 or E1 PIM ■ 2-port Serial PIM ■ 1-port ADSL Annex A PIM ■ 1-port ADSL Annex B PIM | Up to eight times the capacity of a T1, E1, or serial interface |
| J6300 Services Router | <p>Regional or central site router.</p> <p>Larger chassis (2 U) with a redundant AC power supply, 256 MB to 1 GB of memory, and a Universal Serial Bus (USB) port for external storage. In addition to two fixed Fast Ethernet LAN interfaces, this model has six open slots for the following Physical Interface Modules (PIMs):</p> <ul style="list-style-type: none"> ■ 2-port Fast Ethernet PIM ■ 2-port T1 or E1 PIM ■ 2-port Serial PIM ■ 1-port DS3 (T3) PIM ■ 1-port ADSL Annex A PIM ■ 1-port ADSL Annex B PIM | Up to DS3 interface capacity |

J-series Software Features and Licenses

J-series Services Routers provide the software features listed in Table 7. You must purchase a separate software license to obtain some software features. For more information about licenses, see “Installing and Managing J-series Licenses” on page 103.

Table 7: Summary of J-series Features and License Requirements

| Feature Category | J-series Feature | Separate License |
|--------------------|-----------------------------|------------------|
| Internet Protocols | IPv4 | |
| | IPv6 routing and forwarding | |

| Feature Category | J-series Feature | Separate License |
|------------------------------|---|-----------------------------------|
| Routing and Multicast | Open Shortest Path First (OSPF) | |
| | Border Gateway Protocol (BGP) | License required for advanced BGP |
| | Routing Information Protocol version 1 (RIPv1) and RIPv2 | |
| | Static routes | |
| | Intermediate System-to-Intermediate System (IS-IS) | |
| | Multiprotocol Label Switching (MPLS): | |
| | <ul style="list-style-type: none"> ■ Layer 2 and Layer 3 virtual private networks (VPNs) ■ VPN routing and forwarding (VRF) table labels ■ Traffic engineering protocols: <ul style="list-style-type: none"> ■ Label Distribution Protocol (LDP) ■ Resource Reservation Protocol (RSVP) | |
| | Multicast: | |
| | <ul style="list-style-type: none"> ■ Internet Group Management Protocol version 3 (IGMPv3) ■ Protocol Independent Multicast (PIM) ■ Distance Vector Multicast Routing Protocol (DVMRP) ■ Single-source multicast | |
| | | |
| IP Address Management | Static addresses | |
| | Dynamic Host Configuration Protocol (DHCP) | |
| Encapsulation | Ethernet: | |
| | <ul style="list-style-type: none"> ■ Media access control (MAC) encapsulation ■ 802.1p tagging ■ Point-to-Point Protocol over Ethernet (PPPoE) ■ Asynchronous Transfer Mode (ATM) for asymmetrical digital subscriber line (ADSL) ■ Circuit cross-connect (CCC) ■ Translational cross-connect (TCC) | |
| | Synchronous Point-to-Point Protocol (PPP) | |
| | Frame Relay | |
| | High-level Data Link Control (HDLC) | |
| | Serial encapsulation over RS-232, RS-449, X.21, V.35, and EIA-530 connections | |
| | 802.1Q filtering and forwarding | |
| | Multilink Frame Relay | |
| | Multilink PPP | |
| | | |
| | | |
| | | |

| Feature Category | J-series Feature | Separate License |
|--|---|-----------------------------|
| Traffic Management | Policing and shaping | |
| | Class-based queuing with prioritization | |
| | Weighted random early detection (WRED) | |
| | Queuing by virtual LAN (VLAN), data link connection identifier (DLCI), interface, or bundle | |
| Security | Network attack detection | |
| | Denial-of-service (DoS) and distributed DoS protection | |
| | Generic routing encapsulation (GRE), IP-in-IP, and IP Security (IPSec) tunnels | License required for IPSec |
| | 56-bit Data Encryption Standard (DES) and 168-bit 3DES encryption | |
| | MD5 and Secure Hash Algorithm (SHA-1) authentication | |
| | Replay attack prevention | |
| | Stateful firewall packet filters | License required |
| Voice Support | Compressed Real-time Transport Protocol (CRTP) | |
| High Availability | Virtual Router Redundancy Protocol (VRRP) | |
| | Graceful restart according to IETF standards | |
| | Redundant interfaces | |
| System Management | JUNOScope network manager | |
| | J-Web browser interface—for Services Router configuration and management | |
| | JUNOScript XML application programming interface (API) | |
| | JUNOS command-line interface (CLI)—for Services Router configuration and management through the console, telnet, or SSH | |
| | Simple Network Management Protocol version 1 (SNMPv1) and SNMPv2 | |
| Traffic Analysis | J-Flow flow monitoring and accounting | License required for J-Flow |
| | Real-time performance monitoring (RPM) | |
| Activity Logging and Monitoring | System log | |
| | Traceroute | |
| Administration | Supports the following external administrator databases: | |
| | ■ RADIUS | |
| | ■ Lightweight Directory Access Protocol (LDAP) | |
| | ■ SecurID | |
| | Autoinstallation | |
| | Configuration rollback | |
| | Button-operated configuration rescue (CONFIG) | |
| | Confirmation of configuration changes | |
| | Software upgrades | |

Chapter 2

System Overview

J-series Services Routers are available in three models.

This chapter contains the following topics:

- J2300 Services Router Hardware Features on page 7
- J4300 and J6300 Services Router Hardware Features on page 16
- Software Overview on page 28

J2300 Services Router Hardware Features

This section contains the following topics:

- J2300 Chassis on page 7
- J2300 Routing Engine on page 10
- J2300 Front Panel on page 11
- J2300 Physical Interface Module (PIM) on page 13
- J2300 LAN Ports on page 14
- J2300 Power System on page 15
- J2300 Cooling System on page 15

J2300 Chassis

The J2300 Services Router chassis is a rigid sheet metal structure that houses all the other router components (see Figure 1, Figure 2, and Figure 3). The chassis can be installed in many types of racks or cabinets, on a wall, or on a desk. For information about acceptable rack types, see “Rack Requirements” on page 54.

In addition to the features described in subsequent sections, the chassis includes the following features (see Figure 1 and Figure 2):

- One pair of metal brackets that can be attached to the side of the chassis. You can use the brackets for mounting the chassis in a rack or cabinet or on a wall.
- One electrostatic discharge (ESD) point, a PEM nut at the rear of the chassis.



WARNING: Before removing or installing components of a functioning router, attach an ESD strap to an ESD point and place the other end of the strap around your bare wrist. Failure to use an ESD strap could result in damage to the router.

The router is connected to earth ground through the AC power cord. The router must be connected to earth ground during normal operation.

For additional safety information, see “Safety and Regulatory Compliance Information” on page 161.

Figure 1: Front of J2300 Chassis

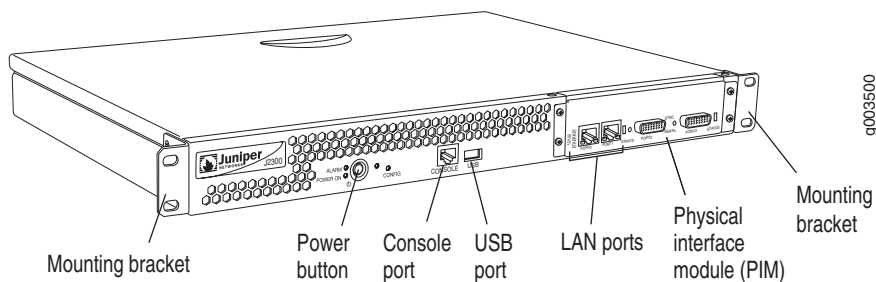


Figure 2: Rear of J2300 Chassis

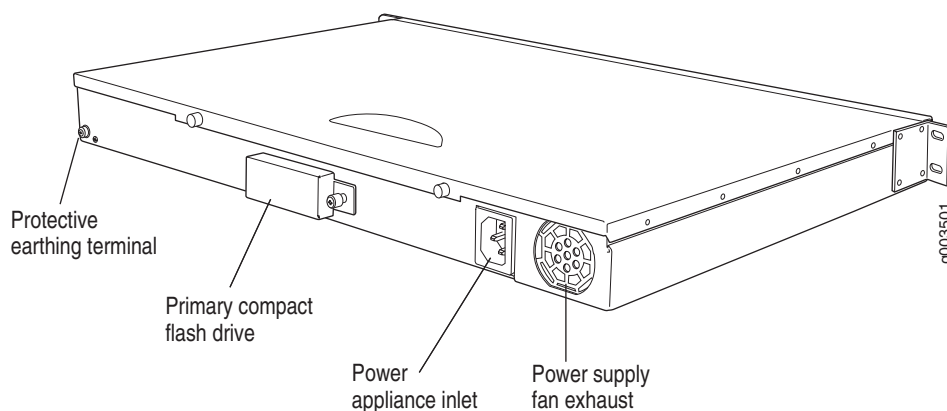


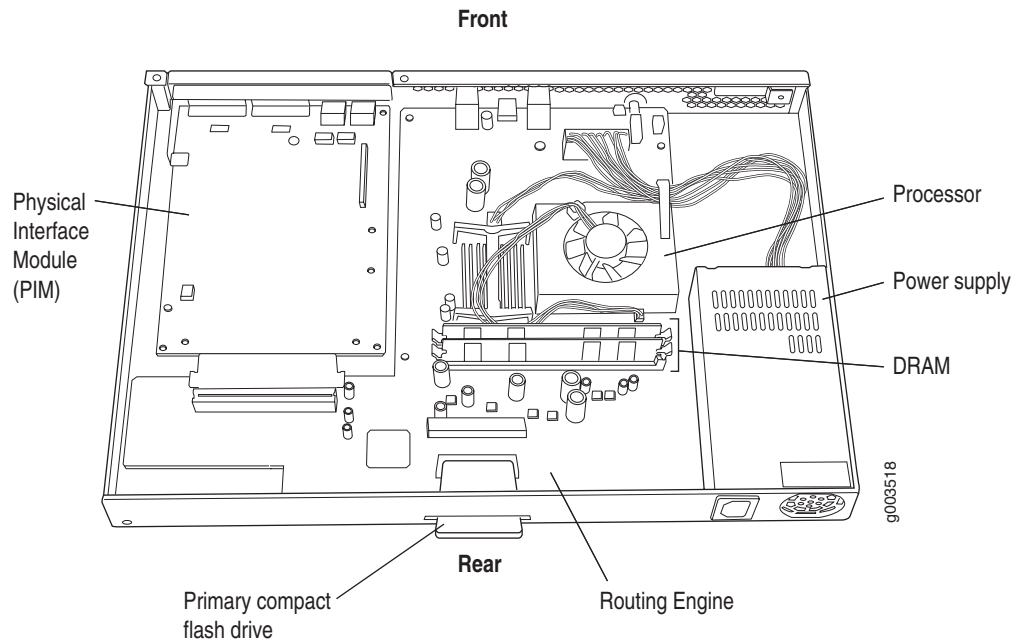
Figure 3: J2300 Hardware Components

Table 8 summarizes the physical specifications for the router chassis.

Table 8: J2300 Physical Specifications

| Description | Value |
|--------------------|---|
| Chassis dimensions | ■ 1.75 in. (4.4 cm) high |
| | ■ 17.25 in. (43.8 cm) wide—19 in. (48.3 cm) wide with mounting brackets attached |
| | ■ 12.37 in. (31.4 cm) deep—plus 0.5 in. (1.27 cm) of hardware that protrudes from the chassis front |
| Router weight | 12 lb (5.4 kg) |

J2300 Routing Engine

The Routing Engine provides three main functions:

- Creates the packet forwarding switch fabric for the Services Router, providing route lookup, filtering, and switching on incoming data packets, then directing outbound packets to the appropriate interface for transmission to the network.
- Maintains the routing tables used by the router and controls the routing protocols that run on the router.
- Provides control and monitoring functions for the router, including controlling power and monitoring system status.

The Routing Engine consists of the following components:

- Processor—Creates the packet forwarding switch fabric for the router and runs JUNOS Internet software to maintain the router's routing tables and routing protocols. The Routing Engine has a Pentium-class processor.
- DRAM—Buffers incoming packets and provides storage for the routing and forwarding tables and for other Routing Engine processes.
- Compact flash drive—Provides primary storage for software images, configuration files, and microcode. The compact flash drive is accessible from the rear of the router, and is field-replaceable. For information about replacing the compact flash drive, see “Removing and Installing the Primary Compact Flash Disk” on page 123.
- PCI bus—Provides the interface to the PIMs.
- EPROM—Stores the serial number of the Routing Engine.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM installed), issue the `show chassis routing-engine` command.

J2300 Boot Devices

The J2300 Services Router can boot from two devices:

- Primary compact flash disk
- USB storage device


J2300 Boot Sequence

Normally, the Services Router boots from the primary compact flash disk. If the compact flash disk fails, the router attempts to boot from the removable USB storage device, if present, which is the alternate boot device.

J2300 Front Panel

The front panel of the Services Router (Figure 4) allows you to view router status LEDs, access the console port, and perform simple control functions.

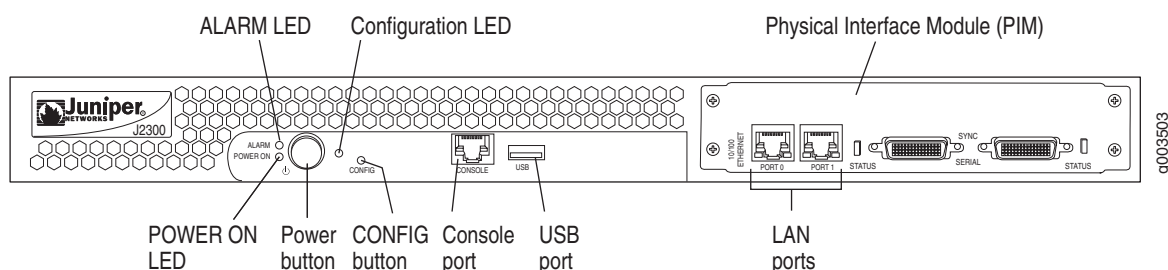Figure 4: Front Panel of J2300 Services Router



For information about the components of the front panel, see the following sections:

- ALARM LED on page 11
- Power Button and POWER ON LED on page 11
- CONFIG Button and LED on page 12
- Console Port on page 13
- J2300 USB Port on page 13

ALARM LED

The ALARM LED is located to the left of the power button on the front panel (see Figure 4). The yellow (amber) LED lights to indicate a critical condition that can result in a system shutdown or a less severe condition that requires monitoring or maintenance. When the condition is corrected, the light turns off.



NOTE: The ALARM LED on the Services Router lights yellow whether the alarm condition is major (red) or minor (yellow).

To deactivate alarms, you must clear the condition that caused the alarm. For a list of alarms that can occur on the router, see “Chassis Alarm Conditions” on page 136.

Power Button and POWER ON LED

The power button is located on the left side of the front panel (see Figure 4). You can use the power button to power the Services Router on and off. When you power on the router, the Routing Engine boots as the power supply completes its startup sequence.

The POWER ON LED is located to the left of the power button on the front panel. Table 9 describes the POWER ON LED.

Table 9: POWER ON LED

| Color | State | Description |
|-------|-------------|---|
| Green | Off | Router is unplugged, or is powered off and in standby mode. |
| | On steadily | Router is powered on and is either booting or functioning normally. |
| | Blinking | Power button has been pressed and quickly released, and the router is gracefully shutting down. |

After the router is powered on, status indicators—such as LEDs on the front panel and `show chassis` command output—can take up to 60 seconds to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

If you need to power off the router after the Routing Engine finishes booting, use the J-Web interface or the CLI to halt the Services Router first. For instructions, see the *J-series Services Router Administration Guide*.

CONFIG Button and LED

Use the CONFIG button to return the router to a configuration that you have determined is a stable, known configuration. The CONFIG button is recessed to prevent it from being pressed accidentally.

The CONFIG button performs two recovery operations:

- Rescue—Press and release the CONFIG button to load and commit the rescue configuration, if you have set it. To set the rescue configuration, see the *J-series Services Router Configuration Guide*.
- Clear—Press and hold the CONFIG button for 15 seconds or more, until the configuration LED blinks red to indicate the clear operation is in progress. The clear operation deletes *all* configurations on the router (including the rescue configuration and backup configurations) and loads and commits the factory configuration.

Table 10 describes the configuration LED.

Table 10: Configuration LED

| Color | State | Description |
|-------|-------------|--|
| Green | Blinking | Rescue configuration is being loaded. |
| | On steadily | Rescue or factory configuration is loaded and committed. |
| Red | Blinking | <ul style="list-style-type: none"> ■ Current committed configuration and all previous versions are being deleted. ■ Factory configuration is being loaded. |
| | On steadily | Operation to return the router to the rescue or factory configuration failed. |

Console Port

You can use the console port to connect to the Routing Engine through an RJ-45 serial cable. From the console port, you can use the CLI to configure the router. The console port is configured as data terminal equipment (DTE) and supports the RS-232 (EIA-232) standard.

J2300 USB Port

The slot labeled USB on the front panel of the router (see Figure 4) accepts a USB storage device or USB storage device adapter with a compact flash disk installed, as defined in the *CompactFlash Specification* published by the CompactFlash Association. When the USB storage device is installed and configured, it automatically acts as a secondary boot device, if the primary compact flash disk fails on startup. Depending on the size of the USB storage device, you can also configure it to receive any core files generated during a failure. For information about configuring a USB storage device, see the *J-series Services Router Administration Guide*.



NOTE: For a list of supported USB storage devices, see the *J-series Services Router Release Notes* at <http://www.juniper.net>.

J2300 Physical Interface Module (PIM)

The fixed Physical Interface Modules (PIMs) in J2300 Services Routers provide the physical connection to various network media types, receiving incoming packets from the network and transmitting outgoing packets to the network. The PIM is equipped with a dedicated network processor that forwards incoming data packets to the Routing Engine, and receives outgoing

data packets from the Routing Engine. During this process, the PIM performs framing and line-speed signaling for its medium type.

Each PIM supported on the router has the following components:

- One or more cable connector ports—Accept a network media connector.
- Status LED—Indicates port status. Table 11 describes the meaning of the LED states.

For pinouts of PIM cable connectors, see “Network Cable Specifications and Connector Pinouts” on page 149. For PIM replacement instructions, see “Replacing a PIM” on page 118.

Table 11: PIM Status LED

| Color | State | Description |
|-------|-------------|---|
| Green | On steadily | Online with no alarms or failures. |
| Red | On steadily | Active with a local alarm; router has detected a failure. |

J2300 LAN Ports

All J-series Services Routers include two fixed 10/100Base-TX Fast Ethernet ports. The LAN ports receive incoming packets from the network and transmit outgoing packets to the network. Each port is equipped with a dedicated network processor that forwards incoming data packets to the Routing Engine, and receives outgoing data packets from the Routing Engine.

The LAN ports are located on the front panel of the router (see Figure 4) and are configured like the ports on a Physical Interface Module (PIM). The LAN ports are not field-replaceable. The ports, labeled **PORT 0** and **PORT 1**, correspond to **fe-0/0/0** and **fe-0/0/1** respectively, for configuration.

For pinouts of Fast Ethernet cable connectors, see “Network Cable Specifications and Connector Pinouts” on page 149.

Each port has two LEDs located on each side of the bottom of the port. Table 12 describes the LAN port LEDs.

Table 12: LAN Port LEDs

| Function | Color | State | Description |
|----------|-------|-------------|--|
| Link | Green | On steadily | Port is online. |
| Activity | Green | Blinking | Port is receiving data. |
| | | Off | Port might be on, but is not receiving data. |

J2300 Power System

The J2300 Services Router uses AC power. The autosensing power supply (see Figure 2) distributes the different output voltages to the router components according to their voltage requirements.

The power supply is fixed in the chassis, and is not field-replaceable. It has a single AC appliance inlet that requires a dedicated AC power feed.


For information about site power preparations, see “Power Guidelines, Requirements, and Specifications” on page 57. For information about connecting the router to power and ground, see “Connecting Power to the Services Router” on page 70.

J2300 Cooling System

The cooling system consists of the following components:

- A fan on the Routing Engine’s processor
- A fan on the power supply

The airflow produced by these fans keeps router components within the acceptable temperature range (see Figure 5).

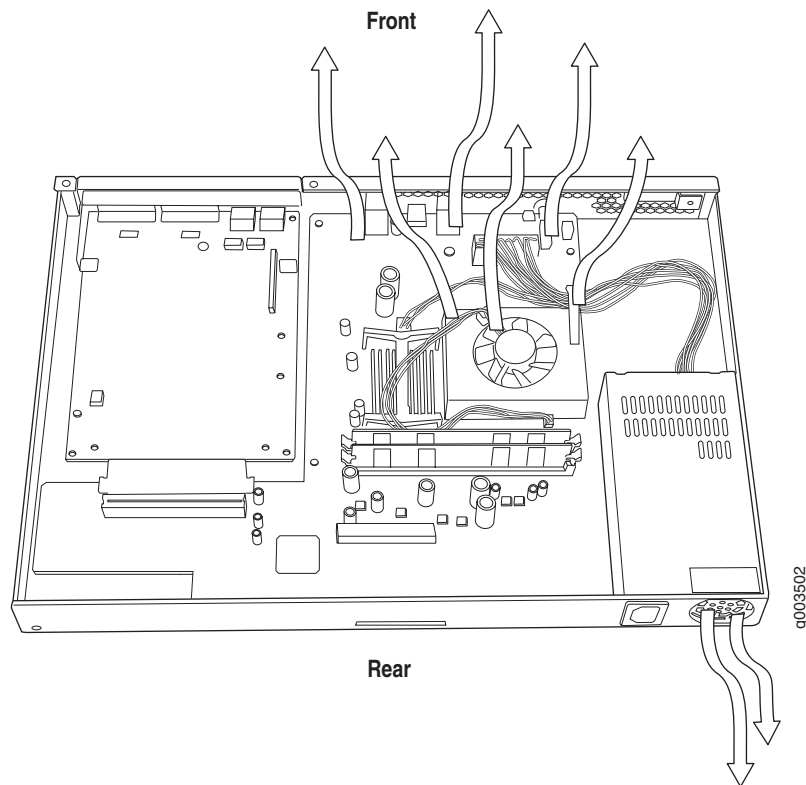Figure 5: Airflow Through the J2300 Chassis

The Routing Engine monitors the temperature of the router components. If the ambient maximum temperature specification is exceeded and the router cannot be adequately cooled, the Routing Engine shuts down the hardware components.

J4300 and J6300 Services Router Hardware Features

This section contains the following topics:

- J4300 and J6300 Chassis on page 17
- Midplane on page 21
- J4300 and J6300 Routing Engine on page 21
- J4300 and J6300 Front Panel on page 22
- J4300 and J6300 Physical Interface Modules (PIMs) on page 25
- J4300 Power System on page 26
- J6300 Power System on page 26

- J4300 and J6300 Cooling System on page 27

J4300 and J6300 Chassis

The J4300 and J6300 Services Router chassis is a rigid sheet metal structure that houses all the other router components (see Figure 6, Figure 7, Figure 8, and Figure 9). The chassis can be installed in many types of racks or cabinets. For information about acceptable rack types, see “Rack Requirements” on page 54.

In addition to the features described in subsequent sections, the chassis includes the following features (see Figure 6, Figure 7, and Figure 8):

- One pair of metal brackets attached to the side of the chassis. You can use the brackets for mounting the chassis in a rack or cabinet.
- One electrostatic discharge (ESD) point, a banana plug receptacle at the front of the chassis.



WARNING: Before removing or installing components of a functioning router, attach an ESD strap to the ESD point and place the other end of the strap around your bare wrist. Failure to use an ESD strap could result in damage to the router.

The router is connected to earth ground through the AC power cord. The router must be connected to earth ground during normal operation.

For additional safety information, see “Safety and Regulatory Compliance Information” on page 161.

-
- One protective earthing terminal, a PEM nut at the rear of the chassis.

Figure 6: Front of J4300 and J6300 Chassis

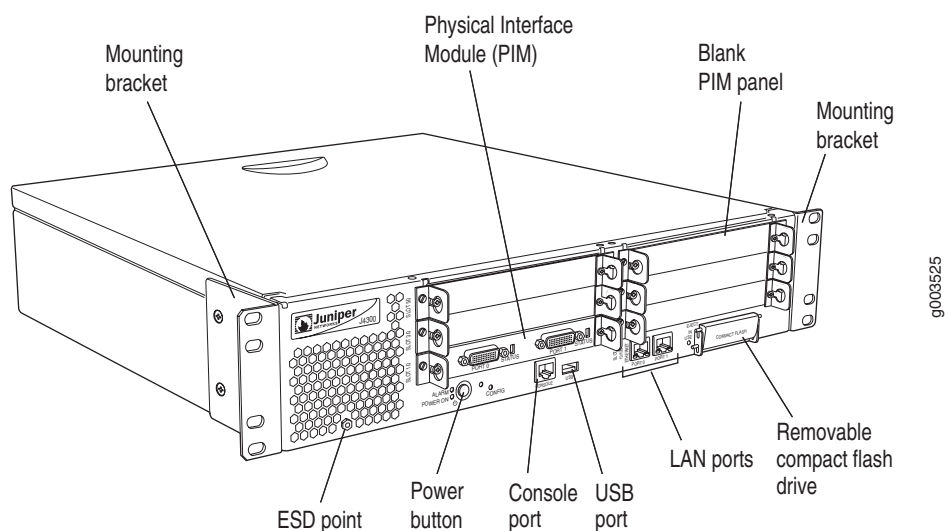


Figure 7: Rear of J4300 Chassis

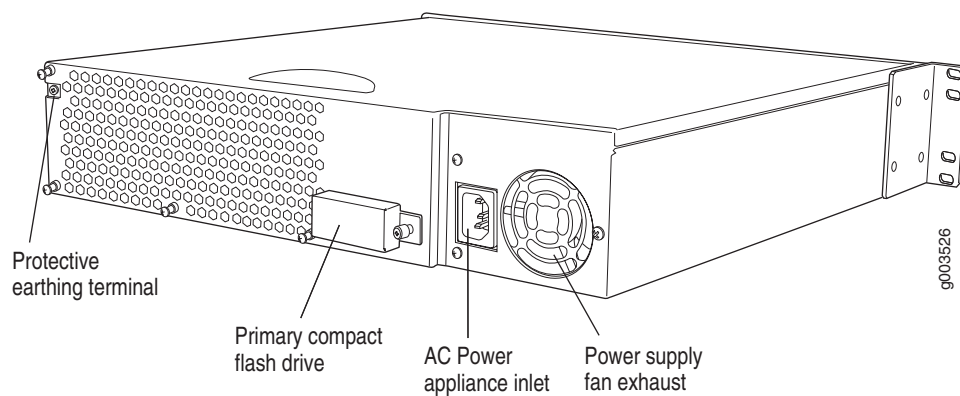


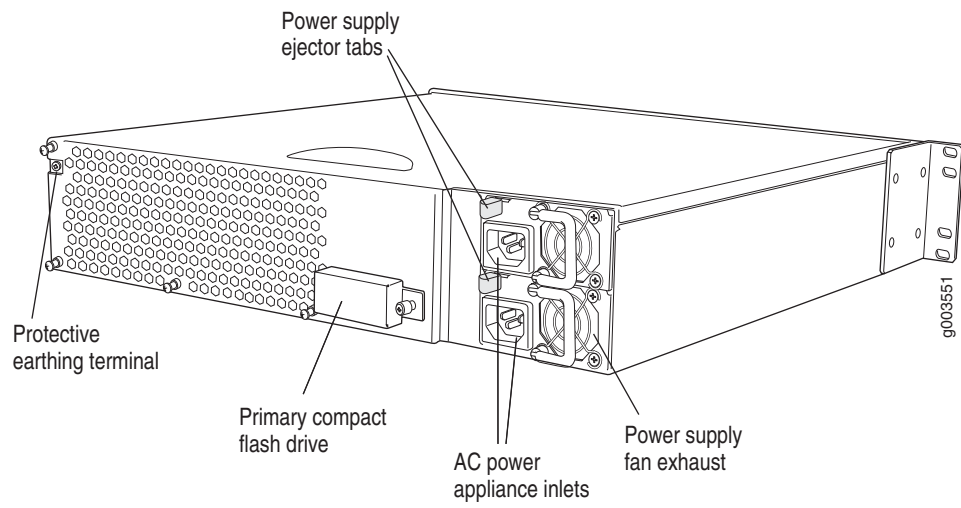
Figure 8: Rear of J6300 Chassis

Figure 9: J4300 and J6300 Hardware Components

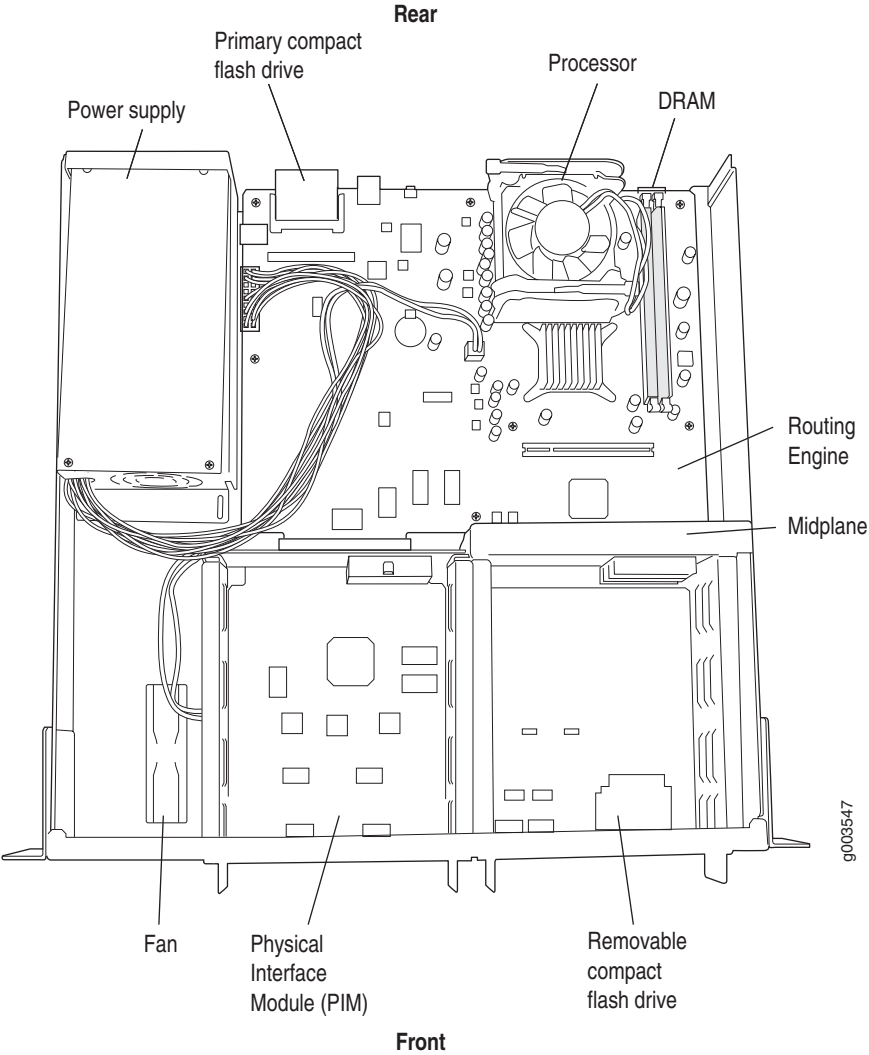


Table 13 summarizes the physical specifications for the router chassis.

Table 13: J4300 and J6300 Physical Specifications

| Description | Value |
|--------------------|---|
| Chassis dimensions | ■ 3.50 in. (8.9 cm) high |
| | ■ 17.00 in. (43.2 cm) wide—19 in. (48.3 cm) wide with mounting brackets attached |
| | ■ 19.00 in. (48.3 cm) deep—plus 0.5 in. (1.27 cm) of hardware that protrudes from the chassis front |
| Router weight | ■ J4300 router minimum configuration (no PIMs): 18 lb (8.2 kg) |
| | ■ J4300 router maximum configuration (six PIMs): 21 lb (9.5 kg) |
| | ■ J6300 router minimum configuration (no PIMs and one power supply): 18.5 lb (8.4 kg) |
| | ■ J6300 router maximum configuration (six PIMs and two power supplies): 24 lb (10.9 kg) |

Midplane

The midplane is located in the center of the chassis and forms the rear of the PIM card cage (see Figure 9). You install the PIMs into the midplane from the front of the chassis. Data packets are transferred across the midplane from the PIM to the Routing Engine, and from the Routing Engine across the midplane to the destination PIM.

J4300 and J6300 Routing Engine

The Routing Engine provides three main functions:

- Creates the packet forwarding switch fabric for the Services Router, providing route lookup, filtering, and switching on incoming data packets, then directing outbound packets to the appropriate interface for transmission to the network.
- Maintains the routing tables used by the router and controls the routing protocols that run on the router.
- Provides control and monitoring functions for the router, including controlling power and monitoring system status.

The Routing Engine consists of the following components:

- Processor—Creates the packet forwarding switch fabric for the router and runs JUNOS Internet software to maintain the router's routing tables and routing protocols. The Routing Engine has a Pentium-class processor.
- DRAM—Buffers incoming packets and provides storage for the routing and forwarding tables and for other Routing Engine processes.
- Compact flash drive—Provides primary storage for software images, configuration files, and microcode. The compact flash drive is accessible from the rear of the router, and is field-replaceable. For information about

replacing the compact flash drive, see “Removing and Installing the Primary Compact Flash Disk” on page 123.

- PCI bus—Provides the interface to the PIMs.
- EPROM—Stores the serial number of the Routing Engine.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM installed), issue the `show chassis routing-engine` command.

J4300 and J6300 Boot Devices

The J4300 and J6300 Services Routers can boot from three devices:

- Primary compact flash disk
- Removable compact flash disk
- USB storage device


J4300 and J6300 Boot Sequence

Normally, the Services Router boots from the primary compact flash disk. If the compact flash disk fails, the router attempts to boot from the removable compact flash disk, which is the alternate boot device. If the removable compact flash disk is not present or fails, the router attempts to boot from the USB storage device.

J4300 and J6300 Front Panel

The front panel of a J4300 or J6300 Services Router (Figure 10) allows you to view router status LEDs, access the console port, connect to LAN ports, and perform simple control functions.

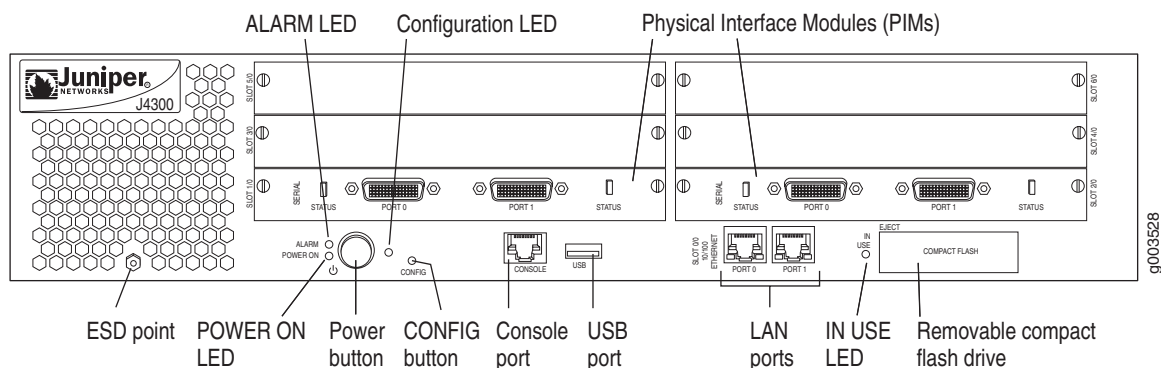Figure 10: Front Panel of J4300 and J6300



The components of the front panel, from left to right, are described in the following sections:

- ALARM LED on page 23
- Power Button and POWER ON LED on page 23
- CONFIG Button and Configuration LED on page 23
- Console Port on page 23
- J4300 and J6300 USB Port on page 23
- J4300 and J6300 LAN Ports on page 24
- J4300 and J6300 Removable Compact Flash Drive on page 24

ALARM LED

The ALARM LED on J4300 and J6300 Services Routers functions identically to the ALARM LED on the J2300 Services Router. See “ALARM LED” on page 11.

Power Button and POWER ON LED

The power button and POWER ON LED on J4300 and J6300 Services Routers function identically to the power button and POWER ON LED on the J2300 Services Router. See “Power Button and POWER ON LED” on page 11.

CONFIG Button and Configuration LED

The CONFIG button and LED on J4300 and J6300 Services Routers function identically to the CONFIG button and configuration LED on the J2300 Services Router. See “CONFIG Button and LED” on page 12.

Console Port

The console port on J4300 and J6300 Services Routers functions identically to the console port on the J2300 Services Router. See “Console Port” on page 13.

J4300 and J6300 USB Port

The slot labeled USB on the front panel of the router (see Figure 10) accepts a USB storage device or USB storage device adapter with a compact flash disk installed, as defined in the *CompactFlash Specification* published by the CompactFlash Association. When the USB storage device is installed and configured, it automatically acts as a secondary boot device, if the primary or removable compact flash disk fails on startup. Depending on the size of the USB storage device, you can also configure it to receive any core files generated during a failure. For information about configuring a USB storage device, see the *J-series Services Router Administration Guide*.



NOTE: For a list of supported USB storage devices, see the *J-series Services Router Release Notes* at <http://www.juniper.net>.

J4300 and J6300 LAN Ports

All J-series Services Routers include two fixed 10/100Base-TX Fast Ethernet ports. The LAN ports receive incoming packets from the network and transmit outgoing packets to the network. Each port is equipped with a dedicated network processor that forwards incoming data packets to the Routing Engine, and receives outgoing data packets from the Routing Engine.

The LAN ports are located on the front panel of the router (see Figure 10) and are configured like the ports on a Physical Interface Module (PIM). The LAN ports are not field-replaceable. The ports, labeled **PORT 0** and **PORT 1**, correspond to **fe-0/0/0** and **fe-0/0/1** respectively, for configuration.

For pinouts of Fast Ethernet cable connectors, see “Network Cable Specifications and Connector Pinouts” on page 149.

Each port has two LEDs located on each side of the bottom of the port. Table 14 describes the LAN port LEDs.

Table 14: J4300 and J6300 LAN Port LEDs

| Function | Color | State | Description |
|----------|-------|-------------|--|
| Link | Green | On steadily | Port is online. |
| Activity | Green | Blinking | Port is receiving data. |
| | | Off | Port might be on, but is not receiving data. |

J4300 and J6300 Removable Compact Flash Drive

The slot labeled **COMPACT FLASH** on the front panel of the Services Router (see Figure 10) is a removable compact flash drive that accepts a type I or II compact flash disk, as defined in the *CompactFlash Specification* published by the CompactFlash Association. When the removable compact flash disk is installed and configured, it automatically acts as the secondary boot device if the primary compact flash drive fails on startup.

Depending on the capacity of the removable compact flash disk, you can also configure it to receive any core files generated during a failure. For information about configuring a removable compact flash disk, see the *J-series Services Router Administration Guide*.

The IN USE LED indicates that the removable compact flash is being accessed. Table 15 describes the meaning of the LED states.


Table 15: IN USE LED

| Color | State | Description |
|-------|-------------|---|
| Red | On steadily | <ul style="list-style-type: none"> Router has booted from the removable compact flash drive. request system snapshot operation has been executed, and files are being copied to or from the removable compact flash drive. Core dump of the kernel is being written to the removable compact flash drive. savecore process is retrieving core dump information. |

J4300 and J6300 Physical Interface Modules (PIMs)

Physical Interface Modules (PIMs) provide the physical connection to various network media types, receiving incoming packets from the network and transmitting outgoing packets to the network (see Figure 11). Each PIM is equipped with a dedicated network processor that forwards incoming data packets to the Routing Engine, and receives outgoing data packets from the Routing Engine. During this process, the PIM performs framing and line-speed signaling for its medium type.

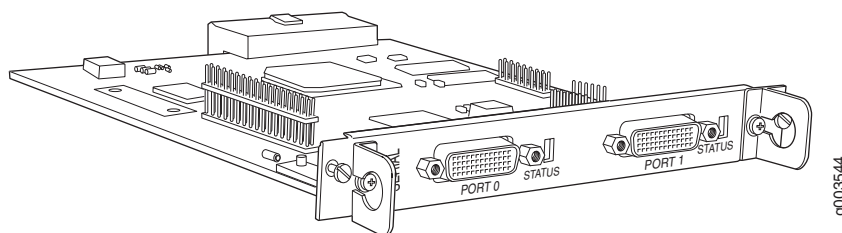Figure 11: PIM



PIMs are removable and insertable when the router is powered off. You can install a PIM into one of the six slots in the router chassis. If a slot is not occupied by a PIM, a PIM blank panel must be installed to shield the empty slot and to allow cooling air to circulate properly through the router.

Each PIM supported on the router has the following components:

- One or more cable connector ports—Accept a network media connector.
- LED—Indicates port status. Table 11 describes the meaning of the LED states.

The ADSL PIMs have more than one LED to indicate the status of the PIM and its ports. Table 16 describes the meaning of the LEDs for the ADSL PIMs used in J4300 and J6300 Services Routers.

Table 16: ADSL PIM LEDs

| Label | Color | State | Description |
|--------|-------|-------------|---|
| Online | Green | On steadily | PIM passed its self-test, and is online and operational. |
| | Unlit | Off | PIM is offline. |
| Status | Green | On steadily | Port is operational. |
| | Red | | Port is not connected, or physical layer negotiation with the DSLAM failed. |
| | Unlit | Off | PIM is offline. |

For pinouts of PIM cable connectors, see “Network Cable Specifications and Connector Pinouts” on page 149. For PIM replacement instructions, see “Replacing a PIM” on page 118.

J4300 Power System

The J4300 Services Router uses AC power. The autosensing power supply (see Figure 7) distributes the different output voltages to the router components according to their voltage requirements.

The power supply is fixed in the chassis, and is not field-replaceable. It has a single AC appliance inlet that requires a dedicated AC power feed.

For information about site power preparations, see “Power Guidelines, Requirements, and Specifications” on page 57. For information about connecting the router to power and ground, see “Connecting Power to the Services Router” on page 70.

J6300 Power System

The J6300 Services Router uses AC power. You can install one or two autosensing, load-sharing power supplies at the bottom rear of the chassis, as shown in Figure 8. The power supplies distribute the different output voltages to the router components, depending on their voltage requirements. When the power supplies are installed and operational, they automatically share the electrical load.

For full redundancy, two power supplies are required. If a power supply stops functioning for any reason, the second power supply instantly begins providing all the power the router needs for normal functioning. It can provide full power indefinitely.

Each power supply has an LED located on the power supply faceplate. Table 17 describes the J6300 power supply LED.

Table 17: J6300 Power Supply LED

| State | Description |
|--------------|---|
| Off | No power flowing to the power supply. |
| Green | Power supply is working correctly. |
| Red | Power supply is starting up, or has failed. |

For information about site power preparations, see “Power Guidelines, Requirements, and Specifications” on page 57. For information about connecting the router to power and ground, see “Connecting Power to the Services Router” on page 70.


Power supplies are hot-removable and hot-insertable. You can remove and replace a redundant power supply without powering down the router or disrupting the routing functions. To avoid electrical injury, carefully follow the instructions in “Replacing Power System Components in a J6300 Router” on page 133.

J4300 and J6300 Cooling System

The cooling system consists of the following components:

- A fan on the midplane
- A fan on the Routing Engine’s processor
- An internal fan on the power supply

The airflow produced by these fans keeps router components within the acceptable temperature range (see Figure 12).

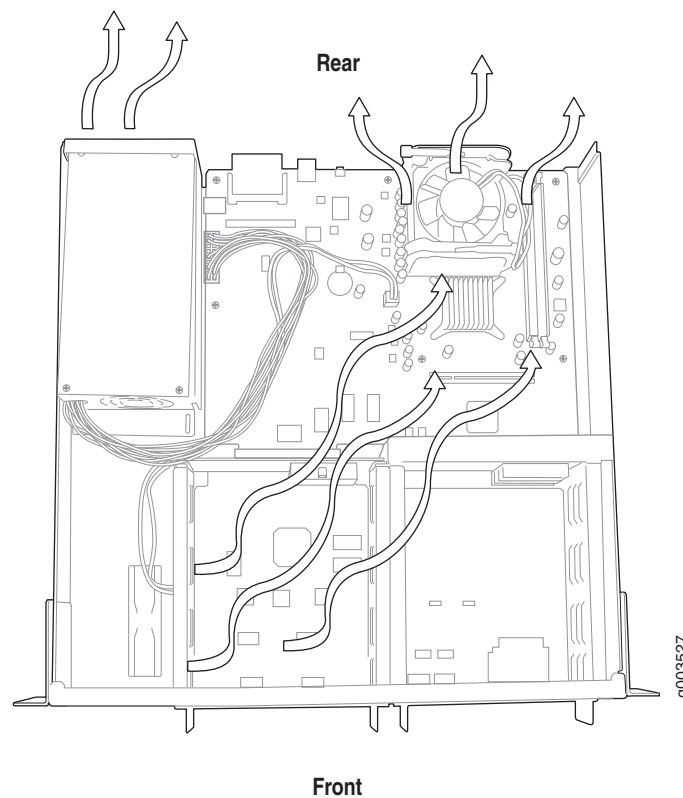Figure 12: Airflow Through the J4300 and J6300 Chassis

The Routing Engine monitors the temperature of the router components. If the ambient maximum temperature specification is exceeded and the router cannot be adequately cooled, the Routing Engine shuts down the hardware components.

Software Overview

Each J-series Services Router runs the JUNOS Internet software on its general-purpose processors. Designed for the large production networks typically supported by Internet service providers (ISPs), the JUNOS software includes processes for Internet Protocol (IP) routing and for managing interfaces, networks, and the router chassis.

The JUNOS Internet software runs on the Routing Engine. The Routing Engine kernel coordinates communication among the JUNOS software processes and provides a link to the Packet Forwarding Engine.

With the J-Web interface and the command-line interface (CLI) to the JUNOS software, you configure the routing protocols that run on the Services Router and set the properties of its network interfaces. After activating a software configuration, use either user interface to monitor the protocol traffic passing through the router, manage operations, and diagnose protocol and network connectivity problems.

This section contains the following topics:

- Routing Engine and Packet Forwarding Engine on page 29
- Kernel and Microkernel on page 29
- Processes on page 29
- User Interfaces on page 31

Routing Engine and Packet Forwarding Engine

A Services Router has two primary software processing components:

- Routing Engine—Creates and maintains the routing tables that determine how packets are routed through the network.
- Packet Forwarding Engine—Processes packets; applies filters, routing policies, and other features; and forwards packets to the next hop along the route to their final destination.

For information about Routing Engine hardware, see “J2300 Routing Engine” on page 10 and “J4300 and J6300 Routing Engine” on page 21.

Kernel and Microkernel

The Routing Engine kernel provides the underlying infrastructure for all JUNOS software processes by doing the following:

- Linking the routing tables maintained by the routing protocol process with the forwarding table maintained by the Routing Engine.
- Coordinating communication with the Packet Forwarding Engine, primarily by synchronizing the Packet Forwarding Engine’s forwarding table with the master forwarding table maintained by the Routing Engine.

The microkernel contains device drivers and processes that the Packet Forwarding Engine uses to govern the flow of packets through the Services Router.

Processes

The JUNOS software running on the Routing Engine and Packet Forwarding Engine consists of multiple processes that are responsible for individual Services Router functions.

The separation of functions provides operational stability, because each process accesses its own protected memory space. In addition, because each process is a separate software package, you can selectively upgrade all or part of the JUNOS software, for added flexibility.

The following processes are primary:

- Management Process on page 30
- Chassis Process on page 30
- Routing Protocols Process on page 30
- Interface Process on page 31
- Forwarding Process on page 31

Management Process

The JUNOS management process (mgd) manages the Services Router system as follows:

- Provides communication between the other processes and an interface to the configuration database
- Populates the configuration database with configuration information and retrieves the information when queried by other processes to ensure that the system operates as configured
- Interacts with the other processes when commands are issued through one of the user interfaces on the router

Chassis Process

The JUNOS chassis process (chassisd) controls a Services Router chassis and its components as follows:

- Detects hardware on the system that is used to configure network interfaces with the J-Web user interface
- Monitors the physical status of hardware components and field-replaceable units (FRUs), detecting when environment sensors such as temperature sensors are triggered
- Relays signals and interrupts—for example, when devices are taken offline, so that the system can close sessions and shut down gracefully

Routing Protocols Process

The Services Router forwards packets through a network by means of the routing protocols it uses and the routing and forwarding tables it maintains. By selecting routes and maintaining forwarding tables, the JUNOS routing protocols process (rpd) defines how routing protocols such as RIP, OSPF, and BGP operate on the router.

Interface Process

The JUNOS interface process (ifd) supplies the programs that configure and monitor network interfaces by defining physical characteristics such as link encapsulation, hold times, and keepalive timers.

Forwarding Process

The JUNOS forwarding process (fwd) is responsible for most of the packet transmission through a Services Router. The overall performance of the router is largely determined by the effectiveness of the forwarding process.

User Interfaces

The user interfaces on a Services Router interact with the management process to execute commands and store and retrieve information from the configuration database. The user interfaces operate as clients that communicate with the JUNOS Internet software through an application programming interface (API).

The following primary user interfaces are shipped with the router:

- J-Web graphical user interface—Includes quick configuration capabilities for performing the minimum required steps to enable a feature, plus a built-in configuration editor with access to the entire configuration hierarchy to fully configure the router. The J-Web interface also provides tools for monitoring, managing, and diagnosing router operation.
- Command-line interface (CLI)—Grants access to the complete JUNOS command and configuration hierarchies, to monitor and diagnose the router and configure it completely.

For more information, see “J-series User Interface Overview” on page 33.

Other user interfaces for the Services Router interact with the management process through the common API interface. These interfaces are designed to facilitate the configuration of one or, in some cases, many routers on the network. Among the supported interfaces are the JUNOScope and Service Deployment System (SDX) applications. For more information about these products, see the *JUNOScope Software User Guide* and the *SDX Software Basics Guide*.

Chapter 3

J-series User Interface Overview

You can use two user interfaces to monitor, configure, troubleshoot, and manage the Services Router—the J-Web interface and the JUNOS command-line interface (CLI). This chapter contains the following topics:

- User Interface Overview on page 33
- Before You Begin on page 36
- Using the J-Web Interface on page 36
- Using the Command-Line Interface on page 41

User Interface Overview

This section contains the following topics:

- J-Web Overview on page 33
- CLI Overview on page 34
- Comparison of Configuration Interfaces on page 34

J-Web Overview

The J-Web graphical user interface (GUI) allows you to monitor, configure, troubleshoot, and manage the Services Router on a client by means of a Web browser with Hypertext Transfer Protocol (HTTP) or HTTP over Secure Sockets Layer (HTTPS) enabled. The J-Web interface provides access to all the configuration statements supported by the router, so you can fully configure it without using the CLI.

The J-Web interface provides two methods of Services Router configuration:

- Quick Configuration
- Configuration editor

For more information, see “Comparison of Configuration Interfaces” on page 34.

In addition to configuration, you can use the J-Web interface to perform many monitoring, troubleshooting, and management tasks on the Services Router. For example, to display a summary of routing table entries, click **Monitor** in the task bar, then click **Routing** in the side pane. The routes are displayed in the main pane.

For more information about the J-Web interface, see “Using the J-Web Interface” on page 36.

CLI Overview

The CLI is a straightforward command interface in which you type commands on a line and press Enter to execute them. The CLI provides command help, command completion, and Emacs-style keyboard sequences for moving around on the command line and scrolling through a buffer of recently executed commands.

The CLI has two modes:

- Operational mode—Complete set of commands to control the CLI environment, monitor and troubleshoot network connectivity, manage the Services Router, and enter configuration mode.
- Configuration mode—Complete set of commands to configure the Services Router. This guide refers to configuration mode as the *CLI configuration editor*. For more information, see “Comparison of Configuration Interfaces” on page 34.

For more information about the CLI, see “Using the Command-Line Interface” on page 41.

Comparison of Configuration Interfaces

Table 18 describes and compares the interfaces you can use to configure a Services Router.

Table 18: Services Router Configuration Interfaces

| Services Router Interface | Description | Capabilities | Recommendations |
|----------------------------------|--|--|------------------------------|
| J-Web Quick Configuration | <p>Web browser pages for setting up the Services Router quickly and easily without configuring each statement individually.</p> <p>For example, use the Set Up Quick Configuration page to configure the Services Router for basic connectivity so you can manage it from the network.</p> | <p>Configure basic router services:</p> <ul style="list-style-type: none"> ■ Setup ■ Secure Sockets Layer (SSL) ■ Interfaces ■ User access ■ SNMP notifications ■ Routing ■ Security firewalls and Network Address Translation (NAT) ■ IPSec tunnels ■ Real-time performance monitoring | Use for basic configuration. |

| Services Router Interface | Description | Capabilities | Recommendations |
|----------------------------------|---|--|--|
| J-Web configuration editor | <p>Web browser pages divided into panes in which you can do any of the following:</p> <ul style="list-style-type: none"> ■ Expand the entire configuration hierarchy and click a configuration statement to view or edit. The main pane displays all the options for the statement, with a text box for each option. ■ Paste a complete configuration hierarchy into a scrollable text box, or edit individual lines. ■ Upload or download a complete configuration. ■ Roll back to a previous configuration. | <p>Configure all router services:</p> <ul style="list-style-type: none"> ■ System parameters ■ User access and accounting ■ Interfaces ■ SNMP network management ■ Routing options, including multicast routing ■ Routing protocols ■ Routing policies ■ Secure access ■ Service interfaces, including stateful firewalls and virtual private networks (VPNs) ■ Traffic engineering, including Multiprotocol Label Switching (MPLS) and class-of-service (CoS) packet prioritization ■ Chassis properties | Use for complete configuration if you are not familiar with the JUNOS CLI or prefer a graphical interface. |
| CLI configuration editor | <p>Interface in which you do either of the following:</p> <ul style="list-style-type: none"> ■ Type commands on a line and press Enter to create a hierarchy of configuration statements. ■ Create an ASCII text file that contains the statement hierarchy. ■ Upload a complete configuration, or roll back to a previous configuration. | | Use for complete configuration if you know the JUNOS CLI or prefer a command interface. |

Before You Begin

Before you start the user interface, you must perform the initial Services Router configuration described in “Establishing Basic Connectivity” on page 75. After the initial configuration, you use your username and password, and the hostname or IP address of the router, to start the user interface.

Using the J-Web Interface

This section contains the following topics:

- Starting the J-Web Interface on page 37
- J-Web Layout on page 37

- J-Web Sessions on page 41

Starting the J-Web Interface

To start the J-Web interface:

1. Launch your HTTP- or HTTPS-enabled Web browser.

To use HTTPS, you must have installed a certificate on the Services Router and enabled HTTPS. For more information, see “Configuring HTTPS Web Access with Quick Configuration” on page 86.

2. After `http://` or `https://` in your Web browser, type the hostname or IP address of the Services Router and press Enter.

The J-Web login page appears.

3. On the login page, type your username and password, and click **Log In**.

To correct or change the username or password you typed, click **Reset**, type the new entry or entries, and click **Log In**.

The J-Web **Quick Configuration > Set Up** (see Figure 13) or **Monitor > System** page appears.

To explicitly terminate a J-Web session at any time, click **Logout** in the top pane.

J-Web Layout

Each page of the J-Web interface is divided into the following panes shown in Figure 13 and Figure 14:

- Top pane—Displays identifying information and links.
- Main pane—Location where you monitor, configure, diagnose, and manage the Services Router by entering information in text boxes, making selections, and clicking buttons.
- Side pane—Displays suboptions of the Monitor, Configuration, Diagnose, or Manage task currently displayed in the main pane. Click a suboption to access it in the main pane.
- Bottom pane—Displays copyright and trademark information.

The layout of the panes allows you to quickly navigate through the interface. Table 19 summarizes the elements of the J-Web interface.

You navigate the J-Web interface, move forward and backward, scroll pages, and expand and collapse elements as you do in a typical Web browser interface.

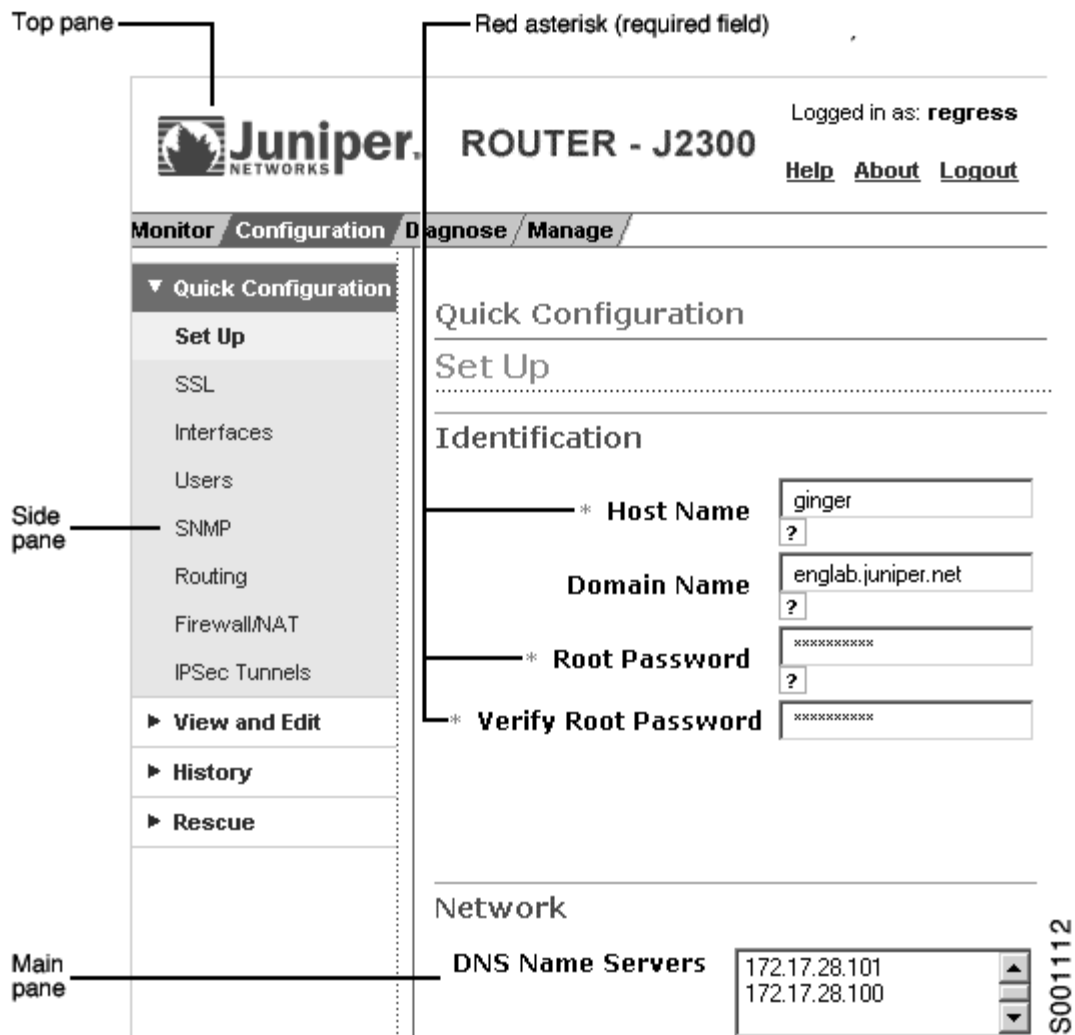
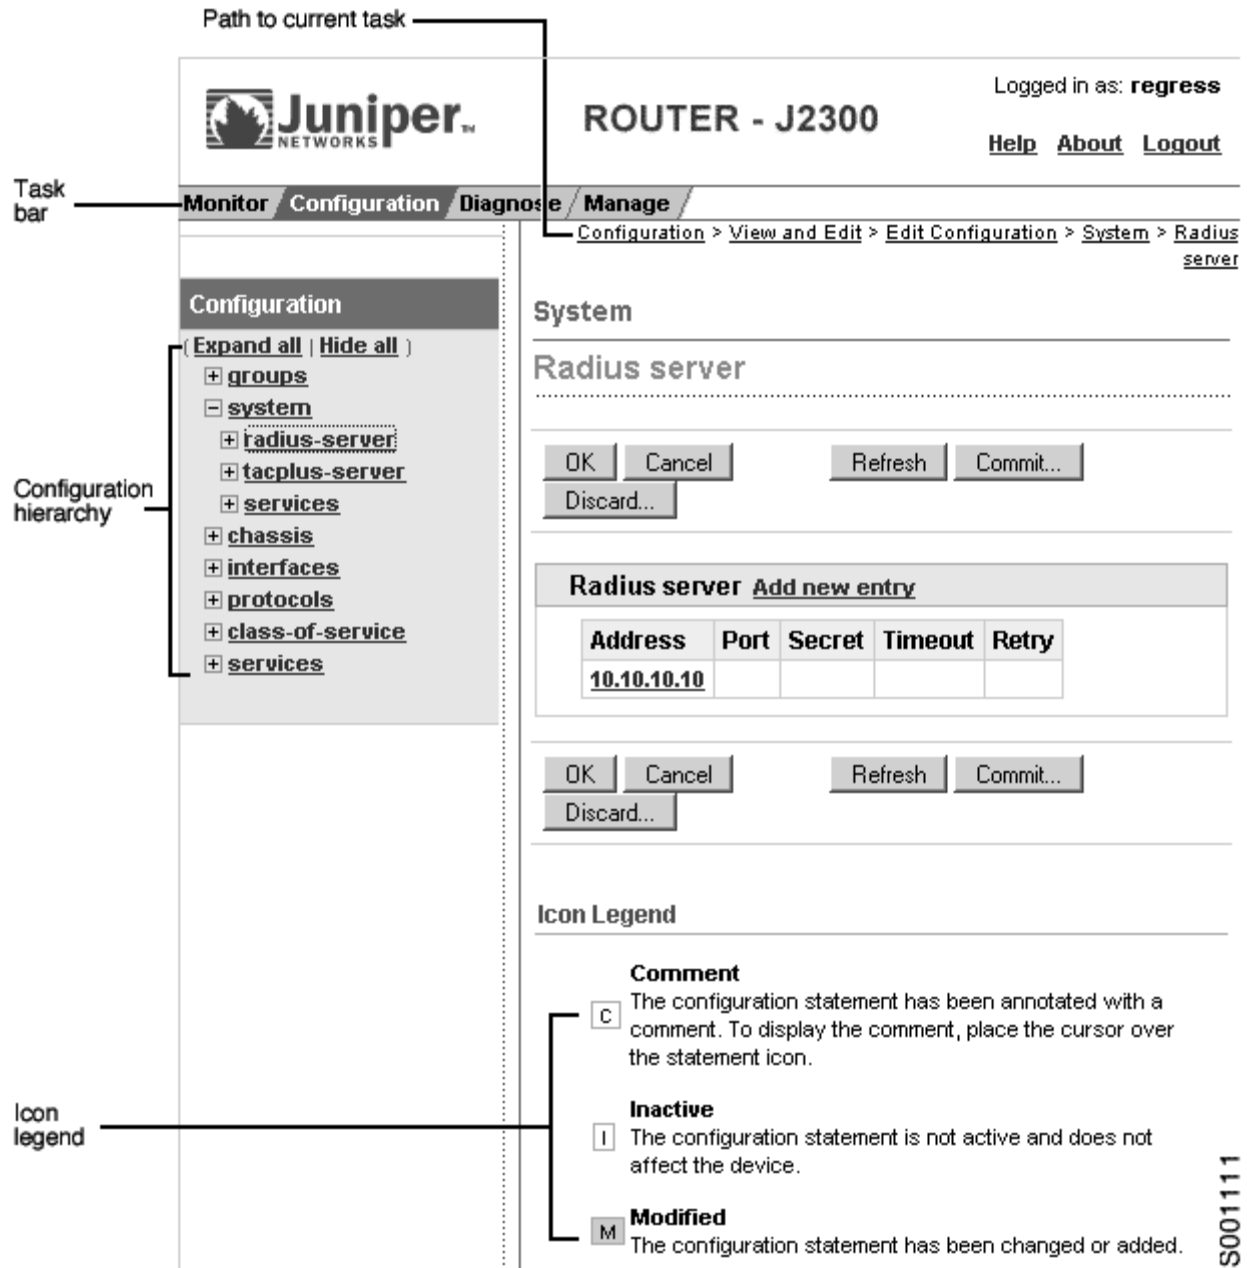
Figure 13: J-Web Layout

Figure 14: J-Web Layout—Configuration Editor**Table 19: Summary of J-Web Elements**

| J-Web Interface Element | Description |
|-------------------------|---|
| Top Pane | |
| Juniper Networks logo | Link to www.juniper.net in a new browser window. |

| J-Web Interface Element | Description |
|--------------------------------|---|
| <i>hostname – model</i> | Hostname and model of the Services Router. |
| Logged in as: <i>username</i> | Username you used to log in to the Services Router. |
| Help | Link to context-sensitive help information. |
| About | Displays information about the J-Web Interface, such as the version number. |
| Logout | Ends your current login session with the Services Router and returns you to the login page. |
| Task bar | Menu of J-Web main options. Click to access. <ul style="list-style-type: none"> ■ Monitor—View information about configuration and hardware on the Services Router. ■ Configuration—Configure the Services Router with Quick Configuration or the configuration editor, and view configuration history. ■ Diagnose—Troubleshoot network connectivity problems. ■ Manage—Manage files and licenses, upgrade software, and reboot the Services Router. |
| Main Pane | |
| Help (?) icon | Displays useful information—such as the definition, format, and valid range of an option—when you move the cursor over the question mark. |
| Red asterisk (*) | Indicates a required field. |
| Path to current task | Path of main options and suboptions you selected to display the current main and side panes. |
| Icon Legend | (Applies to the configuration editor only) Explains icons that appear in the user interface to provide information about configuration statements: <ul style="list-style-type: none"> ■ C—Comment. Move your cursor over the icon to view a comment about the configuration statement. ■ I—Inactive. The configuration statement does not affect the Services Router. ■ M—Modified. The configuration statement is added or modified. ■ *—Mandatory. The configuration statement must have a value. |
| Side Pane | |
| Configuration hierarchy | (Applies to the configuration editor only) Displays the hierarchy of committed statements in the Services Router configuration. <ul style="list-style-type: none"> ■ Click Expand all to display the entire hierarchy. ■ Click Hide all to display only the statements at the top level. ■ Click plus signs (+) to expand individual items. ■ Click minus signs (-) to hide individual items. |

J-Web Sessions

You establish a J-Web session with the Services Router through an HTTP- or HTTPS-enabled Web browser. The HTTPS protocol, which uses 128-bit encryption, is available only in domestic versions of the JUNOS software. To use HTTPS, you must have installed a certificate on the Services Router and enabled HTTPS.

When you attempt to log in through the J-Web interface, the Services Router authenticates your username with the same methods used for telnet and SSH.

The Services Router can support multiple J-Web sessions for a single user who logs in to each session. However, if a single user attempts to launch multiple J-Web *windows*—for example, by right-clicking a link to launch another instance of a Web browser—the session can have unpredictable results.

If the Services Router does not detect any activity through the J-Web interface for 15 minutes, the session times out and is terminated. You must log in again to begin a new session.

To explicitly terminate a J-Web session at any time, click **Logout** in the top pane.

Using the Command-Line Interface


This section contains the following topics:

- CLI Command Hierarchy on page 41
- Starting the CLI on page 42
- CLI Operational Mode on page 43
- CLI Configuration Mode on page 44
- CLI Basics on page 45

For more information about the CLI, see the *JUNOS System Basics Configuration Guide*.

CLI Command Hierarchy

The CLI commands are organized hierarchically, with commands that perform a similar function grouped together under the same level. For example, all commands that display information about the Services Router system and system software are grouped under the **show** command, and all commands that display information about the routing table are grouped under the **show route** command. Figure 15 illustrates a portion of the **show** command hierarchy.

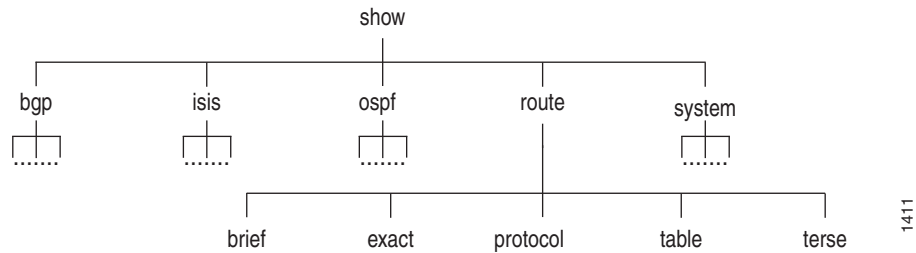Figure 15: CLI Command Hierarchy Example

To execute a command, you enter the full command name, starting at the top level of the hierarchy. For example, to display a brief view of the routes in the routing table, use the command `show route brief`.

The hierarchical organization results in commands that have a regular syntax and provides the following features that simplify CLI use:

- Consistent command names—Commands that provide the same type of function have the same name, regardless of the portion of the software they are operating on. For example, all `show` commands display software information and statistics, and all `clear` commands erase various types of system information.
- Lists and short descriptions of available commands—Information about available commands is provided at each level of the CLI command hierarchy. If you type a question mark (?) at any level, you see a list of the available commands along with a short description of each command.
- Command completion—Command completion for command names (keywords) and command options is also available at each level of the hierarchy. If you type a partial command name followed immediately by a question mark (with no intervening space), you see a list of commands that match the partial name you typed.

Starting the CLI

To start the CLI:

1. Establish a connection with the Services Router:
 - To access the router remotely from the network, enter the command you typically use to establish a remote connection (such as `telnet` or `ssh`) using the router hostname.
 - To access the router through a management device attached to the console port, start the terminal application.
2. Log in using your username and password.

After you log in, you enter a UNIX shell.

3. Start the CLI.

```
user# cli
user@host>
```

The presence of the angle bracket (>) prompt indicates the CLI has started. By default, the prompt is preceded by a string that contains your username and the hostname of the Services Router.

To exit the CLI and return to the UNIX shell, enter the `quit` command.

CLI Operational Mode

The CLI has two modes: *operational* and *configuration*. When you log in to the Services Router and the CLI starts, you are at the top level of operational mode.

To view a list of top-level operational mode commands, type a question mark (?) at the command-line prompt.

```
user@host> ?
Possible completions:
clear          Clear information in the system
configure      Manipulate software configuration information
file           Perform file operations
help           Provide help information
monitor        Show real-time debugging information
mtrace         Trace multicast path from source to receiver
ping           Ping remote target
quit           Exit the management session
request        Make system-level requests
restart        Restart software process
set            Set CLI properties, date/time, craft interface message
show           Show system information
ssh            Start secure shell on another host
start          Start shell
telnet         Telnet to another host
test           Perform diagnostic debugging
traceroute     Trace route to remote host
```

At the top level of operational mode are a number of broad groups of CLI commands that are used to perform the following functions:

- Control the CLI environment.
- Monitor and troubleshoot the router.
- Connect to other systems.
- Manage files and software images.
- Control software processes.
- Stop and reboot the router.
- Enter configuration mode.

To control the CLI environment, see “Configuring the CLI Environment” on page 47. To enter configuration mode, see “CLI Configuration Mode” on page 44. For information about the other CLI operational mode functions, see the *J-series Services Router Administration Guide*.

CLI Configuration Mode

To configure the Services Router, including system parameters, routing protocols, interfaces, network management, and user access, you must enter configuration mode. In configuration mode, the CLI provides commands to configure the router, load a text (ASCII) file that contains the router configuration, activate a configuration, and save the configuration to a text file.

You enter configuration mode by entering the `configure` operational mode command. The CLI prompt changes from `user@host>` to `user@host#`.

To view a list of configuration mode commands, type a question mark (?) at the command-line prompt. (You do not need to press Enter after typing the question mark.)

```

user@host# ?
Possible completions:
  Enter          Execute this command
  activate       Remove the inactive tag from a statement
  annotate       Annotate the statement with a comment
  commit        Commit current set of changes
  copy          Copy a statement
  deactivate     Add the inactive tag to a statement
  delete        Delete a data element
  edit          Edit a sub-element
  exit          Exit from this level
  help          Provide help information
  insert        Insert a new ordered data element
  load          Load configuration from ASCII file
  quit          Quit from this level
  rename        Rename a statement
  rollback      Roll back to previous committed configuration
  run           Run an operational-mode command
  save          Save configuration to ASCII file
  set           Set a parameter
  show          Show a parameter
  status        Show users currently editing configuration
  top           Exit to top level of configuration
  up            Exit one level of configuration
  wildcard      Wildcard operations

```

The JUNOS software configuration consists of a hierarchy of *statements*. There are two types of statements: *container statements*, which contain other statements, and *leaf statements*, which do not contain other statements. All the container and leaf statements together form the configuration hierarchy.

Each statement consists of a fixed keyword and, optionally, an identifier that you define, such as the name of an interface or a username.

To configure the Services Router or to modify an existing configuration, you add statements to the configuration with the **edit** and **set** configuration mode commands. For more information about the CLI configuration editor and configuration mode, see the *J-series Services Router Configuration Guide* and the JUNOS software configuration guides.

CLI Basics

This section contains the following topics:

- Editing Keystrokes on page 45
- Command Completion on page 46
- Online Help on page 46
- Configuring the CLI Environment on page 47

Editing Keystrokes

In the CLI, you use keystrokes to move around on and edit the command line, and to scroll through a list of recently executed commands. Table 20 lists some typical CLI editing tasks and the keystrokes that perform them.

Table 20: CLI Editing Keystrokes

| Task Category | Action | Keyboard Sequence |
|-------------------------------|---|------------------------------|
| Move the cursor. | Move the cursor back one character. | Ctrl-b |
| | Move the cursor back one word. | Esc b |
| | Move the cursor forward one character. | Ctrl-f |
| | Move the cursor forward one word. | Esc f |
| | Move the cursor to the end of the command line. | Ctrl-e |
| Delete characters. | Delete the character before the cursor. | Ctrl-h, Delete, or Backspace |
| | Delete the character at the cursor. | Ctrl-d |
| | Delete all characters from the cursor to the end of the command line. | Ctrl-k |
| | Delete all characters on the command line. | Ctrl-u or Ctrl-x |
| | Delete the word before the cursor. | Ctrl-w or Esc Backspace |
| | Delete the word after the cursor. | Esc d |
| Insert recently deleted text. | Insert the most recently deleted text at the cursor. | Ctrl-y |
| Redraw the screen. | Redraw the current line. | Ctrl-l |

| Task Category | Action | Keyboard Sequence |
|---------------------------------|---|----------------------------|
| Display previous command lines. | Scroll backward through the list of recently executed commands. | Ctrl-p |
| | Scroll forward through the list of recently executed commands. | Ctrl-n |
| | Search the CLI history in reverse order for lines matching the search string. | Ctrl-r |
| | Search the CLI history by typing some text at the prompt, followed by the keyboard sequence. The CLI attempts to expand the text into the most recent word in the history for which the text is a prefix. | Esc / |
| Repeat keyboard sequences. | Specify the number of times to execute a keyboard sequence. Replace <i>number</i> with a number from 1 through 9, and replace <i>sequence</i> with a keyboard sequence in this table. | Esc <i>number sequence</i> |

Command Completion

You do not always have to remember or type the full command or option name for the CLI to recognize it. To display all possible command or option completions, type the partial command followed immediately by a question mark (?).

To complete a command or option that you have partially typed, press Tab or Spacebar. If the partially typed letters uniquely identify a command, the complete command name appears. Otherwise, a message indicates that your entry is ambiguous or invalid. Possible command completions are displayed if your entry is ambiguous.

You can also use command completion on filenames and usernames. To display all possible values, type one or more characters followed immediately by a question mark. To complete these partial entries, press Tab only. Pressing Spacebar does not work.

Online Help

The CLI provides context-sensitive help at every level of the command hierarchy. The help information tells you which commands are available at the current level in the hierarchy and provides a brief description of each.

To get help while in the CLI, type a question mark (?) in one of the following ways:

- Type a question mark at the command-line prompt—The CLI lists the available commands and options. For examples, see “CLI Operational Mode” on page 43 and “CLI Configuration Mode” on page 44.
- Type a question mark after entering the complete name of a command or command option—The CLI lists the available commands and options, then redisplay the command names and options that you typed:

```
user@host> request ?
```

```

Possible completions:
  chassis      Perform chassis-specific operations
  ipsec        Perform IP Security operations
  message      Send text message to other users
  routing-engine Log in to Routing Engine
  security     Perform security-level operations
  services     Perform service application operations
  support      Perform JUNOS support tasks
  system       Perform system-level operations
user@host> request

```

- Type a question mark in the middle of a command name—The CLI lists possible command completions that match the letters you have entered so far, then redisplay the letters that you typed. For example, to list all operational mode commands that start with the letter s, type the following:

```

user@host> s?

Possible completions:
  set          Set CLI properties, date/time, craft interface message
  show         Show system information
  ssh         Start secure shell on another host
  start        Start shell
user@host> s

```

The CLI also provides usage guidelines and summary information for text contained in configuration statements if you enter the `help` topic and `help reference` commands. For example, to display usage guidelines for the OSPF hello interval, enter the command `help topic ospf hello-interval`. You can enter help commands in operational or configuration mode.

Configuring the CLI Environment

You can configure the CLI environment for your current login session. Your settings are not retained when you exit the CLI.

To display the current CLI settings, enter the `show cli` command:

```

user@host> show cli
CLI complete-on-space set to on
CLI idle-timeout disabled
CLI restart-on-upgrade set to on
CLI screen-length set to 49
CLI screen-width set to 132
CLI terminal is 'vt100'
CLI is operating in enhanced mode
CLI working directory is '/cf/var/home/remote'

```

To change the CLI environment, use the `set cli` operational mode command:

```

user@host> set cli ?
Possible completions:
  complete-on-space  Set whether typing space completes current word
  directory          Set working directory
  idle-timeout       Set maximum idle time before login session ends
  prompt            Set CLI command prompt string

```

| | |
|---------------------------------|---|
| <code>restart-on-upgrade</code> | Set whether CLI prompts to restart after software upgrade |
| <code>screen-length</code> | Set number of lines on screen |
| <code>screen-width</code> | Set number of characters on a line |
| <code>terminal</code> | Set terminal type |

Table 21 shows how you can change the CLI environment features.

Table 21: Configuring the CLI Environment

| Environment Feature | CLI Command | Default Setting | Options |
|------------------------------|---|---|---|
| Command completion | <code>set cli complete-on-space</code> (on off) | on—Pressing Tab or Spacebar completes a command. | <ul style="list-style-type: none"> ■ Set off to allow only Tab for command completion. ■ Set on to re-enable Tab and Spacebar for command completion. |
| Your working directory | <code>set cli directory <i>path</i> 8</code> | <code>/cf/var/home/remote</code> | Replace <i>path</i> with the directory you want to enter when you log in to the Services Router. |
| Minutes of idle time | <code>set cli idle-time <i>minutes</i></code> | Your session never times out unless your login class specifies a timeout. | <ul style="list-style-type: none"> ■ To enable the timeout feature, replace <i>timeout</i> with a value between 1 and 100,000. ■ To disable the timeout feature, replace <i>timeout</i> with 0. |
| Your session prompt | <code>set cli prompt <i>string</i></code> | <code>user@host ></code> | Replace <i>string</i> with the prompt you want. If the prompt contains spaces or special characters, enclose <i>string</i> in quotation marks (" "). |
| Restart after upgrade prompt | <code>set cli restart-on-upgrade</code> (on off) | CLI prompts you to restart the Services Router after a software upgrade. | <ul style="list-style-type: none"> ■ Set off to disable the prompt for the session. ■ Set on to re-enable the prompt. |

| Environment Feature | CLI Command | Default Setting | Options |
|--|---------------------------------------|--------------------------------------|---|
| Number of CLI output line displayed at once | set cli screen-length <i>length</i> | Variable (depends on terminal type). | <ul style="list-style-type: none"> ■ To change the number of lines displayed on the screen, replace <i>length</i> with a value between 1 and 100,000. ■ To disable the display of a set number of lines, replace <i>length</i> with 0. (This feature can be useful when you are issuing CLI commands from scripts.) |
| Number of CLI characters displayed on a line | set cli screen-width <i>width</i> | Variable (depends on terminal type). | To change the number of characters displayed on a line, replace <i>width</i> with a value between 0 and 100,000. |
| Your terminal type. | set cli terminal <i>terminal-type</i> | unknown, or set by console. | Replace <i>terminal-type</i> with one of the following values: <ul style="list-style-type: none"> ■ ansi ■ vt100 ■ small-xterm ■ xterm |

Part 2

Installing a Services Router

- Preparing for Router Installation on page 53
- Installing and Connecting a Services Router on page 63
- Establishing Basic Connectivity on page 75
- Configuring Autoinstallation on page 97
- Installing and Managing J-series Licenses on page 103

Chapter 4

Preparing for Router Installation

Before installing a J-series Services Router, make sure that your site has the proper operating environment and equipment. Use the checklist at the end of the chapter to help you prepare your site.

This chapter discusses the following topics:

- General Site Guidelines on page 53
- Desktop and Wall Mounting Requirements on page 54
- Rack Requirements on page 54
- Router Environmental Tolerances on page 55
- Fire Safety Requirements on page 56
- Power Guidelines, Requirements, and Specifications on page 57
- Network Cable Specifications on page 60
- Site Preparation Checklist on page 60

General Site Guidelines

The following precautions help you plan an acceptable operating environment for your Services Router and avoid environmentally caused equipment failures:

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. Allow at least 6 in. (15.2 cm) of clearance between the front and back of the chassis and adjacent equipment. Ensure that there is adequate circulation in the installation location.
- Follow ESD procedures described in “Preventing Electrostatic Discharge Damage” on page 165, to avoid damaging equipment. Static discharge can cause components to fail completely or intermittently over time.
- Install blank PIM panels in empty slots, to prevent any interruption or reduction in the flow of air across internal components.

Desktop and Wall Mounting Requirements

The J2300 Services Router can be installed on a desktop or wall. When choosing a location, allow at least 6 in. (15.2 cm) of clearance between the front and back of the chassis and adjacent equipment or walls.

If you are mounting the J2300 router on a wall, use wall screws or wall anchors capable of supporting the full weight of the chassis, up to 12 lb (5.4 kg). If possible, install the wall anchors into wall studs, which provide added support for the chassis.

Rack Requirements

All J-series Services Routers can be installed in a rack. J4300 and J6300 Services Routers must be installed in a rack. Many types of racks are acceptable, including front-mount racks, four-post (telco) racks, and center-mount racks.

The following sections describe rack requirements:

- Rack Size and Strength on page 54
- Spacing of Mounting Holes on page 55
- Connection to Building Structure on page 55

Rack Size and Strength

The Services Router is designed for installation in a rack that complies with either of the following standards:

- A 19-in. rack as defined in Cabinets, Racks, Panels, and Associated Equipment (document number EIA-310-D) published by the Electronics Industry Association (<http://www.eia.org>)
- A 600-mm rack as defined in the four-part *Equipment Engineering (EE); European telecommunications standard for equipment practice* (document numbers ETS 300 119-1 through 119-4) published by the European Telecommunications Standards Institute (<http://www.etsi.org>)

The horizontal spacing between the rails in a rack that complies with this standard is usually wider than the router's mounting ears, which measure 19 in. (48.2 cm) from outer edge to outer edge. Use approved wing devices to narrow the opening between the rails as required.

The rack rails must be spaced widely enough to accommodate the router chassis's external dimensions:

- A J2300 chassis is 1.75 in. (4.4 cm) high, 12.37 in. (31.4 cm) deep, and 17.25 in. (43.8 cm) wide.
- A J4300 or J6300 chassis is 3.5 in. (8.9 cm) high, 19 in. (48.3 cm) deep, and 17 in. (43.2 cm) wide.

The outer edges of the mounting ears extend the width of either chassis to 19 in. (48.2 cm), and the front of the chassis extends approximately 0.5 in. (1.27 cm) beyond the mounting ears. The spacing of rails and adjacent racks must also allow for the clearances around the router and rack. (See “General Site Guidelines” on page 53.)



CAUTION: If you are mounting the router in a cabinet, be sure that ventilation is sufficient to prevent overheating.

If a front-mount rack is used, we recommend supporting the back of the router with a shelf or other structure.

The J2300 chassis height of 1.75 in. (4.4 cm) equals 1 U. The J4300 and J6300 chassis height of 3.5 in. (8.9 cm) equals 2 U. Each *U* is a standard rack unit defined in Cabinets, Racks, Panels, and Associated Equipment (document number EIA-310-D) published by the Electronics Industry Association.

Spacing of Mounting Holes

The mounting holes in the mounting brackets provided with the J2300 Services Router chassis are spaced 1.25 in. (3.2 cm) apart, measured from the center of each hole.

The mounting holes in the mounting brackets attached to the J4300 and J6300 chassis are spaced in two groups. The space between the holes in each group is 0.6 in. (1.5 cm) apart, measured from the center of each hole. The space between the two groups is 1.75 in. (4.4 cm) apart, measured from the center of the lower hole in the top group to the upper hole in the bottom group.

Connection to Building Structure

Always secure the rack to the structure of the building. If your geographical area is subject to earthquakes, bolt the rack to the floor. For maximum stability, also secure the rack to ceiling brackets. For more information, see “Rack-Mounting Requirements and Warnings” on page 177.

Router Environmental Tolerances

Table 22 specifies the environmental conditions required for normal Services Router operation. In addition, the site must be as dust-free as possible. Dust can clog air intake vents, reducing cooling system efficiency. Check vents frequently, cleaning them as necessary.

Table 22: Router Environmental Tolerances

| Description | Value |
|------------------------|---|
| Altitude | No performance degradation to 10,000 ft (3048 m) |
| Relative humidity | Normal operation ensured in relative humidity range of 5 % to 90 %, noncondensing |
| Temperature | Normal operation ensured in temperature range of 32°F (0°C) to 104°F (40°C) Non-operating storage temperature in shipping carton: –40°F (–40°C) to 158°F (70°C) |
| Seismic | Designed to meet Telcordia Technologies Zone 4 earthquake requirements |
| Maximum thermal output | J2300: 1638 BTU/hour (480 W) J4300: 2457 BTU/hour (720 W) J6300: 2457 BTU/hour (720 W) |

Fire Safety Requirements

In the event of a fire emergency involving Services Routers and other network equipment, the safety of people is the primary concern. Establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products must be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment, and that all local fire, safety, and electrical codes and ordinances be observed when you are installing and operating your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, first unplug the power cord. (For shutdown instructions, see “Powering a Services Router On and Off” on page 72.)

Then, use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire. For more information about fire extinguishers, see “Fire Suppression Equipment” on page 56.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide (CO₂) and Halotron, are most effective for suppressing electrical fires. Type C fire extinguishers displace the oxygen from the point of combustion to

eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, use this type of inert oxygen displacement extinguisher instead of an extinguisher that leave residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers) near Juniper Networks equipment. The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks router. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

Power Guidelines, Requirements, and Specifications

All Services Routers use AC power. For information about each router's power system, see "J2300 Power System" on page 15, "J4300 Power System" on page 26, and "J6300 Power System" on page 26.

For site wiring and power system guidelines, requirements, and specifications, see the following sections:

- Site Electrical Wiring Guidelines on page 57
- Router Power Requirements on page 58
- AC Power, Connection, and Power Cord Specifications on page 59

Site Electrical Wiring Guidelines

When planning the electrical wiring at your site, consider the factors discussed in the following sections.

Signaling Limitations

Improperly installed wires can emit radio interference. In addition, the potential for damage from lightning strikes increases if wires exceed recommended distances, or if wires pass between buildings. The electromagnetic pulse (EMP) caused by lightning can damage unshielded conductors and destroy electronic

devices. If your site has previously experienced such problems, you might want to consult experts in electrical surge suppression and shielding.

Radio Frequency Interference

You can reduce or eliminate the emission of radio frequency interference (RFI) from your site wiring by using twisted-pair cable with a good distribution of grounding conductors. If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

Electromagnetic Compatibility

If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, you might want to seek expert advice. Strong sources of electromagnetic interference (EMI) can destroy the signal drivers and receivers in the router and conduct power surges over the lines into the equipment, resulting in an electrical hazard. It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.



CAUTION: To comply with intrabuilding lightning/surge requirements, intrabuilding wiring must be shielded, and the shield for the wiring must be grounded at both ends.

Router Power Requirements

Table 23 lists the power system electrical specifications for the J2300 Services Router.

Table 23: Power System Electrical Specifications for the J2300 Services Router

| Item | Specification |
|--------------------------|--------------------------------|
| AC input voltage | 100 to 240 VAC nominal |
| | 100 to 264 VAC operating range |
| AC input line frequency | 47 to 63 Hz |
| AC system current rating | 4 to 2 A |

Table 24 lists the power system electrical specifications for the J4300 Services Router.

Table 24: Power System Electrical Specifications for the J4300 Services Router

| Item | Specification |
|------------------|---------------------------------|
| AC input voltage | Operating range: 100 to 240 VAC |

| Item | Specification |
|--------------------------|---------------|
| AC input line frequency | 47 to 63 Hz |
| AC system current rating | 6 to 3 A |

Table 25 lists the power system electrical specifications for the J6300 Services Router.

Table 25: Power System Electrical Specifications J6300 Services Router

| Item | Specification |
|--------------------------|---------------------------------|
| AC input voltage | Operating range: 100 to 240 VAC |
| AC input line frequency | 47 to 63 Hz |
| AC system current rating | 6 to 3 A |

AC Power, Connection, and Power Cord Specifications

Detachable AC power cords, each 2.5 m (approximately 8 ft) long, are supplied with the Services Router. The appliance coupler at the female end of the cord inserts into the appliance inlet on the faceplate of the AC power supply. The coupler is type C19 as described by International Electrotechnical Commission (IEC) standard 60320. The plug at the male end of the power cord fits into the power source receptacle that is standard for your geographical location.




NOTE: In North America, AC power cords must not exceed 4.5 m (approximately 14.75 ft) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). The cords supplied with the router are in compliance.

Table 26 lists power cord specifications and Figure 16 illustrates the plug on the AC power cord provided for each country or region.

Table 26: AC Power Cord Specifications

| Country | Electrical Specifications | Plug Standards |
|--|-------------------------------|---|
| Australia | 250 VAC, 10 A, 50 Hz | AS/NZ 3112-1993 |
| China | 250 VAC, 10 A, 50 Hz | GB2099.1 1996 and GB1002 1996 (CH1-10P) |
| Europe (except Italy and United Kingdom) | 250 VAC, 10 A, 50 Hz | CEE (7) VII |
| Italy | 250 VAC, 10 A, 50 Hz | CEI 23-16/VII |
| Japan | 125 VAC, 12 A, 50 Hz or 60 Hz | JIS 8303 |
| North America | 125 VAC, 10 A, 60 Hz | NEMA 5-15 |
| United Kingdom | 250 VAC, 10 A, 50 Hz | BS 1363A |

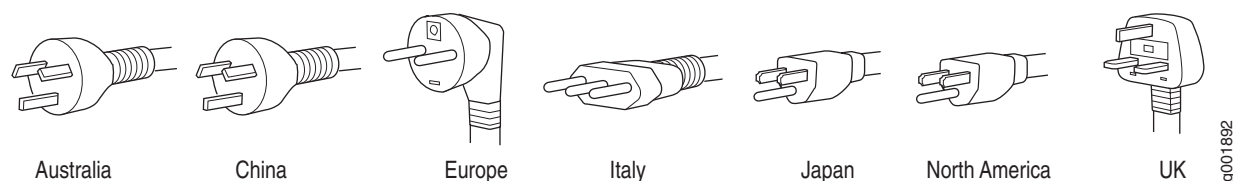Figure 16: AC Plug Types

NOTE: Power cords and cables must not block access to router components or drape where people might trip on them.

For information about the AC power supply, see “J2300 Power System” on page 15, “J4300 Power System” on page 26, or “J6300 Power System” on page 26.

To connect the power cord during initial installation, see “Connecting Power to the Services Router” on page 70.

To replace the AC power cord, see “Replacing a Power Supply Cord in a J2300 or J4300 Router” on page 132 or “Replacing a Power Supply Cord in a J6300 Router” on page 135.

Network Cable Specifications

The Services Router supports interfaces that use various kinds of network cable. For information about the type of cable used by each interface, see “Network Cable Specifications and Connector Pinouts” on page 149.

Site Preparation Checklist

The checklist in Table 27 summarizes the tasks you need to perform when preparing a site for Services Router installation.

Table 27: Site Preparation Checklist

| Item or Task | Performed By | Date | Notes |
|---|--------------|------|-------|
| Verify that environmental factors such as temperature and humidity do not exceed router tolerances. | | | |
| Measure the distances between external power sources and the router installation site. | | | |
| Select the type of rack. | | | |
| Plan the rack location, including required space clearances. | | | |

| Item or Task | Performed By | Date | Notes |
|--|--------------|------|-------|
| Secure the rack to the floor and the building structure. | | | |
| Acquire appropriate cables and connectors. | | | |

Chapter 5

Installing and Connecting a Services Router

Make the appropriate preparations and verify the J-series equipment before installing a J-series Services Router and connecting it to a power source and the network.

This chapter contains the following topics:

- Before You Begin on page 63
- Unpacking the J-series Services Router on page 64
- Installing the J2300 Services Router on page 65
- Installing the J4300 or J6300 Services Router on page 68
- Connecting Interface Cables to the Services Router on page 69
- Chassis Grounding on page 70
- Connecting Power to the Services Router on page 70
- Powering a Services Router On and Off on page 72

Before You Begin

Before you begin installation, complete the following tasks:

- Read the information in “Maintenance and Operational Safety Guidelines and Warnings” on page 187, with particular attention to “Chassis Lifting Guidelines” on page 175.
- Determine where to install the Services Router, and verify that the rack or installation site meets the requirements described in “Preparing for Router Installation” on page 53.
- For installation, gather the equipment and tools listed in Table 28.

Table 28: Equipment and Tools Required for Services Router Installation

| Desk Installation—J2300 Services Router Only | Wall Installation—J2300 Services Router Only | Rack Installation |
|---|---|---|
| Rubber feet (provided) | <ul style="list-style-type: none"> ■ Rubber feet (provided) ■ Mounting brackets and screws (provided) ■ Number 2 Phillips screwdriver ■ Four wall screws or four mounting screws and anchors capable of supporting the full weight of the chassis, up to 12 lb (5.4 kg) | <ul style="list-style-type: none"> ■ Mounting brackets and screws (provided) ■ Number 2 Phillips screwdriver ■ Four (J2300) or eight (J4300 and J6300) mounting screws appropriate for your rack |

- To connect the router to power and ground, have ready a 14 AWG grounding cable and lug, as specified in “Chassis Grounding” on page 70, and the power cord or cords shipped with the router.
- To connect network interfaces, have ready a length of cable used by the interface, as specified in “Network Cable Specifications and Connector Pinouts” on page 149.

Unpacking the J-series Services Router

The Services Router is shipped in a cardboard carton and secured with foam packing material. The carton also contains an accessory box and quick start instructions.



NOTE: The router is maximally protected inside the shipping carton. Do not unpack it until you are ready to begin installation.

To unpack the router:

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the router.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box, and verify the contents against the parts inventory on the label attached to the carton.
5. Pull out the packing material holding the router in place.
6. Verify the contents of the carton against the packing list included with the router. A generic parts inventory appears in Table 29.

7. Save the shipping carton and packing materials in case you later need to move or ship the router.

Table 29: Generic Inventory of Services Router Shipping Carton

| Component | J2300 Services Router | J4300 Services Router | J6300 Services Router |
|---|--|--|---------------------------------|
| Chassis | 1 | 1 | 1 |
| Physical Interface Module (PIM) | 2 Fast Ethernet ports and 1 of the following interfaces: <ul style="list-style-type: none"> ■ 2-port E1 ■ 2-port Serial ■ 2-port T1 NOTE: The interfaces installed in the J2300 Services Router are not field-replaceable. For more information, see “J2300 Physical Interface Module (PIM)” on page 13. | Between 0 and 6 of the following in any combination: <ul style="list-style-type: none"> ■ 1-port DS3 (T3) PIM (J6300 routers only) ■ 2-port E1 PIM ■ 2-port Fast Ethernet PIM ■ 2-port Serial PIM ■ 2-port T1 PIM ■ 1-port ADSL Annex A PIM ■ 1-port ADSL Annex B PIM | |
| Power supply | 1 (fixed) | 1 (fixed) | 1 or 2 |
| Mounting brackets | 2 | 2 (fixed) | 2 (fixed) |
| Blank panels for slots without components | 0 | Depends on router configuration | Depends on router configuration |

Installing the J2300 Services Router

You can install the J2300 Services Router on a desk, on a wall, or in a rack. The J2300 Services Router includes mounting brackets that support either wall or rack mounting, and rubber feet for desk and wall mounting.

Install the J2300 Services Router as appropriate for your site, with one of the following procedures:

- Installing the J2300 Services Router on a Desk on page 65
- Installing the J2300 Services Router on a Wall on page 66
- Installing the J2300 Services Router into a Rack on page 67


Installing the J2300 Services Router on a Desk

You can install the J2300 Services Router on a desk, table, or other level surface. The router is shipped with rubber feet in the accessory box. The rubber feet are necessary to stabilize the router on the desk.

To install the J2300 router on a desk:

1. Turn the chassis upside-down on the desk or work surface where you intend to operate the router.
2. Attach the provided rubber feet to the bottom of the chassis, as shown in Figure 17.
3. Turn the chassis right-side up on the desk or work surface.

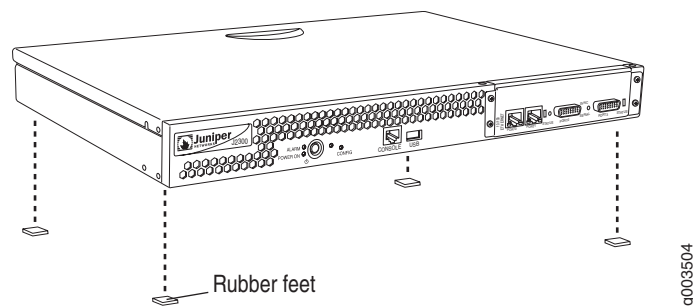Figure 17: Attaching Rubber Feet to the J2300 Services Router



Installing the J2300 Services Router on a Wall

You can install the J2300 Services Router on a wall. The router is shipped with mounting brackets and rubber feet in the accessory box. The rubber feet help stabilize the router on the wall and enhance airflow.

To install the J2300 router on a wall:


1. Turn the chassis upside-down on a desk or work surface near where you intend to operate the router.
2. Attach the provided rubber feet to the bottom of the chassis, as shown in Figure 17.
3. Turn the chassis right-side up, and place it on a flat surface.
4. Position a mounting bracket on each side of the chassis as shown in Figure 18.
5. Use a number 2 Phillips screwdriver to install the screws that secure the mounting brackets to the chassis.
6. If you are using wall anchors to support the chassis, install two pairs of anchors on the wall, spaced 19 in. (48.3 cm) apart.



CAUTION: Mounting screws and wall anchors must be strong enough to support the full weight of the chassis, up to 12 lb (5.4 kg). Attaching the router to wall studs or using wall anchors provides extra support for the chassis.

7. Have one person grasp the sides of the router, lift the router, and position it on the wall.
8. Have a second person install two pairs of mounting screws through the bracket holes on either side of the router, to secure the router to the wall.
9. Verify that the mounting screws on one side are aligned with the mounting screws on the opposite side and that the router is level.

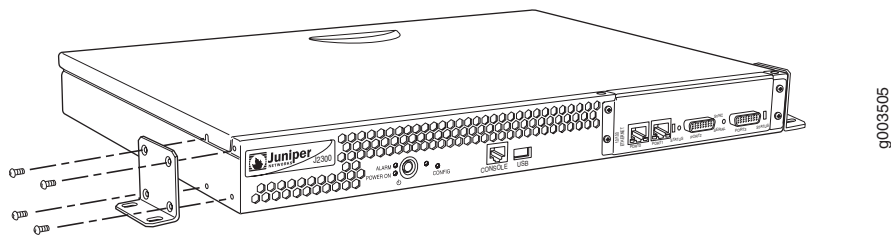Figure 18: Attaching Mounting Brackets to Install a J2300 Services Router on a Wall



Installing the J2300 Services Router into a Rack

You can front-mount the J2300 Services Router in a rack. The router is shipped with mounting brackets in the accessory box. Many types of racks are acceptable, including four-post (telco) racks, enclosed cabinets, and open-frame racks. For more information about the type of rack or cabinet the J-series router can be installed into, see “Rack Requirements” on page 54.



NOTE: If you are installing multiple routers in one rack, install the lowest one first and proceed upward in the rack.




CAUTION: The chassis weighs up to 12 lb (5.4 kg). Installing it into the rack requires one person to lift and a second person to secure the mounting screws.

To install the J2300 router into a rack:

1. Position a mounting bracket on each side of the chassis as shown in Figure 19.
2. Use a number 2 Phillips screwdriver to install the screws that secure the mounting brackets to the chassis.

3. Have one person grasp the sides of the router, lift the router, and position it in the rack.
4. Align the bottom hole in each mounting bracket with a hole in each rack rail, making sure the chassis is level.
5. Have a second person install a mounting screw into each of the two aligned holes. Use a number 2 Phillips screwdriver to tighten the screws.
6. Install the second screw in each mounting bracket.
7. Verify that the mounting screws on one side of the rack are aligned with the mounting screws on the opposite side and that the router is level.

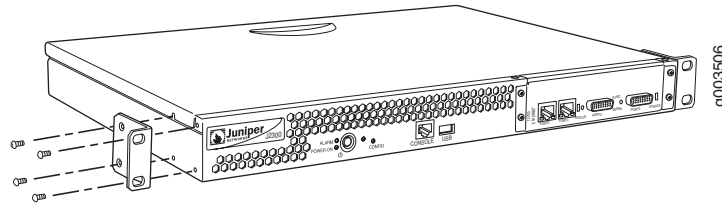Figure 19: Attaching Mounting Brackets to Install a J2300 Services Router in a Rack



Installing the J4300 or J6300 Services Router

You can front-mount the J4300 Services Router or J6300 Services Router in a rack. The router is shipped with mounting brackets installed. Many types of racks are acceptable, including four-post (telco) racks, enclosed cabinets, and open-frame racks. For more information about the type of rack or cabinet the J-series router can be installed into, see “Rack Requirements” on page 54.



NOTE: If you are installing multiple routers in one rack, install the lowest one first and proceed upward in the rack.




CAUTION: The chassis weighs between 18 lb (8.2 kg) and 24 lb (10.9 kg). Installing it into the rack requires one person to lift and a second person to secure the mounting screws.

To install the J4300 router or J6300 router into a rack:

1. Have one person grasp the sides of the router, lift the router, and position it in the rack.
2. Align the bottom hole in each mounting bracket with a hole in each rack rail as shown in Figure 20, making sure the chassis is level.

3. Have a second person install a mounting screw into each of the two aligned holes. Use a number 2 Phillips screwdriver to tighten the screws.
4. Install the remaining screws in each mounting bracket.
5. Verify that the mounting screws on one side of the rack are aligned with the mounting screws on the opposite side and that the router is level.

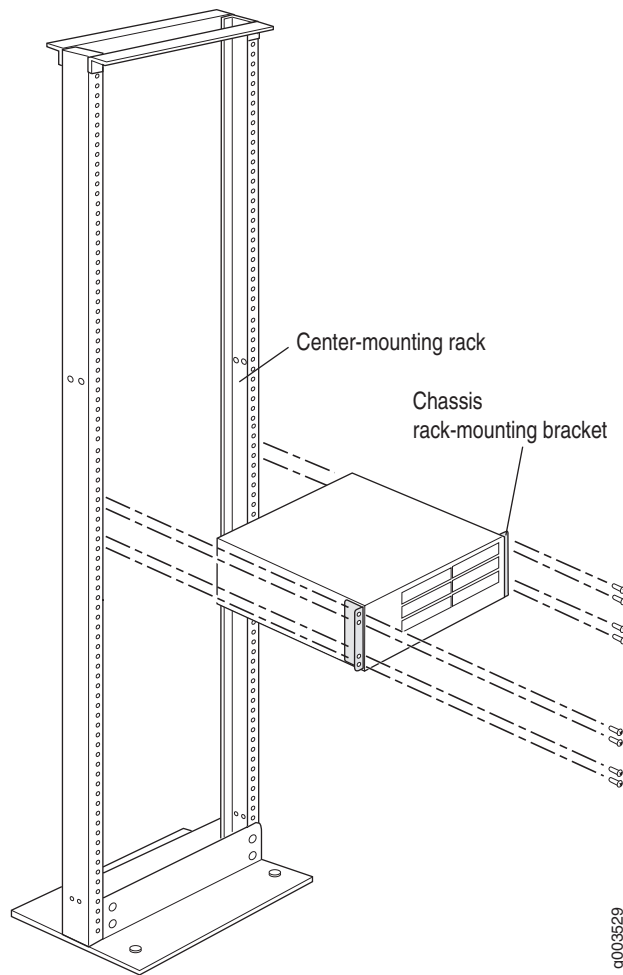Figure 20: Installing the J4300 or J6300 Services Router



g003529

Connecting Interface Cables to the Services Router

You connect the interfaces installed in the Services Router to various network media. For more information about the network interfaces supported on the router, see the *J-series Services Router Configuration Guide*.

1. Have ready a length of the type of cable used by the interface, as specified in “Network Cable Specifications and Connector Pinouts” on page 149.
2. Insert the cable connector into the cable connector port on the interface faceplate.
3. Arrange the cable as follows to prevent it from dislodging or developing stress points:
 - a. Secure the cable so that it is not supporting its own weight as it hangs to the floor.
 - b. Place excess cable out of the way in a neatly coiled loop.
 - c. Place fasteners on the loop to help maintain its shape.

Chassis Grounding

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, the Services Router must be adequately grounded before power is connected. In addition to the grounding pin on the power plug cord, a threaded insert (PEM nut), screw, and washer are provided on the rear of the chassis to connect the router to earth ground.



CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding cable that you supply. A cable with an incorrectly attached lug can damage the router (for example, by causing a short circuit).

The grounding cable must be 14 AWG single-strand wire cable, and must be able to handle the following amperage:

- J2300 router—up to 4 A
- J4300 router and J6300 router—up to 6 A

The grounding lug must be a ring-type, vinyl-insulated TV14–10R lug, or equivalent, to accommodate the 14 AWG cable.

To ground the router before connecting power, you connect the grounding cable to earth ground and then attach the lug on the cable to the chassis grounding point, with the screw. (See “Connecting Power to the Services Router” on page 70.)




Connecting Power to the Services Router

J2300 and J4300 Services Routers have a single fixed power supply. The J6300 Services Router has one or two field-replaceable power supplies. For more information about the J-series power specifications, see “Power Guidelines, Requirements, and Specifications” on page 57.

The AC power cord shipped with the router connects the router to earth ground when plugged into an AC grounding-type power outlet. The router must be connected to earth ground during normal operation.

To connect power to the router:

1. Locate the power cord or cords shipped with the router, which has a plug appropriate for your geographical location. For power cord specifications, see “Power Guidelines, Requirements, and Specifications” on page 57.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strip to the ESD point on the chassis. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Use a grounding cable to connect the router to earth ground: (For cable requirements, see “Chassis Grounding” on page 70.)
 - a. Verify that a licensed electrician has attached an appropriate grounding cable lug to the grounding cable.
 - b. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the router is installed.
 - c. With a Phillips screwdriver, remove the screw and washer from the PEM nut at the grounding point on the rear of the chassis.
 - d. Place the grounding lug at the other end of the cable over the grounding point, as shown in Figure 21, Figure 22, and Figure 23.
 - e. Secure the cable lug to the grounding point, first with the washer, then with the screw.
4. For each power supply:
 - a. Insert the appliance coupler end of a power cord into the appliance inlet on the power supply faceplate, as shown in Figure 21, Figure 22, and Figure 23.
 - b. Insert the plug into an AC power source receptacle.
5. Verify that the power cord does not block access to router components or drape where people can trip on it.

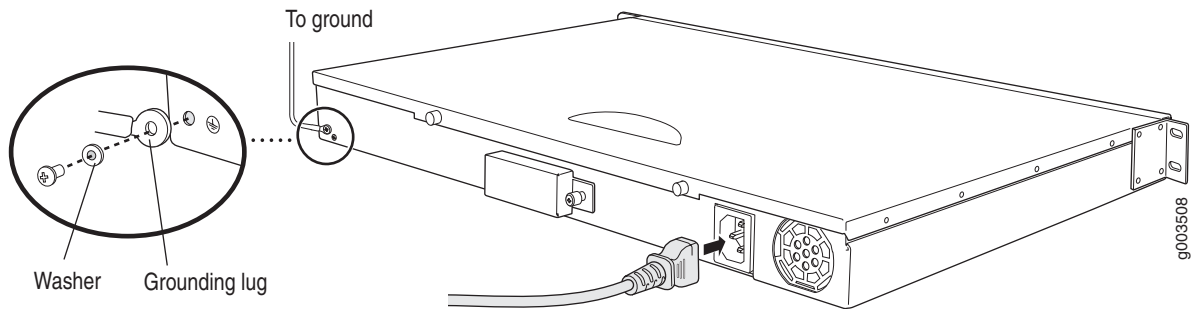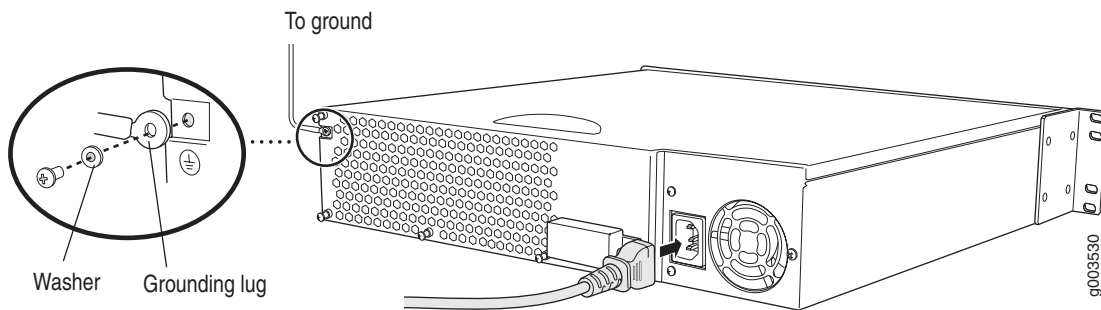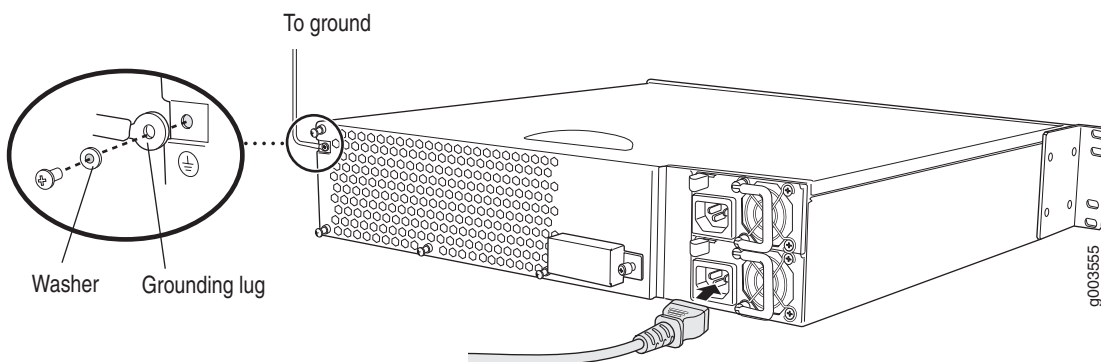Figure 21: Connecting Power to the J2300 Services Router**Figure 22: Connecting Power to the J4300 Services Router****Figure 23: Connecting Power to the J6300 Services Router**

Powering a Services Router On and Off

To power on a Services Router, press the power button. The Routing Engine boots as the power supply completes its startup sequence. The POWER ON LED lights during startup and remains on steadily when the router is operating normally.

To power off a Services Router, do one of the following:

- Graceful shutdown—Press and release the power button. The router begins gracefully shutting down the operating system and then powers itself off.
- Immediate shutdown—Press the power button and hold it for more than 5 seconds. The router immediately powers itself off without shutting down the operating system.

To remove power completely from the router, unplug the power cord. The power button on the Services Router is a standby power switch. If the router is connected to an AC power source receptacle when you press the power button to power the router off, the router remains in standby mode and a small amount (5 V and 3.3 V) of standby voltage is still available in the chassis.

Chapter 6

Establishing Basic Connectivity

The JUNOS software is preinstalled on the Services Router. When the router is powered on, it is ready to be configured. If the router does not have a configuration from the factory or your service provider, you must configure the software to establish basic connectivity.

If you are setting up a Services Router for the first time, you can use either J-Web Quick Configuration or a configuration editor to configure basic connectivity. For a brief explanation of J-Web Quick Configuration and the J-Web and CLI configuration editors, see “J-series User Interface Overview” on page 33.

If you are setting up many Services Routers, autoinstallation can help automate the configuration process. For more information about autoinstallation, see “Configuring Autoinstallation” on page 97.

This chapter contains the following topics. For more information about basic connectivity, see the *JUNOS System Basics Configuration Guide*.

- Basic Connectivity Terms on page 75
- Basic Connectivity Overview on page 76
- Before You Begin on page 81
- Configuring the Services Router with J-Web Quick Configuration on page 82
- Configuring the Services Router with a Configuration Editor on page 88
- Verifying Basic Connectivity on page 95

Basic Connectivity Terms

Before configuring basic connectivity, become familiar with the terms defined in Table 30.

Table 30: Basic Connectivity Terms

| Term | Definition |
|---|--|
| domain name | Name that identifies the network or subnetwork of a router. |
| Dynamic Host Configuration Protocol (DHCP) | Protocol for assigning dynamic IP addresses to devices on a network. |
| gateway | Packets destined for IP addresses not identified in the routing table are sent to the default gateway. |
| hostname | Unique name that identifies a router on the network. |
| loopback address | IP address of a Services Router on logical interface lo0.0 that is always active and available to external hosts and as the source address for outgoing packets. |
| Network Time Protocol (NTP) | Protocol that provides a reliable way of synchronizing the system time of a router. |
| root user | A superuser or system administrator who can perform any task in the file system. |
| secure shell (SSH) | Protocol that provides a secured method of logging in to a remote network system. |
| secure sockets layer protocol (SSL) | Protocol that securely encrypts security information using public-private key technology, which requires a paired private key and authentication certificate, before transmitting data across a network. |
| telnet | Software that allows a computer to act as a remote terminal on a network system. |

Basic Connectivity Overview

To connect your Services Router to the network and establish basic connectivity, you enter information about your network. This overview contains the following topics:

- Router Identification on page 77
- Root Password on page 77
- Time Zone and System Time on page 77
- Network Settings on page 77
- Default Gateway on page 78
- Backup Router on page 78
- Loopback Address on page 78
- Management Interface Address on page 79
- Management Access on page 80

- Secure Sockets Layer Access on page 80

Router Identification

The domain name defines the network or subnetwork that the Services Router belongs to. The hostname refers to the specific machine, while the domain name is shared among all the devices in a given network. Together the hostname and domain name identify the router in the network.

Root Password

The root user has complete privileges to configure the Services Router, and manage files in the router's file system. Initially, the root password is not defined on the router. To ensure basic security, you must define the root password during initial configuration. If you use a plain-text password, the router displays the password as an encrypted string so that users viewing the configuration cannot easily see the password.

The root password must meet the following conditions:

- The password must be at least 6 characters long.
- You can include most character classes in a password (alphabetic, numeric, and special characters), except control characters.
- Valid passwords must contain at least one change of case or character class.

Time Zone and System Time

You define the time zone for the location where you plan to operate the Services Router by using a designation that consists of the following information for the location:

- Name of the continent or ocean—For example, America or Atlantic
- Name of the major city or other geographic feature in the time zone—For example, Detroit or Azores

A Network Time Protocol (NTP) server provides accurate time across a network. The router synchronizes the system time with the NTP server, and periodically accesses the NTP server to maintain the correct time.

The time zone and system time must be accurate so that the router schedules events and operations as expected.

Network Settings

A Domain Name System (DNS) server on the network maintains a database for resolving hostnames and IP addresses. Network devices can query the DNS server

by hostnames rather than IP addresses. The router accesses the DNS servers that are added to the configuration to resolve hostnames in the order in which you list them.

If you plan to include your router in several domains, you can add these domains to the configuration so that they are included in a DNS search. When DNS searches are requested, the domain suffixes are appended to the hostnames.

Default Gateway

A default gateway is a static route that is used to direct packets addressed to networks not explicitly listed in the routing table. If a packet arrives at the Services Router with an address that the router does not have routing information for, the router sends the packet to the default gateway. The default gateway entry is always present in the routing and forwarding tables.

Backup Router

You can specify a backup router to take over when the routing protocol process of the Services Router is not running, usually when the Services Router is booting, or if its routing protocol process has failed. Packets arriving at a Services Router in this situation are routed to the backup router. When the routing protocol process starts up again, the address of the backup router is removed from the routing and forwarding tables of the Services Router. The backup router must be located on the same subnet.



NOTE: To configure a backup router, you must use the CLI or J-Web configuration editor. You cannot configure a backup router with J-Web Quick Configuration.

Loopback Address

The loopback address is the IP address of the Services Router. The loopback address ensures that the Services Router provides an IP address to management applications. Because it must always be available to hosts attempting to route packets to the Services Router, the loopback address resides on an interface that is always active, known as the loopback interface (lo0.0). Setting a loopback address ensures that the Services Router can receive packets addressed to the loopback address as long as the router is reachable through any entry (ingress) interface. In addition, applications such as NTP, RADIUS, and TACACS+ can use the loopback address as the source address for outgoing packets.

If you use the J-Web Set Up Quick Configuration page, you can either set a loopback address of your choice or have the loopback address automatically set to 127.0.0.1 when you click **Apply** or **OK** to commit the configuration.

Management Interface Address

The Fast Ethernet interface `fe-0/0/0`, labeled **PORT 0** on the front panel of the Services Router, is the network interface through which you perform initial router setup. After the router is initially configured, you can attach `fe-0/0/0` to the management network for use as a management interface.

Before Initial Configuration

Before initial configuration, when the factory default configuration is active:

1. The Services Router attempts to perform autoinstallation by obtaining a router configuration through all its connected interfaces, including `fe-0/0/0`. The Services Router acts as a DHCP client out the `fe-0/0/0` interface.
2. If the Services Router does not find a DHCP server within a few seconds, it sets the address of `fe-0/0/0` to `192.168.1.1/24` and becomes a DHCP server out the `fe-0/0/0` interface.

With the router temporarily acting as a DHCP server, you can manually configure it with the J-Web interface. Any DHCP client host, for example, a PC or laptop computer, directly connected to `fe-0/0/0` receives an address on the `192.168.1.1/24` network.



NOTE: The DHCP functionality for initial setup is different from the configurable DHCP server functionality of the Services Router during operation. To configure the Services Router as a DHCP server, see the *J-series Services Router Administration Guide*.

During Initial Configuration

Once you connect your laptop or PC to `fe-0/0/0`, you can use a Web browser to visit the address `192.168.1.1/24`, access the J-Web Set Up Quick Configuration page, and initially configure the router.

After Initial Configuration

After you perform the initial configuration and commit it by clicking **Apply** or **OK** on the Set Up page, the configured router can no longer act as a DHCP server. You can do either of the following:

- Continue to use the J-Web Quick Configuration and leave the IP address and prefix length as `192.168.1.1/24`. You can continue configuring the router until

the DHCP lease expires, or the physical connection is lost because the cable is disconnected or the router is rebooted.

- Change the IP address and prefix length. You lose access to the router until you either adjust the IP address of the management device to be on the same subnetwork as the router, or connect to the router through the console port.

Management Access

Telnet allows you to connect to the Services Router and access the CLI to execute commands from a remote system. Telnet connections are not encrypted and therefore can be intercepted.

Telnet access to the root user is prohibited. You must use more secure methods, such as SSH, to log in as **root**.

If you are using a JUNOScript server to configure and monitor routers, you can activate clear-text access on the router to allow unencrypted text to be sent directly over a TCP connection without using any additional protocol (such as SSH, SSL, or telnet). Information sent in clear-text is not encrypted and therefore can be intercepted. For more information about the JUNOScript application programming interface (API), see the *JUNOScript API Guide*.

SSH also allows you to connect to the router and access the CLI to execute commands from a remote system. However, unlike telnet, SSH encrypts the password so that it cannot be intercepted.

SSH connections are authenticated by a digital certificate. SSH uses public-private key technology for both connection and authentication. The SSH client software must be installed on the machine where the client application runs. If the SSH private key is encrypted (for greater security), the SSH client must be able to access the passphrase used to decrypt the key.

For information about obtaining SSH software, see <http://www.ssh.com> and <http://www.openssh.com>.

Secure Sockets Layer Access

HTTPS access allows secure management of the Services Router through the Web interface. Communication between the router and your Web browser is encrypted with a session key negotiated by the SSL server certificate.

The Secure Sockets Layer (SSL) protocol uses public-private key technology that requires a paired private key and authentication certificate SSL service. You must first obtain a digital certificate from a trusted signing authority, and then enable HTTPS access on the Services Router.

Before You Begin

Before you begin initial configuration, complete the following tasks:

- Install the Services Router in its permanent location, as described in “Installing and Connecting a Services Router” on page 63.
- Gather the following information:
 - Hostname for the router on the network
 - Domain that the router belongs to on the network
 - Password for the root user
 - Time zone where the router is located
 - IP address of an NTP server (if NTP is used to set the time on the router)
 - IP address of a DNS server
 - List of domains that can be appended to hostnames for DNS resolution
 - IP address of the default gateway
 - IP address to be used for the loopback interface
 - IP address of the fe-0/0/0 interface
- If you are performing the initial configuration with the J-Web interface, collect the following equipment:
 - A management device, such as a laptop, with an Ethernet port
 - An Ethernet cable
- If you are performing the initial configuration with the CLI, collect the following equipment:
 - A management device, such as a PC or laptop, with a serial port and an asynchronous terminal application (such as Microsoft Windows Hyperterminal)
 - An RJ-45 to DB-9 serial port adapter (provided)
 - A rollover Ethernet cable (provided)
- If you are using SSL for secure access to the Services Router, obtain a digital certificate from a trusted signing authority.

Configuring the Services Router with J-Web Quick Configuration

If you plan to use the J-Web interface to configure the Services Router, you must connect through LAN PORT 0, as shown in Figure 24 and Figure 25.

Before you configure the router, gather the information described in “Before You Begin” on page 81.

To configure the router with J-Web Quick Configuration, perform the following procedures:



- Connecting to the J-Web Interface on page 82
- Configuring Basic Settings with Quick Configuration on page 83
- Configuring HTTPS Web Access with Quick Configuration on page 86

Connecting to the J-Web Interface

When the Services Router is powered on for the first time, if no configuration is present, the fe-0/0/0 interface on LAN PORT 0 acts as a DHCP server and assigns an IP address within the 192.168.1/24 subnetwork to any devices connected to it.

To connect to the J-Web interface using LAN PORT 0 on the router (see Figure 24 and Figure 25):

1. On the management device, such as a PC or laptop, you use to access the J-Web interface, verify that the address of the port that you connect to the router is set to one of the following:
 - An Ethernet address other than 192.168.1.1 on the 192.168.1/24 subnetwork
 - An Ethernet address from a DHCP server
2. Turn off the power to the management device.
3. Plug one end of the Ethernet cable into the Ethernet port on the management device.
4. Connect the other end of the Ethernet cable to LAN PORT 0 on the router.
5. Power on the router by pressing the power button on the front panel. Verify that the POWER ON LED on the front panel turns green.
6. Turn on the power to the management device. The router assigns an IP address to the management device within the 192.168.1/24 subnetwork if the device is configured to use DHCP.
7. From the management device, open a Web browser and enter the IP address 192.168.1.1 in the address field. The Set Up Quick Configuration page appears.

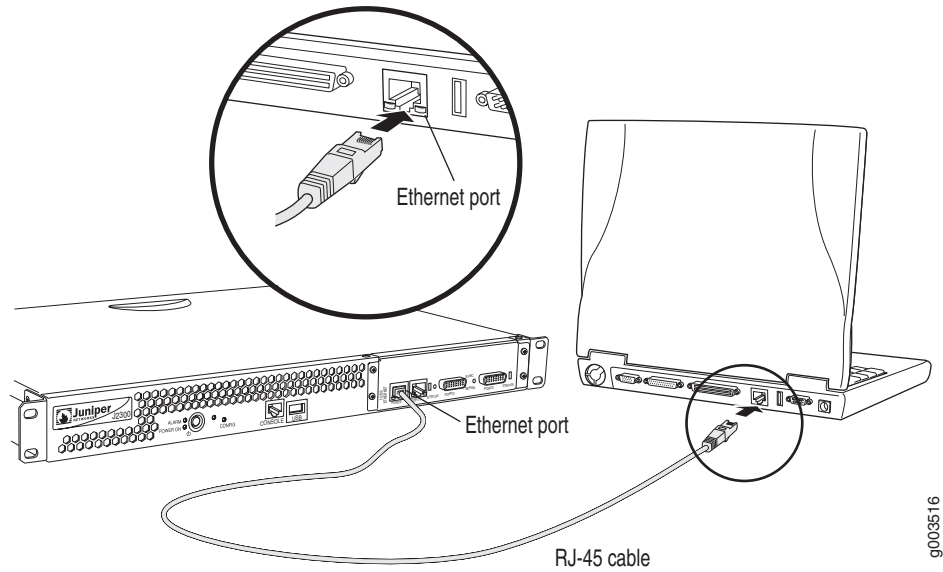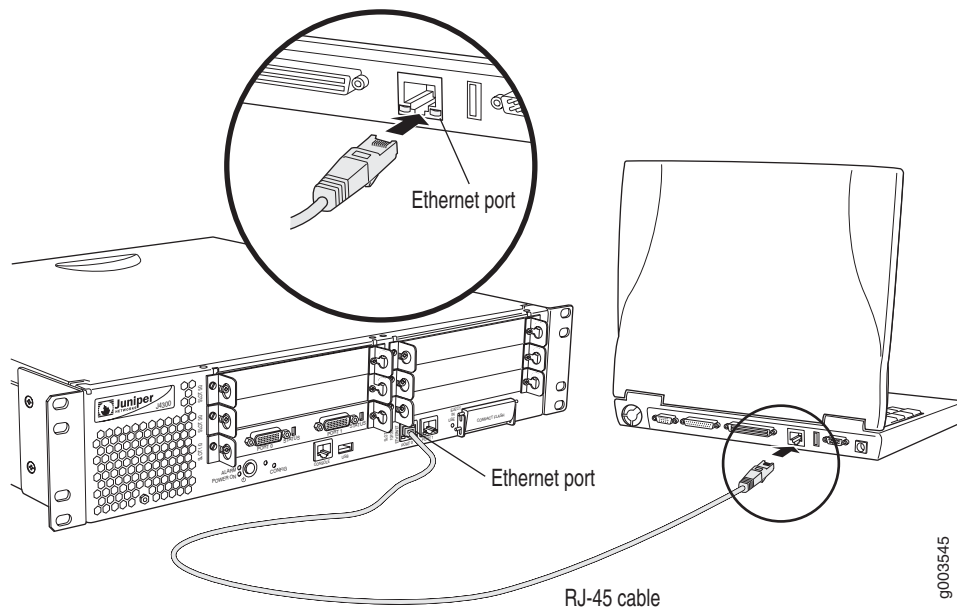Figure 24: Connecting to the Fast Ethernet Port on the J2300 Services Router**Figure 25: Connecting to the Fast Ethernet Port on the J4300 or J6300 Services Router**

Configuring Basic Settings with Quick Configuration

J-Web Quick Configuration allows you to configure basic settings. Figure 13 shows the Quick Configuration page for basic setup. To configure basic settings with J-Web Quick Configuration:

1. Enter information into the fields described in Table 31 on the Set Up Quick Configuration page.
2. Click one of the following buttons:
 - To apply the configuration and stay in the Set Up Quick Configuration page, click **Apply**.
 - To apply the configuration and return to the Quick Configuration page, click **OK**.
 - To cancel your entries and return to the Quick Configuration page, click **Cancel**.



NOTE: Once initial configuration is complete, the Services Router stops functioning as a DHCP server. If you change the IP address of fe-0/0/0 and have the management device configured to use DHCP, you lose your DHCP lease and your connection to the router through the J-Web interface. To reestablish a connection, either set the IP address on the management device manually, or connect fe-0/0/0 to the management network and access the router another way—for example, through the console port.

3. To check the configuration, see “Displaying Basic Connectivity Configurations” on page 95.

Table 31: Set Up Quick Configuration Summary

| Field | Function | Your Action |
|---------------------------------|--|---|
| Identification | | |
| Host Name (required) | Defines the hostname of the router. | Type the hostname. |
| Domain Name | Defines the network or subnetwork that the machine belongs to. | Type the domain name. |
| Root Password (required) | Sets the root password that user “root” can use to log in to the router. | Type a plain-text password that the system encrypts. NOTE: After a root password has been defined, it is required when you log in to the J-Web user interface or the CLI. |
| Verify Root Password (required) | Verifies the root password has been typed correctly. | Retype the password. |
| Time | | |
| Time Zone | Identifies the time zone that the router is located in. | From the drop-down list, select the appropriate time zone. |

| Field | Function | Your Action |
|---------------------|--|--|
| NTP Servers | Specify an NTP server that the router can reach to synchronize the system time. | <p>To add an IP address, type it in the box to the left of the Add button, then click Add.</p> <p>To delete an IP address, click on it in the box above the Add button, then click Delete.</p> |
| Current System Time | Synchronizes the system time with the NTP server, or manually set the system time and date. | <p>■ To immediately set the time using the NTP server, click Set Time via NTP. The router sends a request to the NTP server and synchronizes the system time.</p> <p>NOTE: If you are configuring other settings on this page, the router also synchronizes the system time using the NTP server when you click Apply or OK.</p> <p>■ To set the time manually, click Set Time Manually. A pop-up window allows you to select the current date and time from drop-down lists.</p> |
| Network | | |
| DNS Name Servers | Specify a DNS server that the router can use to resolve hostnames into addresses. | <p>To add an IP address, type it in the box to the left of the Add button, then click Add.</p> <p>To delete an IP address, click on it in the box above the Add button, then click Delete.</p> |
| Domain Search | Adds each domain name that the router is included in to the configuration so that they are included in a DNS search. | <p>To add a domain name, type it in the box to the left of the Add button, then click Add.</p> <p>To delete a domain name, click on it in the box above the Add button, then click Delete.</p> |
| Default Gateway | Defines a default gateway through which to direct packets addressed to networks not explicitly listed in the routing table. | Type a 32-bit IP address, in dotted decimal notation. |
| Loopback Address | Defines a reserved IP address that is always available on the router. If no address is entered, this address is set to 127.0.0.1/32. | Type a 32-bit IP address and prefix length, in dotted decimal notation. |


| Field | Function | Your Action |
|---|---|--|
| fe-0/0/0 Address | Defines the IP address and prefix length of fe-0/0/0 . The interface fe-0/0/0 is typically used as the management interface for accessing the router. By default this address is set to 192.168.1.1/24 . | Type a 32-bit IP address and prefix length, in dotted decimal notation. NOTE: If you change the fe-0/0/0 address, you will lose your connection to the J-Web interface when you click Apply or OK . If you need to change this address but want to continue using the J-Web interface after applying the initial configuration, set the IP address on the management device manually. |
| Management Access | | |
| Allow Telnet Access | Allows remote access to the router using telnet. | To enable telnet access, select the check box. |
| Allow JUNOScript over Clear-Text Access | Allows JUNOScript to access the router using a protocol for sending unencrypted text over a TCP connection. | To enable JUNOScript access over clear-text, select the check box. |
| Allow SSH Access | Allows remote access to the router using SSH. | To enable SSH access, select the check box. |

Configuring HTTPS Web Access with Quick Configuration

The Secure Sockets Layer (SSL) protocol uses public-private key technology that requires a paired private key and authentication certificate SSL service. To use SSL, you must import the SSL certificate into the Services Router and then configure HTTPS Web access to the Services Router.

When you enable HTTPS access on the Services Router, you must use `https://URL` or `https://ip address`.

Figure 26 shows the Quick Configuration page for SSL.

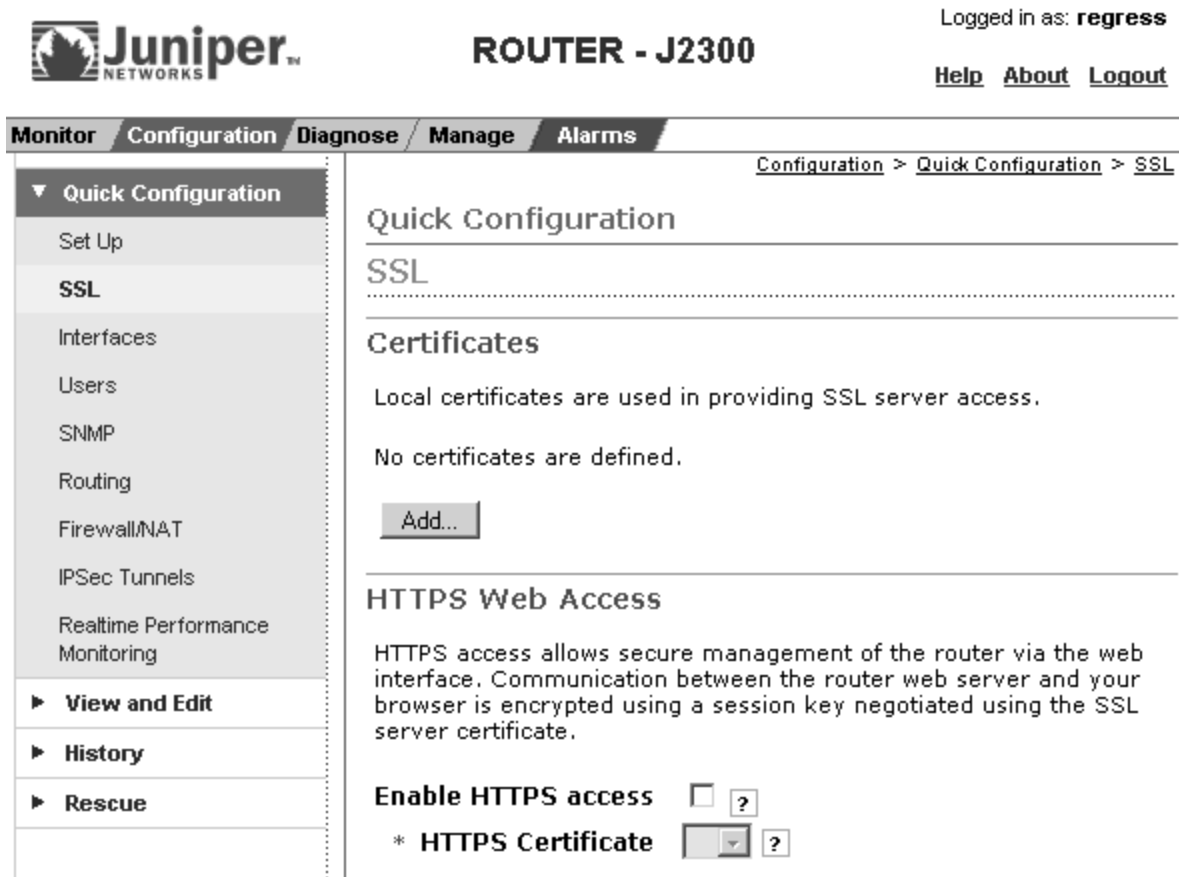Figure 26: Quick Configuration SSL Page

To configure SSL settings in the J-Web interface:

1. Enter information into the fields described in Table 32 on the SSL Quick Configuration page.
2. Click one of the following buttons:
 - To apply the configuration and stay in the SSL Quick Configuration page, click **Apply**.
 - To apply the configuration and return to the Quick Configuration page, click **OK**.
 - To cancel your entries and return to the Quick Configuration page, click **Cancel**.
3. To check the configuration, see “Displaying Basic Connectivity Configurations” on page 95.



NOTE: You must obtain a certificate from a trusted signing authority before performing this task.

Table 32: SSL Quick Configuration Summary

| Field | Function | Your Action |
|------------------|---|--|
| Certificates | Displays digital certificates required for SSL access to the Services Router. | Click Add and type the certificate name in the Certificate Name box. Paste the text of your certificate in the Certificate box. Click OK . |
| HTTPS Web Access | Allows secure management of the Services Router by encrypting communication between the router and the Web browser. | To enable secure Web access, select Enable HTTPS access and then select the certificate from the HTTPS Certificate list. |

Configuring the Services Router with a Configuration Editor

If you plan to use the CLI to configure the router, you must connect through the console port, as shown in Figure 27 and Figure 28.

You can configure basic settings in the J-Web interface from a device attached to the fe-0/0/0 on LAN PORT 0. For instructions, see “Connecting to the J-Web Interface Interface” on page 82.

Before you configure the router, gather the information described in “Before You Begin” on page 81

This section contains the following topics:

- Connecting to the CLI on page 88
- Configuring Basic Settings with a Configuration Editor on page 90

Connecting to the CLI

To connect to the CLI using the console port on the router:

1. Turn off the power to the management device, such as a PC or laptop computer, that you are using to access the CLI.
2. Plug one end of an Ethernet rollover cable into the RJ-45 to DB-9 serial port adapter (see Figure 27 and Figure 28).





NOTE: The Ethernet rollover cable and RJ-45 to DB-9 serial port adapter are provided in the router's accessory box.

3. Plug the RJ-45 to DB-9 serial port adapter into the serial port on the management device (see Figure 27 and Figure 28).
4. Connect the other end of the Ethernet rollover cable to the console port on the router (see Figure 27 and Figure 28).
5. Turn on the power to the management device.
6. Start your asynchronous terminal emulation application (such as Microsoft Windows Hyperterminal) and select the appropriate COM port to use (for example, COM1).
7. Configure the port settings as follows:
 - Bits per second: 9600
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: None
8. Power on the router by pressing the power button on the front panel. Verify that the POWER ON LED on the front panel turns green.

The terminal emulation screen on your management device displays the boot sequence. When the router has finished booting, a login prompt appears.

9. Log in as the user "root". There is no password.

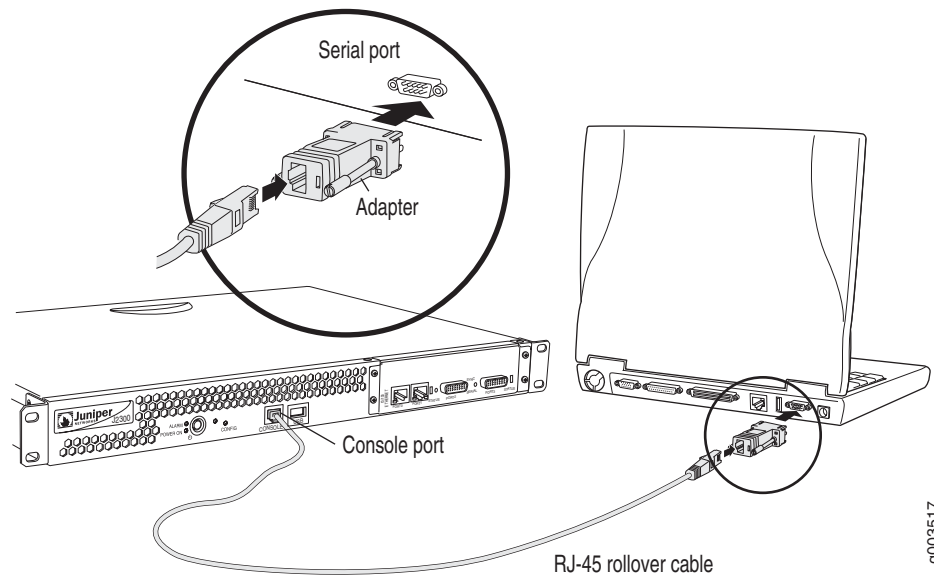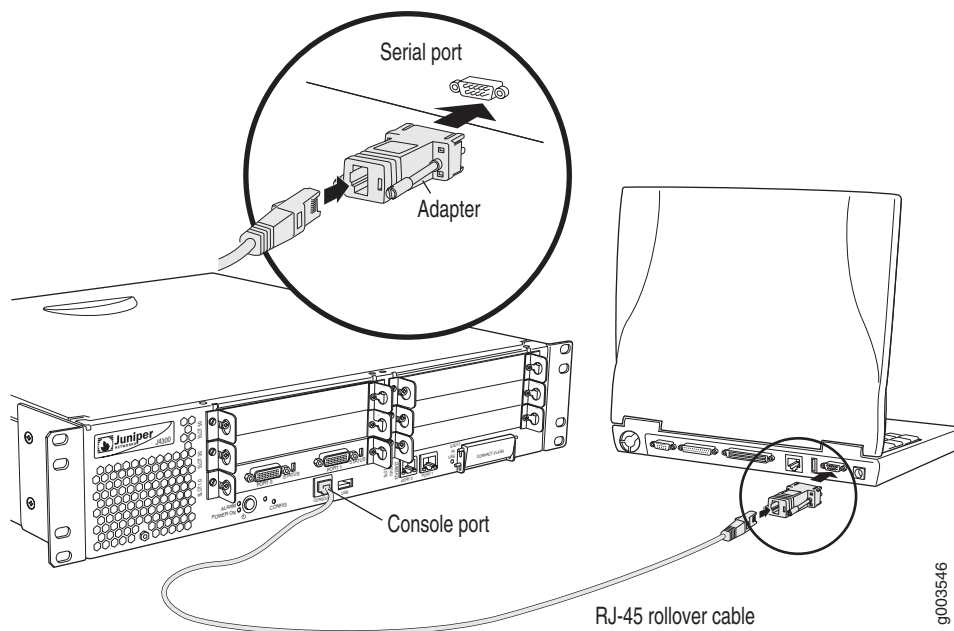Figure 27: Connecting to the Console Port on the J2300 Services Router**Figure 28: Connecting to the Console Port on the J4300 or J6300 Services Router**

Configuring Basic Settings with a Configuration Editor

To establish basic connectivity on a Services Router, you identify the router, connect the router to the network, and specify basic network settings.

In a typical network, the Services Router has the basic settings listed in Table 33. Determine the values to set on the Services Router in your network.

Table 33: Sample Settings on a Services Router

| Services Router Property | Sample Value |
|--|---|
| Services Router hostname | routera |
| Access for user “root” | SSH RSA public key |
| IP address of the NTP server used to synchronize system time on the Services Router | 10.148.2.21 |
| Services Router location | Sunnyvale, California, USA, which is in the America/Los_Angeles time zone |
| IP address of the DNS server to which DNS requests are sent | 10.148.2.32 |
| Domains to which the Services Router belongs | lab.router.net and router.net |
| IP address of a backup router to use while the Services Router is booting or if the routing protocol processes fail to start | 192.168.2.44 |
| Loopback IP address and prefix length for the Services Router lo0 interface | 172.16.1.24/32 |
| IP address and prefix length for the Services Router fe-0/0/0 interface | 192.168.2.24/24 |

To use a configuration editor to configure basic settings:

1. Navigate to the top of the configuration hierarchy in either the J-Web or CLI configuration editor.
2. To configure basic settings, perform the configuration tasks described in Table 34.
3. If you are using the J-Web interface, click **Commit** to view a summary of your changes, then click **OK** to commit the configuration. If you are using the CLI, commit the configuration by entering the `commit` command.
4. To check the configuration, see “Displaying Basic Connectivity Configurations” on page 95.

Table 34: Configuring Basic Settings

| Task | J-Web Configuration Editor | CLI Configuration Editor |
|--|--|--|
| Navigate to the System level in the configuration hierarchy. | <ol style="list-style-type: none"> 1. In the configuration editor hierarchy, select Configuration > View and Edit > Edit Configuration. 2. Next to System, click Configure or Edit. | From the top of the configuration hierarchy, enter edit system . |
| Define the hostname of the router. | In the Host name box, type the hostname of the router—for example, routera . | Set the hostname. For example: set host-name routera |
| Name the domain in which the router is located. | In the Domain name box, type the domain name of the router—for example, lab.router.net . | Set the domain name. For example: set domain-name lab.router.net |
| Allow SSH remote access. | <ol style="list-style-type: none"> 1. In the Nested configuration section, next to Services, click Configure or Edit. 2. Next to Ssh, click Configure or Edit. 3. Click OK. 4. Click OK a second time to return to the System level in the configuration editor hierarchy. | Set remote access for SSH: set services ssh |
| Define root authentication for access to the router. NOTE: For readability, the entire key is not shown. | <ol style="list-style-type: none"> 1. In the Nested configuration section, next to Root authentication, click Configure or Edit. 2. Next to Ssh rsa, click Add New Entry. 3. In the Authorized key box, type the RSA password—for example, ssh-rsa AAAAB3Nza...D9Y2gXF9ac== root@routera.lab.router.net 4. Click OK. 5. Click OK a second time to return to the System level in the configuration editor hierarchy. | Set the root password. For example: set root-authentication ssh-rsa "ssh-rsa AAAAB3Nza...D9Y2gXF9ac== root@routera.lab.router.net" |
| Define the time zone the router is located in. | In the Time zone list, select the time zone for your router—for example, America/Los_Angeles . | Set the time zone. For example: set time-zone America/Los_Angeles |

| Task | J-Web Configuration Editor | CLI Configuration Editor |
|---|--|--|
| Define the NTP server that NTP requests can be sent to. | <ol style="list-style-type: none"> 1. In the Nested configuration section, next to Ntp, click Configure or Edit. 2. Next to Server, click Add New Entry. 3. In the Address box, type the NTP server's IP address—for example, 10.148.2.21 4. Click OK. 5. Click OK a second time to return to the System level in the configuration editor hierarchy. | <p>Set the address of the NTP server. For example:</p> <pre>set ntp server 10.148.2.21</pre> |
| Define the DNS server that receives DNS requests. | <ol style="list-style-type: none"> 1. Next to Name server, click Add New Entry. 2. In the Address box, type the address of the DNS server—for example, 10.148.2.32. 3. Click OK. | <p>Set the address of the DNS server. For example:</p> <pre>set name-server 10.148.2.32</pre> |
| Add each domain that the router belongs to. | <ol style="list-style-type: none"> 1. Next to Domain search, click Add New Entry. 2. In the Value box, type the name of the domain in which the router is located—for example, lab.router.net. 3. Click OK. 4. Next to Domain search, click Add New Entry. 5. In the Value box, type the name of another domain that the router belongs to—for example, router.net. 6. Click OK. | <p>Set the domains to be searched. For example:</p> <pre>set domain-search lab.router.net set domain-search router.net</pre> |
| Define the backup router to be used when the router is booting or the routing protocol processes are not running. | In the Backup router section, next to Address, type the IP address of the backup router—for example, 192.168.2.44 . | <p>Set the address for the backup router. For example:</p> <pre>set backup router address 192.168.2.44</pre> |

| Task | J-Web Configuration Editor | CLI Configuration Editor |
|-------------------------------------|---|--|
| Define the IP address for lo0.0. | <ol style="list-style-type: none"> 1. In the configuration editor hierarchy, next to Interfaces, click Configure or Edit. 2. In the Interface table, locate the lo0 row and click Unit. 3. In the Unit table, click 0, and in the Family section next to Inet, click Configure or Edit. 4. To delete the existing IP address, click the Discard button. Select the Delete Configuration Below This Point radio button from the next display. 5. Next to Address, click Add new entry. 6. In the Source box, type the address and prefix length for the loopback interface—for example, 172.16.1.24/32. 7. Click OK. | <ol style="list-style-type: none"> 1. Exit the system level of the hierarchy: exit 2. From the top of the configuration hierarchy, enter edit interfaces. 3. Delete the existing IP address: delete lo0 unit 0 family inet address. 4. Set the IP address and prefix length of lo0.0. For example: set lo0 unit 0 family inet address 172.16.1.24/32. |
| Define the IP address for fe-0/0/0. | <ol style="list-style-type: none"> 1. In the configuration editor hierarchy, next to Interfaces, click Configure or Edit. 2. In the Interface table, locate the fe-0/0/0 row and click Unit. 3. In the Unit table, click 0, and in the Family section next to Inet, click Configure or Edit. 4. To delete the existing IP address, click the Discard button. Select the Delete Configuration Below This Point radio button from the next display. 5. Next to Address, click Add new entry. 6. In the Source box, type the address and prefix length for the management interface—for example, 192.168.1.1/24. 7. Click OK. | <ol style="list-style-type: none"> 1. Delete the existing IP address: delete fe-0/0/0 unit 0 family inet address. 2. Set the IP address and prefix length of fe-0/0/0. For example: set fe-0/0/0 unit 0 family inet address 192.168.1.1/24 |

Verifying Basic Connectivity

To verify that the Services Router has the settings you configured, perform the following task.

Displaying Basic Connectivity Configurations

Purpose Verify the configuration of basic connectivity. Because the basic connectivity settings appear in different places in the configuration hierarchy, displaying the entire configuration at once makes viewing the settings easier.

Action From the J-Web interface, select **Configuration > View and Edit > View Configuration Text**. Alternatively, from configuration mode in the CLI, enter the `show` command. The following sample output displays the sample values configured in Table 34. Your output displays the values you set.

Sample Output

```
system {
  host-name routera;
  domain-name lab.router.net;
  domain-search [ lab.router.net router.net ];
  backup-router 192.168.2.44;
  time-zone America/Los_Angeles;
  root-authentication {
    ssh-rsa "ssh-rsa AAAAB3Nza...D9Y2gXF9ac==root@routera.lab.router.net";
  }
  name-server {
    10.148.2.32;
  }
  services {
  }
  ntp {
    server 10.148.2.21;
  }
}
interfaces {
  fe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 172.16.1.24/32;
      }
    }
  }
}
```

What It Means The output shows the configuration of basic connectivity. Verify that the values displayed are correct for your Services Router. For more information about the format of a configuration file, see the *J-series Services Router Configuration Guide*.

Chapter 7

Configuring Autoinstallation

If you are setting up many J-series Services Routers, autoinstallation can help automate the configuration process. You can use either the J-Web configuration editor or CLI configuration editor to configure autoinstallation. The J-Web interface does not include Quick Configuration pages for autoinstallation.

This chapter contains the following topics:

- Autoinstallation Terms on page 97
- Autoinstallation Overview on page 98
- Before You Begin on page 100
- Configuring Autoinstallation with a Configuration Editor on page 100
- Verifying Autoinstallation on page 102

Autoinstallation Terms

Before configuring autoinstallation, become familiar with the terms defined in Table 35.

Table 35: Autoinstallation Terms

| Term | Definition |
|-----------------------------|--|
| autoinstallation | Automatic configuration of a Services Router when it is powered on without a valid configuration file or is configured specifically for autoinstallation. Autoinstallation is useful when deploying multiple Services Routers. |
| default configuration | Configuration state when a boot file cannot be located during autoinstallation. |
| host-specific configuration | Configuration state when a specific filename is used during TFTP server requests. |

Autoinstallation Overview

Autoinstallation provides automatic configuration when a new Services Router is powered on without a configuration file or for a Services Router configured for autoinstallation. The autoinstallation process begins anytime a Services Router is powered on and a valid configuration file is not found in the nonvolatile RAM (NVRAM). Typically, a configuration file is unavailable when a Services Router is powered on for the first time, or if the configuration file is deleted from the NVRAM. The autoinstallation features is useful deploying multiple Services Router in networks.

This overview contains the following topics:

- Autoinstallation Interfaces on page 98
- Autoinstallation Process on Services Router on page 98
- Automatic Configuration of a New Services Router on page 99

Autoinstallation Interfaces

Autoinstallation can take place through either a Fast Ethernet LAN interface or a serial interface on the Services Router. If a LAN interface with High-level Data Link Control (HDLC) encapsulation is found on the Services Router, autoinstallation attempts to obtain an IP address using DHCP requests, bootstrap protocol (BOOTP), or Reverse Address Resolution Protocol (RARP) requests.

If a serial interface with Frame Relay encapsulation is connected, then the Services Router attempts to obtain an IP address using BOOTP requests. On a serial interface without Frame Relay encapsulation, the Services Router uses Serial Line Address Request Protocol (SLARP).

Autoinstallation Process on Services Router

When the Services Router is powered on for the first time, autoinstallation attempts the following on each connected interface simultaneously:

1. The Services Router sends out DHCP, BOOTP, RARP, or SLARP requests to obtain an IP address.
2. If a DHCP server responds, the router obtains the following:
 - An IP address and subnet mask
 - The address of the Trivial File Transfer Protocol (TFTP), Hypertext Transfer Protocol (HTTP), or File Transfer Protocol (FTP) server with the configuration file
 - The IP address of the TFTP server

Optionally, the hostname of the TFTP server is obtained from the DHCP server. Usually, the TFTP address or name is specified, not both. If the name is

specified, a DNS server must be available to translate the name of the TFTP server into an IP address.

If the TFTP server is not on the same LAN segment as the new Services Router, or if a specific router is required by the network, then the IP address of an intermediary router must be specified. This address is used as the location to receive TFTP requests for autoinstallation.

Automatic Configuration of a New Services Router

After a new Services Router obtains an IP address, autoinstallation attempts to download a configuration file using one of the following methods:

- Host-specific configuration. If the DHCP server specifies the name of the host-specific configuration file (boot file), the specific filename is used in the TFTP server request. The new Services Router makes three unicast TFTP requests for the specified boot file. If these attempts fail, then the router makes three broadcast requests to any available TFTP server looking for the specified boot file.
- Default configuration. If the boot file cannot be located, or the new Services Router does not receive a specified boot filename from the DHCP server, the autoinstallation process then unicasts or broadcasts TFTP requests for a default router configuration file called *network.conf*. The default configuration file, *network.conf*, contains hostname-to-IP address mapping information.

If there is no entry for the new Services Router, the autoinstallation process sends out a DNS request and attempts to resolve the hostname. If the J-series Services Router can determine its hostname, a TFTP request is sent for the *hostname.conf* file. The variable, *hostname*, is replaced by the hostname of the router. If the new Services Router is unable to map its IP address to a hostname, then TFTP requests are sent for the default configuration file, *router.conf*.

After the configuration file is downloaded from the TFTP server, it is loaded onto the Services Router and committed.

Before You Begin

To configure a network for autoinstallation of Services Routers, complete the following tasks:

- Configure a DHCP server on your network to meet your network requirements.
- Create a configuration file and place it on a TFTP server on the network. A configuration file can be either of the following:
 - A host-specific file with the name *hostname.conf* where *hostname* is the name of the Services Router.
 - A default configuration file with the minimum configuration necessary to telnet into the new Services Router for further configuration.
- Physically attach the Services Router to the network using one or more of the following interface types
 - Fast Ethernet
 - Serial with HDLC encapsulation
- If the DHCP response contains only the hostname for the TFTP server, add IP address-to-hostname mapping for the TFTP server to a DNS database file.
- To use an existing router to receive TFTP requests and forward them to the TFTP server, add additional IP addresses of the hosts providing the TFTP service.

If you choose to create a host-specific configuration file, you must also complete the following tasks:

- Configure the DHCP server to provide a configuration filename to the new Services Router. This filename is then used to request a configuration file from a TFTP server. Copy the host-specific configuration to the TFTP server.
- Copy a default configuration file named *network.conf* to the TFTP server. This file contains IP address-to-hostname mappings in the format *ip host ip address hostname* entries. If a host-specific configuration file is not specified by the DHCP server, this file is used to create a hostname for the new Services Router.
- Add the IP address-to-hostname mapping for the new Services Router to a DNS database file.

Configuring Autoinstallation with a Configuration Editor

To configure autoinstallation:

1. Navigate to the top of the configuration hierarchy in either the J-Web or CLI configuration editor.

2. To configure autoinstallation, perform the configuration tasks described in Table 36.
3. If you are using the J-Web interface, click **Commit** to view a summary of your changes, then click **OK** to commit the configuration. If you are using the CLI, commit the configuration by entering the `commit` command.
4. To check the configuration, see “Verifying Autoinstallation” on page 102.

Table 36: Configuring Autoinstallation

| Task | J-Web Configuration Editor | CLI Configuration Editor |
|---|--|--|
| Navigate to the System level in the configuration hierarchy. | <ol style="list-style-type: none"> 1. In the configuration editor hierarchy, select Configuration > View and Edit > Edit Configuration. 2. Next to System, click Configure or Edit. | From the top of the configuration hierarchy, enter <code>edit system</code> . |
| Enable autoinstallation. | Select Autoinstallation , and then click Configure . | Enter <code>set autoinstallation configuration servers url</code> . |
| Add the configuration servers by specifying the URL address of a server from which to obtain configuration files. | <ol style="list-style-type: none"> 1. Next to Configuration servers, click Add new entry. 2. Type the location of the configuration server in the Url box. 3. If a password is required to access the server, type it into the Password box. 4. Click OK to return to the Autoinstallation page. | |
| Configure one or more Fast Ethernet or serial interfaces to perform autoinstallation, and one or two procurement protocols for each interface. The router uses the protocols to send a request for an IP address from the interface. <ul style="list-style-type: none"> ■ BOOTP—Sends requests over all interfaces. ■ RARP—Sends requests over Ethernet interfaces. ■ SLARP—Sends requests over serial interfaces. | <ol style="list-style-type: none"> 1. Next to Interfaces, click Add new entry. 2. Type the name of the interface into the Interface name box. 3. Select one or two types of protocol used by autoinstallation over the interface. You can select Bootp, Rarp, or Slarp. 4. Click OK to return to the Autoinstallation page. | Enter <code>set autoinstallation interfaces interface-name</code> , then one of the following protocols: <ul style="list-style-type: none"> ■ <code>bootp</code> ■ <code>rarp</code> ■ <code>slarp</code> For example, to set two address procurement protocols, enter the following command: <code>set autoinstallation interfaces fe-2/0/0 bootp rarp</code> |

Verifying Autoinstallation

To verify that a Services Router is configured for autoinstallation, perform the following task.

Verifying Autoinstallation Status

Purpose Display the status of the autoinstallation feature on a Services Router.

Action From the CLI, enter the show system autoinstallation status command.

Sample Output

```
user@host> show system autoinstallation status

Autoinstallation status:
Master state: Active
Last committed file: None
Configuration server of last committed file: 10.25.100.1
Interface:
  Name: fe-0/0/0
  State: Configuration Acquisition
  Acquired:
    Address: 192.168.124.75
    Hostname: host-fe-000
    Hostname source: DNS
    Configuration filename: router-fe-000.conf
    Configuration filename server: 10.25.100.3
  Address acquisition:
    Protocol: DHCP Client
    Acquired address: None
    Protocol: RARP Client
    Acquired address: None
Interface:
  Name: fe-0/0/1
  State: None
  Address acquisition:
    Protocol: DHCP Client
    Acquired address: None
    Protocol: RARP Client
    Acquired address: None
```

What It Means The output shows the parameters configured for autoinstallation. Verify that the values displayed are correct for the Services Router when it is deployed on the destination network.

Chapter 8

Installing and Managing J-series Licenses

To enable some JUNOS software features and use additional ports on a J-series Services Router, you must purchase, install, and manage separate software licenses. The presence on the router of the appropriate software license keys (passwords) determines the features and ports you can configure and use.

For information about how to purchase J-series software licenses, contact your Juniper Networks sales representative.

This chapter contains the following topics:

- J-series License Overview on page 103
- Before You Begin on page 105
- Managing J-series Licenses with the J-Web Interface on page 106
- Managing J-series Licenses with the CLI on page 109
- Verifying J-series License Management on page 110

J-series License Overview

The J-series set of licenses is composed of two primary types: feature licenses and port licenses. Each type of license is valid for only a single Services Router. To manage the licenses, you must understand the components of a license key.

This section contains the following topics:

- Software Feature Licenses on page 104
- Port Licenses on page 104
- License Key Components on page 105

Software Feature Licenses

Each feature license is tied to exactly one software feature, and that license is valid for exactly one Services Router. Table 37 lists the Services Router software features that require licenses.

Table 37: J-series Services Router Software Feature Licenses

| Licensed Software Feature | License Name |
|---|---|
| Stateful Firewall Filters and NAT | |
| Stateful firewall and Network Address Translation (NAT) on the J2300 platform—all configuration statements within the [edit services stateful-firewall] hierarchy. | J2300 Services Router Software License for Stateful Firewall |
| Stateful firewall and NAT on the J4300 platform—all configuration statements within the [edit services stateful-firewall] hierarchy. | J4300 Services Router Software License for Stateful Firewall |
| Stateful firewall and NAT on the J6300 platform—all configuration statements within the [edit services stateful-firewall] hierarchy. | J6300 Services Router Software License for Stateful Firewall |
| IPSec VPN Tunneling | |
| IPSec VPN tunneling on the J2300 platform—all configuration statements within the [edit services ipsec-vpn] hierarchy. | J2300 Services Router Software License for IPSec Tunneling |
| IPSec VPN tunneling on the J4300 platform—all configuration statements within the [edit services ipsec-vpn] hierarchy. | J4300 Services Router Software License for IPSec Tunneling |
| IPSec VPN tunneling on the J6300 platform—all configuration statements within the [edit services ipsec-vpn] hierarchy. | J6300 Services Router Software License for IPSec Tunneling |
| Traffic Analysis | |
| J-Flow traffic analysis—all configuration statements within the [edit forwarding-options sampling] and [edit forwarding-options accounting] hierarchies. | J-series Services Router Software License for J-Flow Traffic Analysis |
| BGP Route Reflectors | |
| Advanced Border Gateway Protocol (BGP) features that enable route reflectors—all configuration statements within the [edit protocols bgp cluster] hierarchy. BGP clusters allow routers to act as route reflectors by enabling the readvertising of BGP routes to internal peers. | J-series Services Router Software License for Advanced Border Router Protocol Support |

Port Licenses

Each port license is tied to exactly one licensed port, and that license is valid for exactly one Services Router. To enable multiple ports, you must have a license for each licensed port. Table 38 lists the additional Services Router port licenses.

Table 38: J-series Services Router Port Licenses

| Licensed Port | License Name |
|--|---|
| T1 | |
| Additional port on a T1 Physical Interface Module (PIM). | J-series Services Router Software License for One Additional T1 Port |
| E1 | |
| Additional port on an E1 PIM. | J-series Services Router Software License for One Additional E1 Port |
| Serial | |
| Additional port on a serial PIM. | J-series Services Router Software License for One Additional Serial Port |
| Fast Ethernet | |
| Additional port on a Fast Ethernet PIM. | J-series Services Router Software License for One Additional Fast Ethernet Port |

The LAN ports (fe-0/0/0 and fe-0/0/1) do not require port licenses.

Additionally, one port per PIM can be configured without a port license. A port license is required only if you configure more than one port on a particular PIM.

License Key Components

A license key consists of two parts:

- License ID—Alphanumeric string that uniquely identifies the license key. When a license is generated, it is given a license ID.
- License data—Block of binary data that defines and stores all license key objects.

For example, in the following typical license key, the string `li29183743` is the license ID, and the trailing block of data is the license data:

```
li29183743 4ky27y acasck 82fsj6 jzsn4q ix8i8d adj7kr
            8uq38t ix8i8d jzsn4q ix8i8d 4ky27y acasck
            82fsj6 ii8i7e adj7kr 8uq38t ks2923 a9382e
```

The license data defines the device ID for which the license is valid and the version of the license.

Before You Begin

Before you begin managing the J-series licenses, complete the following tasks:

- Purchase the licenses you require.
- Establish basic connectivity. See “Establishing Basic Connectivity” on page 75.


Managing J-series Licenses with the J-Web Interface

To manage licenses with the J-Web interface, you perform the following tasks:

- Adding New Licenses with the J-Web Interface on page 108
- Deleting Licenses with the J-Web Interface on page 108
- Displaying License Keys with the J-Web Interface on page 108
- Downloading Licenses with the J-Web Interface on page 109

Figure 29 shows the J-Web Licenses page.

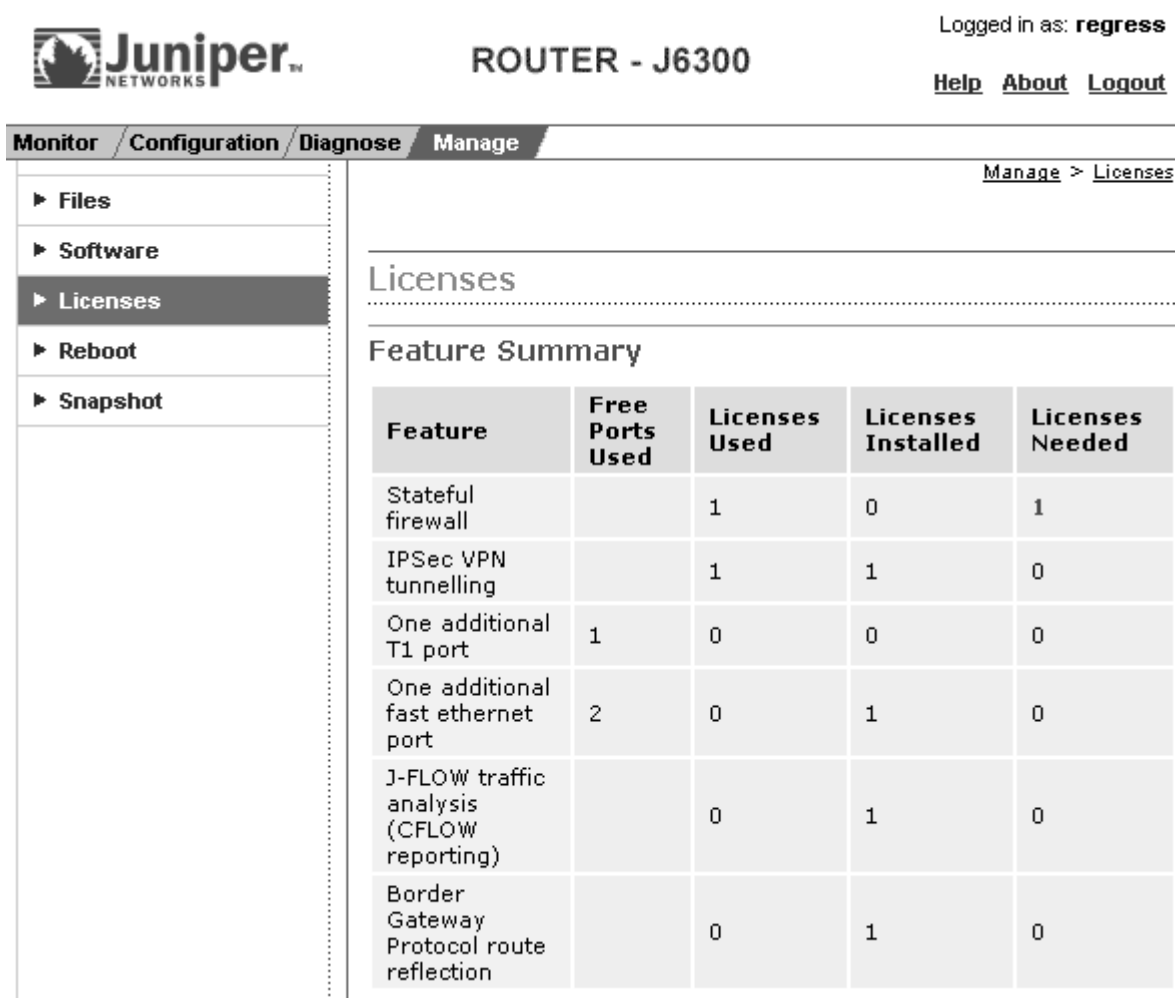Figure 29: Licenses Page



Juniper NETWORKS ROUTER - J6300

Logged in as: regress

[Help](#) [About](#) [Logout](#)

Monitor / Configuration / Diagnose / Manage

[Manage](#) > [Licenses](#)

Licenses

Feature Summary

| Feature | Free Ports Used | Licenses Used | Licenses Installed | Licenses Needed |
|---|-----------------|---------------|--------------------|-----------------|
| Stateful firewall | | 1 | 0 | 1 |
| IPSec VPN tunnelling | | 1 | 1 | 0 |
| One additional T1 port | 1 | 0 | 0 | 0 |
| One additional fast ethernet port | 2 | 0 | 1 | 0 |
| J-FLOW traffic analysis (CFLOW reporting) | | 0 | 1 | 0 |
| Border Gateway Protocol route reflection | | 0 | 1 | 0 |

The Licenses page displays a summary of licensed features that are configured on the Services Router and a list of the licenses that are installed on the router. The information on the license management page is summarized in Table 39.

Table 39: Summary of License Management Fields

| Field Name | Definition |
|---------------------------|--|
| Feature Summary | |
| Feature | <p>Name of the licensed feature or port:</p> <ul style="list-style-type: none"> ■ J-series licenses listed in Table 37 and Table 38 ■ All features—All-inclusive licenses |
| Free Ports Used | <p>If the feature is an interface, this field lists the number of free ports for that interface that are currently configured.</p> <p>If the feature is not an interface, this field is blank.</p> |
| Licenses Used | Number of licenses currently being used on the router. Usage is determined by the configuration on the router. If a port license exists and that port is configured, the license is considered used. |
| Licenses Installed | Number of licenses installed on the router for the particular feature or port. |
| Licenses Needed | <p>Number of licenses required for legal of use the feature or port. Usage is determined by the configuration on the router:</p> <ul style="list-style-type: none"> ■ If a feature is configured and the license for that feature is not installed, a single license is needed. ■ If one or more ports are configured beyond the number of licenses installed on the router, a single license is needed for each additional configured port. |
| Installed Licenses | |
| ID | Unique alphanumeric ID of the license. |
| State | <p>Valid—The installed license key is valid.</p> <p>Invalid—The installed license key is not valid.</p> |
| Version | Numeric version number of the license key. |
| Group | <p>If the license defines a group license, this field displays the group definition.</p> <p>If the license requires a group license, this field displays the required group definition.</p> <p>NOTE: Because group licenses are currently unsupported, this field is always blank.</p> |
| Enabled Features | Name of the feature that is enabled with the particular license. |

Adding New Licenses with the J-Web Interface

To add a new license key on a Services Router with the J-Web license manager:

1. In the J-Web interface, select **Manage > Licenses**.
2. Under Installed Licenses, click **Add** to add a new license key.
3. Do *one* of the following, using a blank line to separate multiple license keys:
 - In the License File URL box, type the full URL to the destination file containing the license key to be added.
 - In the License Key Text box, paste the license key text, in plain-text format, for the license to be added.
4. Click **OK** to add the license key.
5. Go on to “Verifying J-series License Management” on page 110.

Deleting Licenses with the J-Web Interface

To delete one or more license keys from a Services Router with the J-Web license manager:

1. In the J-Web interface, select **Manage > Licenses**.
2. Select the check box of the license or licenses you want to delete.
3. Click **Delete**.
4. Go on to “Verifying J-series License Management” on page 110.

Displaying License Keys with the J-Web Interface

To display the license keys installed on a Services Router with the J-Web license manager:

1. In the J-Web interface, select **Manage > Licenses**.
2. Under Installed Licenses, click **Display Keys** to display all the license keys installed on the router.

A screen displaying the license keys in text format appears. Multiple licenses are separated by a blank line.

3. Go on to “Verifying J-series License Management” on page 110.

Downloading Licenses with the J-Web Interface

To download the license keys installed on the Services Router with the J-Web license manager:

1. In the J-Web interface, select **Manage > Licenses**.
2. Under Installed Licenses, click **Download Keys** to download all the license keys installed on the router to a single file.
3. Select **Save it to disk** and specify the file to which the license keys are to be written.
4. Go on to “Verifying J-series License Management” on page 110.

Managing J-series Licenses with the CLI

To manage the J-series licenses with the CLI, perform the following tasks.

- Adding New Licenses with the CLI on page 109
- Deleting a License with the CLI on page 110
- Saving License Keys with the CLI on page 110

Adding New Licenses with the CLI

To add a new license key to the Services Router with the CLI:

1. Enter operational mode in the CLI.
2. Enter one of the following CLI commands:
 - To add a license key from a file or URL, enter the following command, specifying the filename or the URL where the key is located:
request system license add *filename* | *url*
 - To add a license key from the terminal, enter the following command:
request system license add terminal
3. When prompted, enter the license key, separating multiple license keys with a blank line.

If the license key you enter is invalid, an error is generated when you press Ctrl-D to exit license entry mode.
4. Go on to “Verifying J-series License Management” on page 110.

Deleting a License with the CLI

To delete a license key from the Services Router with the CLI:

1. Enter operational mode in the CLI.
2. Enter the following command for each license, specifying the license ID. You can delete only one license at a time.

```
request system license delete license-id
```

3. Go on to “Verifying J-series License Management” on page 110.

Saving License Keys with the CLI

To save the licenses installed on the Services Router to a file with the CLI:

1. Enter operational mode in the CLI.
2. To save the installed license keys to a file or URL, enter the following command:

```
request system license save filename | url
```

For example, the following command saves the installed license keys to a file named `license.config`:

```
request system license save ftp://user@host/license.conf
```

3. Go on to “Verifying J-series License Management” on page 110.

Verifying J-series License Management

To verify J-series license management, perform these tasks:

- Displaying Installed Licenses on page 110
- Displaying License Usage on page 112
- Displaying Installed License Keys on page 112

Displaying Installed Licenses

Purpose Verify that the expected licenses are installed and active on the Services Router.

Action From the CLI, enter the `show system license` command.

Sample Output

```
user@router> show system license
```

```

License usage:
      Feature name      Free ports  Licenses  Licenses  Licenses
                        used        used    installed needed
all                               0          1         0
firewall                 1          1         0
if-t1-4                  1          4         0
if-fe                    2          0         0
ipsec-vpn                1          1         0

Licenses installed:
License identifier: li29183743
State: valid
License version: 2
Valid for device: jp47859620

License identifier: li48293123
State: valid
License version: 2
Valid for device: jp47859620
Features:
  firewall          - Stateful firewall

License identifier: li72194673
State: valid
License version: 2
Valid for device: jp47859620
Features:
  if-t1-4           - Four additional T1 ports

License identifier: li41597793
State: valid
License version: 2
Valid for device: jp47859620
Features:
  ipsec-vpn         - IPSec VPN tunnelling

```

What It Means

The output shows a list of the license usage and a list of the licenses installed on the Services Router. Verify the following information:

- Each license is present. Licenses are listed in ascending alphanumeric order by license ID.

- The state of each license is valid.

A state of *invalid* indicates that the license key is not a valid license key. Either it was entered incorrectly or it is not valid for the specific device.

- The feature for each license is the expected feature. The features enabled are listed by license. An all-inclusive license has **All features** listed.
- All configured features have the required licenses installed. The **Licenses needed** column must show that no licenses are required.

Displaying License Usage

Purpose Verify that the licenses fully cover the feature configuration on the Services Router.

Action From the CLI, enter the show system license usage command.

Sample Output

```
user@router> show system license usage
```

| Feature name | Free ports used | Licenses used | Licenses installed | Licenses needed |
|----------------|--------------------|------------------|-----------------------|--------------------|
| all | | 0 | 1 | 0 |
| bgp-reflection | | 0 | 1 | 1 |
| firewall | | 1 | 1 | 0 |
| if-t1-4 | 1 | 3 | 4 | 0 |
| if-fe | 2 | 0 | 2 | 1 |
| ipsec-vpn | | 2 | 1 | 1 |

What It Means The output shows a list of the licenses installed on the Services Router and how they are used. Verify the following information:

- Each licensed feature and port is present. Features and ports are listed in ascending alphabetical order by license name. The number of licenses is shown in the fourth column. Verify that the appropriate number of licenses is installed.
- The number of used licenses matches the number of configured features and ports. If a licensed feature or port is configured, the feature or port is considered used. The sample output shows that stateful firewall and BGP route reflection are configured. Additionally, four T1 interfaces (one free port and three licensed ports) are configured. Two free and two licensed Fast Ethernet ports are configured, and one Fast Ethernet license has been installed.
- A license is installed on the Services Router for each configured feature and port. For every feature or port configured that does not have a license, one license is needed.

For example, the sample output shows that the user has configured four Fast Ethernet interfaces (two licensed interfaces and two free interfaces). This configuration requires two purchased licenses, but only one has been purchased. An additional license is required to be in compliance with license agreements.

Displaying Installed License Keys

Purpose Verify the license keys installed on the Services Router.

Action From the CLI, enter the show system license keys command.

Sample Output

```
user@router> show system license keys
```

```

li29183743 jzsn4q ix8i8d 4ky27y jzsn4q ix8i8d adj7kr
            8uq38t 82fsj6 ii8i7e adj7kr 82fsj6 acasck
            ix8i8d 4ky27y acasck 8uq38t ks2923 a938

li48293123 4ky27y acasck 82fsj6 jzsn4q ix8i8d eks12r
            8uq38t ix8i8d jzsn4q ix8i8d 4ky27y acasck
            82fsj6 ii8i7e adj7kr 8uq38t ks2923 a9382e

li83474929 dkdis8 adj7kr 4ky27y aclscck 82fsj6 jzsn4q
            8uq38t jzsn4q 9dk2i2 ii3i8d akd239 ks2923
            492idf oo8i7e adj7kr 8u3892 3ksio

```

What It Means The output shows a list of the license keys installed on the Services Router. Verify that each expected license key is present.

Part 3

Maintaining a Services Router

- Replacing and Troubleshooting Hardware Components on page 117
- Contacting Customer Support and Returning Hardware on page 139

Chapter 9

Replacing and Troubleshooting Hardware Components

Because many of the Services Router's hardware components are field-replaceable units (FRUs), you can remove and replace them yourself. When you need to replace a router component, contact your customer support or sales representative to order the field-replaceable unit (FRU) that contains the component. For instructions, see "Contacting Customer Support and Returning Hardware" on page 139.

This chapter contains the following topics:

- Replacing Hardware Components on page 117
- Troubleshooting Hardware Components on page 136

Replacing Hardware Components

This section contains the following topics:

- Tools and Parts Required on page 118
- Replacing the Console Port Cable on page 118
- Replacing a PIM on page 118
- Replacing PIM Cables on page 121
- Removing and Installing the Primary Compact Flash Disk on page 123
- Removing and Installing the Removable Compact Flash Disk on page 125
- Removing and Installing the USB Storage Device on page 127
- Removing and Installing DRAM Modules on page 129
- Replacing a Power Supply Cord in a J2300 or J4300 Router on page 132
- Replacing Power System Components in a J6300 Router on page 133

Tools and Parts Required

To replace hardware components, you need the tools and parts listed in Table 40.

Table 40: Tools and Parts Required

| Tool or Part | Components |
|--|--|
| Electrostatic bag or antistatic mat | All |
| Electrostatic discharge (ESD) grounding wrist strap | All |
| Flat-blade screwdriver, approximately 1/4 in. (6 mm) | PIM |
| Phillips (+) screwdriver, number 2 | <ul style="list-style-type: none"> ■ Compact flash ■ DRAM ■ Power system components |

Replacing the Console Port Cable

The RJ-45 port labeled CONSOLE on the Services Router's front panel allows you to connect the router to an external management device, such as a laptop or a terminal server. For cable specifications, see "Network Cable Specifications and Connector Pinouts" on page 149.

To replace the console port cable, follow this procedure:

1. Locate an appropriate replacement cable and connector.
2. Plug the Ethernet connector at either end of the cable into the console port on the front panel (see Figure 27 and Figure 28).
3. Plug the connector at the other end of the cable into the external management device. If you are connecting to a DB-9 serial port, use the provided RJ-45 to DB-9 serial port adapter.

Replacing a PIM

Physical Interface Modules (PIMs) in J4300 and J6300 Services Routers are field replaceable. The router must be powered off before the PIMs are removed or installed. This section contains the following topics:


- Removing a PIM on page 119
- Installing a PIM on page 120

Removing a PIM

The PIMs are installed in the front of the Services Router. A PIM weighs less than 1 lb (0.5 kg).

To remove a PIM (see Figure 30):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the PIM.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the Services Router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Press and release the power button to power off the router. Verify that the **POWER ON LED** blinks and then turns off.
4. Label the cables connected to the PIM so that you can later reconnect each cable to the correct PIM.
5. Disconnect the cables from the PIM.
6. If necessary, arrange the cables to prevent them from dislodging or developing stress points:
 - Secure the cable so that it is not supporting its own weight as it hangs to the floor.
 - Place excess cable out of the way in a neatly coiled loop.
 - Use fasteners to maintain the shape of cable loops.
7. Loosen the captive screws on each side of the PIM faceplate.
8. Grasp the handles on each side of the PIM faceplate and slide the PIM out of the router. Place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a PIM into the emptied slot, install a blank PIM panel over the slot to maintain proper airflow.

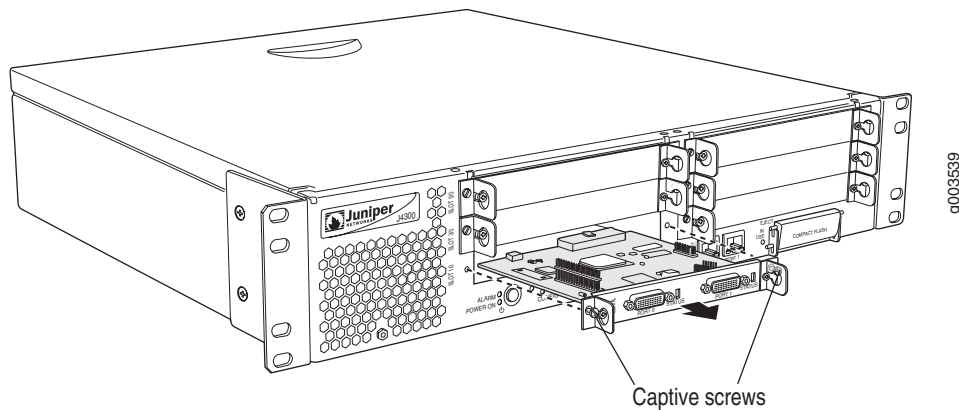Figure 30: Removing a PIM

Installing a PIM

To install a PIM (see Figure 31):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the Services Router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
2. Press and release the power button to power off the router. Verify that the POWER ON LED blinks and then turns off.
3. Align the notches in the connector at the rear of the PIM with the notches in the PIM slot in the Services Router, and then slide the PIM in until it lodges firmly in the router.




CAUTION: Slide the PIM straight into the slot to avoid damaging the components on the PIM.

4. Tighten the captive screws on each side of the PIM faceplate.
5. Insert the appropriate cables into the cable connectors on the PIM.
6. If necessary, arrange the cables to prevent them from dislodging or developing stress points:
 - Secure the cable so that it is not supporting its own weight as it hangs to the floor.

- Place excess cable out of the way in a neatly coiled loop.
 - Use fasteners to maintain the shape of cable loops.
7. Press and release the power button to power on the router. Verify that the POWER ON LED lights steadily after you press the power button.
 8. Verify that the PIM LEDs light steadily green to confirm that the PIM and its ports are online and operational. For more information about PIM LEDs, see “J2300 Physical Interface Module (PIM)” on page 13 or “J4300 and J6300 Physical Interface Modules (PIMs)” on page 25.

You can also verify correct PIM functioning by issuing the `show chassis fpc pic-status` command described in the *JUNOS Protocols, Class of Service, and System Basics Command Reference*.

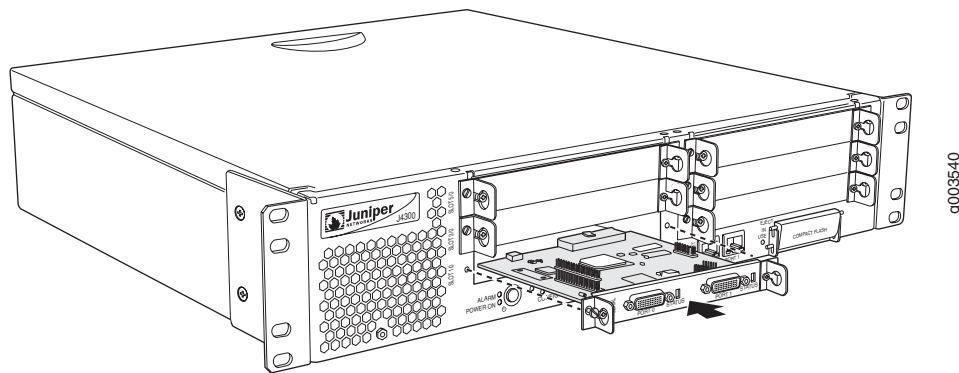Figure 31: Installing a PIM



Replacing PIM Cables

Removing and installing PIM cables does not affect Services Router function, except that a PIM does not receive or transmit data while its cable is disconnected. To replace a PIM cable, perform the following procedures:

- Removing a PIM Cable on page 121
- Installing a PIM Cable on page 122

Removing a PIM Cable

To remove a PIM cable:

1. If you are removing all cables connected to the PIM, issue the following CLI command to take the PIM offline:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pim-slot
offline
```

For example, to take the PIM in slot 4 offline, enter the following command:

```
user@host> request chassis pic fpc-slot 4 pic-slot 0 offline
```

For more information about the command, see the *JUNOS Protocols, Class of Service, and System Basics Command Reference*.

2. Unplug the cable from the cable connector port.
3. Detach the cable from the destination port.

Installing a PIM Cable

To install a PIM cable:

1. Have ready a length of the type of cable used by the PIM. For cable specifications, see “Network Cable Specifications and Connector Pinouts” on page 149.
2. Insert the cable connector into the cable connector port on the PIM faceplate.
3. Arrange the cable as necessary to prevent it from dislodging or developing stress points:
 - Secure the cable so that it is not supporting its own weight as it hangs to the floor.
 - Place excess cable out of the way in a neatly coiled loop.
 - Use fasteners to maintain the shape of cable loops.
4. Insert the other end of the cable into the destination port.
5. Repeat the previous steps for any additional cables.
6. If the PIM is offline (its status LED is steadily red), issue the following CLI command to bring the PIM online:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pim-slot
online
```

For example, to bring the PIM in slot 4 online, enter the following command:

```
user@host> request chassis pic fpc-slot 4 pic-slot 0 online
```

For more information about the command, see the *JUNOS Protocols, Class of Service, and System Basics Command Reference*.

7. Verify that the PIM status LED shines steadily green to confirm that the PIM is online.

You can also verify correct PIM functioning by issuing the `show chassis fpc pic-status` command described in the *JUNOS Protocols, Class of Service, and System Basics Command Reference*.

Removing and Installing the Primary Compact Flash Disk

The primary compact flash drive is located in a slot at the rear of the Services Router as shown in Figure 2, Figure 7, and Figure 8. The compact flash disk that you install in the compact flash drive provides primary storage for the router. It can accommodate software images, configuration files, and microcode.

For information about configuring the primary compact flash disk, see the *J-series Services Router Administration Guide*.


To remove and install a primary compact flash disk, perform the following procedures:

- Removing the Primary Compact Flash Disk on page 123
- Installing the Primary Compact Flash Disk on page 124

Removing the Primary Compact Flash Disk

To remove the primary compact flash disk (see Figure 32):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Press and release the power button to power off the router. Wait for the POWER ON LED to turn off.
4. Remove the power cord from the power supply.
5. Loosen the thumbscrew that secures the primary compact flash drive cover on the rear of the chassis.
6. Remove the compact flash drive cover.
7. Gently grasp the compact flash disk, and slide it out of the connector.
8. Place the compact flash disk on the antistatic mat or in the electrostatic bag (see Figure 32).

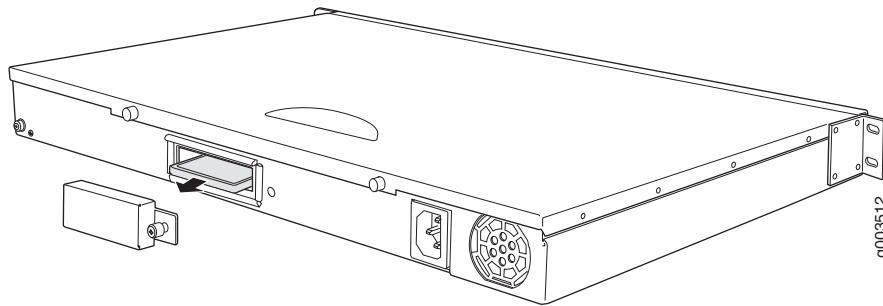Figure 32: Removing the Primary Compact Flash Disk


Installing the Primary Compact Flash Disk

To install the primary compact flash disk (see Figure 33):



NOTE: If you plan to boot the Services Router from the primary compact flash disk, you must first configure the primary compact flash disk in another router or with a computer running UNIX or Cygwin. For more information, see the *J-series Services Router Administration Guide*.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
2. Press and release the power button to power off the router. Wait for the POWER ON LED to turn off.
3. Remove the power cord from the power supply.
4. Loosen the thumbscrew that secures the primary compact flash drive cover on the rear of the chassis.
5. Remove the compact flash drive cover.
6. Slide the compact flash disk into the connector on the Routing Engine (see Figure 33).
7. Replace the compact flash drive cover.
8. Tighten the thumbscrew that secures the compact flash drive cover to the rear of the chassis.
9. Install the power cord into the power supply.
10. Press and release the power button to power on the router. Verify that the POWER ON LED lights steadily after you press the power button.

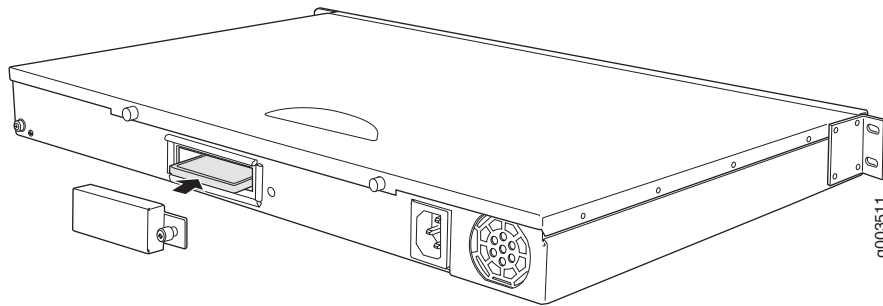Figure 33: Installing the Primary Compact Flash Disk

Removing and Installing the Removable Compact Flash Disk

The removable compact flash drive is an optional component on J4300 and J6300 Services Routers. The removable compact flash disk provides secondary storage for the router. It can accommodate software images, configuration files, and microcode. If the primary compact flash disk fails on startup, the router boots from the removable compact flash disk.

For information about configuring the removable compact flash disk, see the *J-series Services Router Administration Guide*.

To remove and install a removable compact flash disk, perform the following procedures:

- Removing the Removable Compact Flash Disk on page 125
- Installing the Removable Compact Flash Disk on page 126

Removing the Removable Compact Flash Disk



NOTE: Depending on your configuration, the Services Router might not have a backup compact flash drive. If no backup compact flash drive is installed, proceed directly to the next section, “Installing the Removable Compact Flash Disk” on page 126.

The removable compact flash drive is located in a slot on the front panel of the Services Router. To remove the removable compact flash disk (see Figure 34):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Verify the CF REMOVE LED is off.

If the CF REMOVE LED is on, the router might have booted from the removable compact flash disk.


To see which device the router used to boot, issue the `show system storage` command from the CLI. For example:

```
user@host> show system storage
Filesystem      512-blocks      Used      Avail Capacity Mounted on
/dev/ad0s1a      218254      175546      40526      81%      /
...
```

The boot device is mounted on `/`. The *primary* compact flash disk is located at `ad0`. The *removable* compact flash disk is located at `ad2`. The USB storage device is located at `usb0`. This example shows that the router booted from the primary compact flash disk.

4. If the `show system storage` output indicates that the router booted from the removable compact flash disk, press and release the power button to power off the router. Wait for the **POWER ON** LED to turn off before you remove the compact flash drive.
5. Slide the compact flash drive door up to unlatch the door, then tilt the top of the door out (see Figure 34).
6. Eject the removable compact flash disk by pressing the button to the left of the compact flash drive once to unlock the button, and again to eject the compact flash drive.
7. Gently grasp the compact flash disk, and slide it out of the connector.
8. Place the compact flash disk on the antistatic mat or in the electrostatic bag.

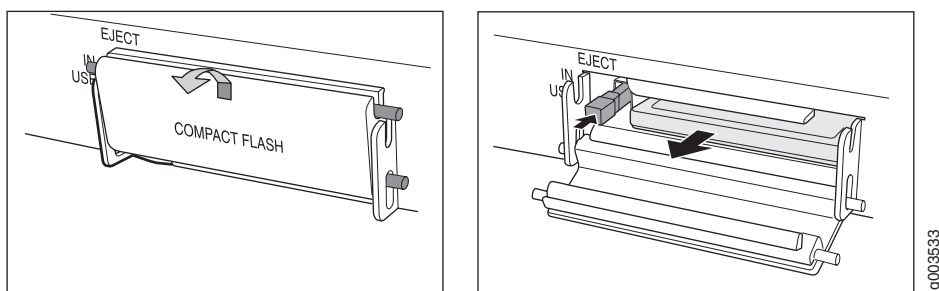Figure 34: Removing the Removable Compact Flash Disk



Installing the Removable Compact Flash Disk


To install the removable compact flash disk, follow this procedure (see Figure 35):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if

the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.

2. Slide the compact flash door up to unlatch the door, then tilt the top of the door out (see Figure 35).
3. Slide the compact flash disk into the connector on the Routing Engine.
4. Tilt the compact flash door in, and slide it down until it is secured.
5. To configure the removable compact flash disk with the request system snapshot command, see the *J-series Services Router Administration Guide*.

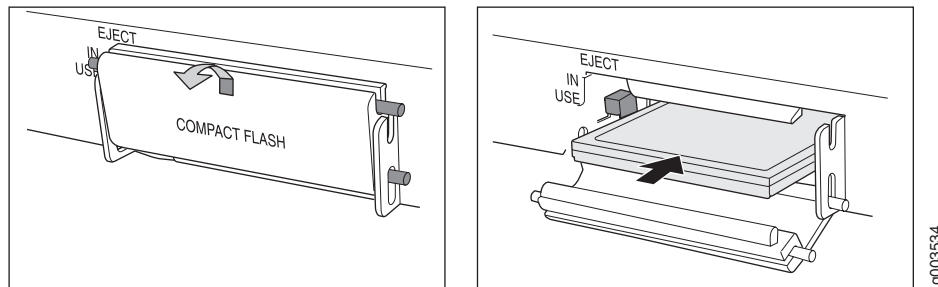Figure 35: Installing the Removable Compact Flash Disk



Removing and Installing the USB Storage Device

The USB storage device is an optional component on J-series Services Routers. If installed, the USB storage device provides secondary storage for the router. It can accommodate software images, configuration files, and microcode. If the primary compact flash disk fails on startup, and the removable compact flash disk is not installed or fails, the router boots from the USB storage device.

For information about configuring the USB storage device, see the *J-series Services Router Administration Guide*.



NOTE: For a list of supported USB storage devices, see the *J-series Services Router Release Notes* at <http://www.juniper.net>.

To remove and install a USB storage device, perform the following procedures:

- Removing the USB Storage Device on page 128
- Installing the USB Storage Device on page 128

Removing the USB Storage Device



NOTE: Depending on your configuration, the Services Router might not have a USB storage device. If no USB storage device is installed, proceed directly to the next section, “Installing the USB Storage Device” on page 128.

The USB storage device is installed into the USB port on the front panel of the Services Router. To remove the USB storage device:

1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Verify that the router did not boot from the USB storage device by issuing the `show system storage` command from the CLI. For example:

```
user@host> show system storage
Filesystem      512-blocks      Used      Avail Capacity Mounted on
/dev/ad0s1a      218254        175546    40526      81% /
...
```

The boot device is mounted on /. The primary compact flash disk is located at ad0. The removable compact flash disk is located at ad2. The USB storage device is located at usb0. This example shows that the router booted from the primary compact flash disk.

4. If the `show system storage` output indicates that the router booted from the USB storage device, press and release the power button to power off the router. Wait for the **POWER ON** LED to turn off before you remove the USB storage device.
5. Gently grasp the USB storage device and slide it out of the USB port.
6. Place the USB storage device on the antistatic mat or in the electrostatic bag.

Installing the USB Storage Device

To install the USB storage device:



NOTE: For a list of supported USB storage devices, see the *J-series Services Router Release Notes* at <http://www.juniper.net>.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.

2. Orient the USB storage device with the USB port on the front panel of the router.
3. Insert the USB storage device into the USB port. If the USB storage device does not easily slide into the port, it might not be oriented correctly. Turn the USB storage device upside-down and try again.
4. To configure the USB storage device with the `request system snapshot` command, see the *J-series Services Router Administration Guide*.

Removing and Installing DRAM Modules

The DRAM installed on the Routing Engine provides storage for the routing and forwarding tables and for other Routing Engine processes. The design of the Routing Engine allows you to modify the DRAM configuration by adding dual inline memory modules (DIMMs) to the Routing Engine board, or removing DIMMs from the board. The Routing Engine contains one or two 168-pin DIMMs.

The DRAM modules are located on the top of the Routing Engine, as shown in Figure 36 and Figure 37.



CAUTION: DRAM modules are not transferable across J-series platforms. Do not install a J2300 DIMM in a J4300 chassis, for example.

Figure 36: J2300 DRAM Location


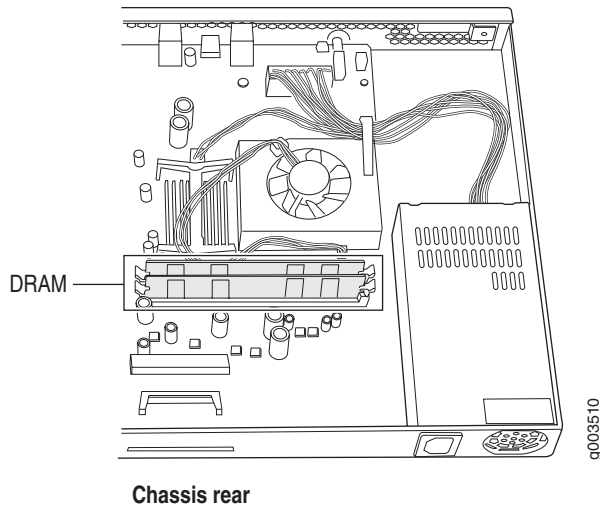


Figure 37: J4300 and J6300 DRAM Location

To modify the DRAM configuration, use the following procedures:

- Removing a DRAM Module on page 130
- Installing a DRAM Module on page 132

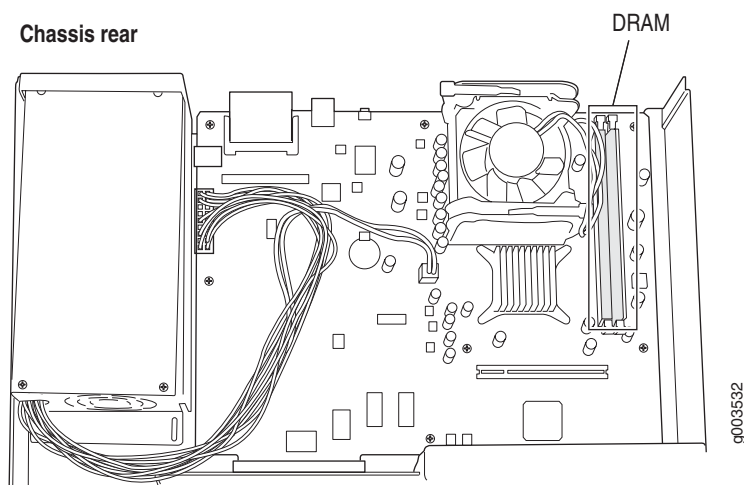Removing a DRAM Module



NOTE: Depending on your configuration, the Services Router might have an empty DRAM slot. If you are adding a single DIMM to the DRAM configuration, proceed directly to the next section, “Installing a DRAM Module” on page 132.

To remove a DRAM module:

1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Press and release the power button to power off the router. Wait for the POWER ON LED to turn off.
4. Loosen the thumbscrews at the rear of the chassis that secure the cover to the chassis.
5. Slide the cover off the chassis.

6. To release the DRAM module, press the plastic ejectors on both sides of the module (see Figure 38 or Figure 39).
7. Grasp the DRAM module, being careful not to touch any electrical components on the module, and firmly pull it out of the slot on the Routing Engine.
8. Place the DRAM module on the antistatic mat or in the electrostatic bag.

Figure 38: Adding or Replacing a DRAM Module in a J2300 Chassis


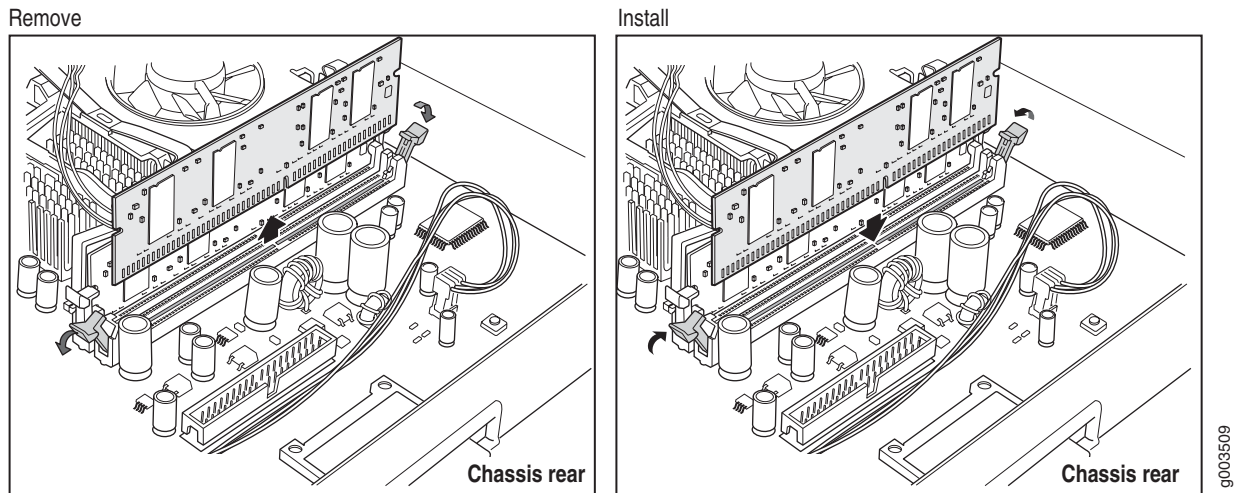


Figure 39: Adding or Replacing a DRAM Module in a J4300 or J6300 Chassis

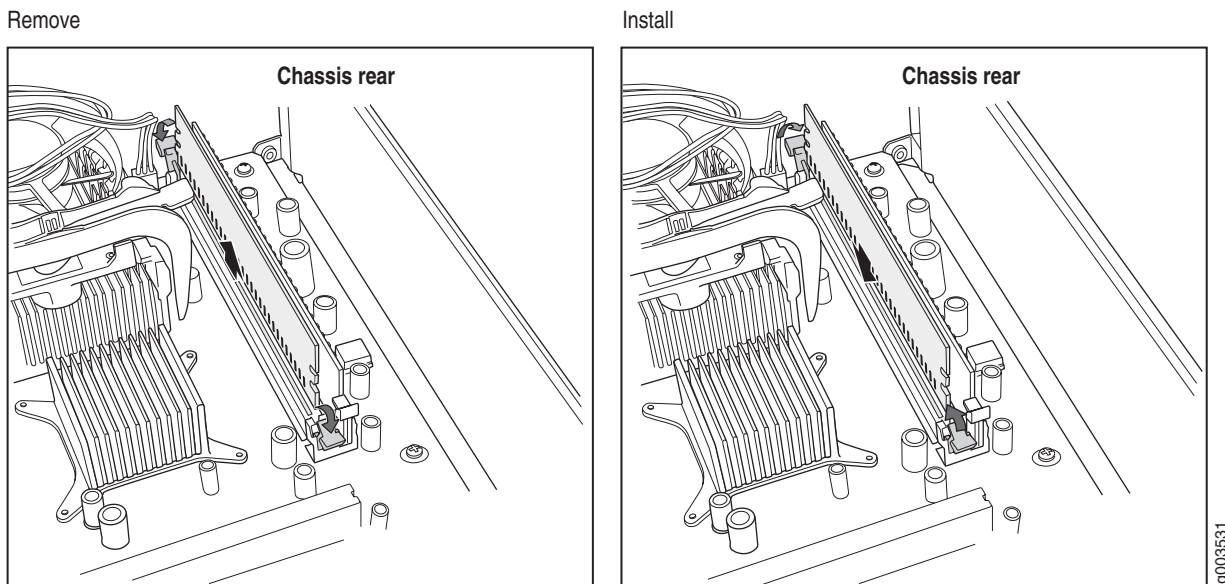

Installing a DRAM Module

To install a DRAM module onto the Routing Engine:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
2. Press and release the power button to power off the router. Wait for the POWER ON LED to turn off.
3. Loosen the thumbscrews at the rear of the chassis that secure the cover to the chassis.
4. Slide the cover off the chassis.
5. Remove the DRAM module from its electrostatic bag.
6. To open the empty DRAM slot, press the plastic ejectors on both sides (see Figure 38 or Figure 39).
7. Grasp the DRAM module by the edges, being careful not to touch any electrical components.
8. Pressing firmly on both ends, push the module into the slot until the ejectors return completely to the closed position (see Figure 38 or Figure 39).
9. Slide the cover onto the chassis.
10. Tighten the thumbscrews at the rear of the chassis that secure the cover to the chassis.
11. Press and release the power button to power on the router. Verify that the POWER ON LED lights steadily after you press the power button.

You can view the DRAM configuration and verify that it was installed correctly by issuing the `show chassis routing-engine` command, described in the *JUNOS Protocols, Class of Service, and System Basics Command Reference*.

Replacing a Power Supply Cord in a J2300 or J4300 Router

To replace the power cord for an AC power supply:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see “AC Power, Connection, and Power Cord Specifications” on page 59).
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.

3. Press and release the power button to power off the Services Router. Wait for the **POWER ON** LED to turn off.
4. Unplug the power cord from the power source receptacle.
5. Unplug the power cord from the appliance inlet on the power supply faceplate.
6. Insert the appliance coupler end of the replacement power cord into the appliance inlet on the power supply faceplate.
7. Insert the power cord plug into an AC power source receptacle.



NOTE: The router must be connected to a dedicated AC power feed. For information about connecting to AC power sources, see “Connecting Power to the Services Router” on page 70.

8. Press and release the power button to power on the router. Verify that the **POWER ON** LED lights steadily after you press the power button.
9. Verify that the power cord does not block access to router components or drape where people might trip on it.

Replacing Power System Components in a J6300 Router

The J6300 Services Router has one or two load-sharing AC power supplies (see Figure 8), located at the right rear of the chassis. Each AC power supply provides power to all components in the router. The AC power supplies are fully redundant. If one power supply fails or is removed, the remaining power supply instantly assumes the entire electrical load. One power supply can provide full power for as long as the router is operational.

Each J6300 power supply is hot-insertable and hot-removable. To replace a power supply in a J6300 router, use the following procedures:

- Removing a Power Supply in a J6300 Router on page 133
- Installing a Power Supply in a J6300 Router on page 134
- Replacing a Power Supply Cord in a J6300 Router on page 135

Removing a Power Supply in a J6300 Router

The power supplies are located at the right rear of the chassis. A power supply weighs 2.4 lb (1.1 kg).




CAUTION: Do not leave a power supply slot empty for more than a short time while the Services Router is operational. The power supply or a blank power supply panel must remain in the chassis for proper airflow.

To remove a power supply from a J6300 Services Router:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
2. Unplug the power cord from the power source receptacle.
3. Unplug the power cord from the appliance inlet on the power supply faceplate.
4. Slide the red ejector tab on the power supply faceplate to the right and hold it in place, to unlock the power supply.
5. Grasp the handle on the power supply faceplate, and pull firmly to start removing the power supply. Slide it halfway out of the chassis (see Figure 40).
6. Place one hand underneath the power supply to support it and slide it completely out of the chassis.
7. If you are not reinstalling a power supply into the emptied slot, install a blank power supply panel over the slot.

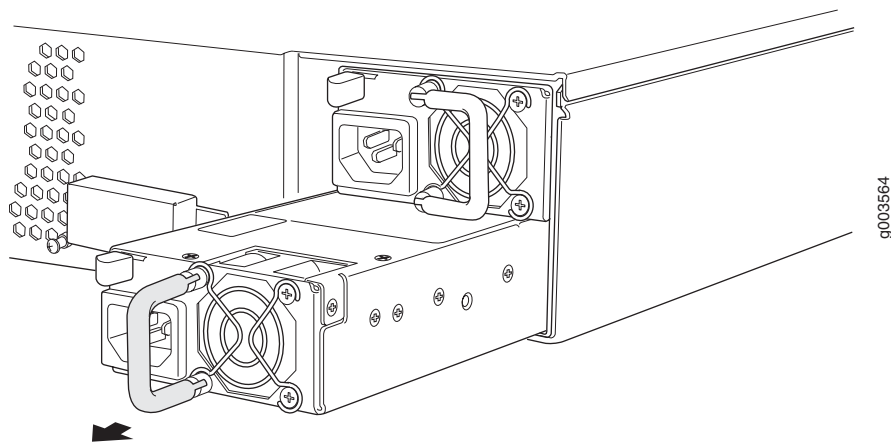Figure 40: Removing a Power Supply



Installing a Power Supply in a J6300 Router

To install a power supply in a J6300 Services Router (see Figure 41):


1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
2. Using both hands, slide the power supply into the chassis until you feel resistance.
3. Firmly push the power supply into the chassis until it comes to a stop. Make sure that the power supply faceplate is flush with any adjacent power supply faceplate.
4. Insert the appliance coupler end of a power cord into the appliance inlet on the power supply faceplate.
5. Insert the power cord plug into an AC power source receptacle.



NOTE: Each power supply must be connected to a dedicated AC power feed. For information about connecting to AC power sources, see “Connecting Power to the Services Router” on page 70.

6. Verify that the power cord does not block access to router components or drape where people might trip on it.

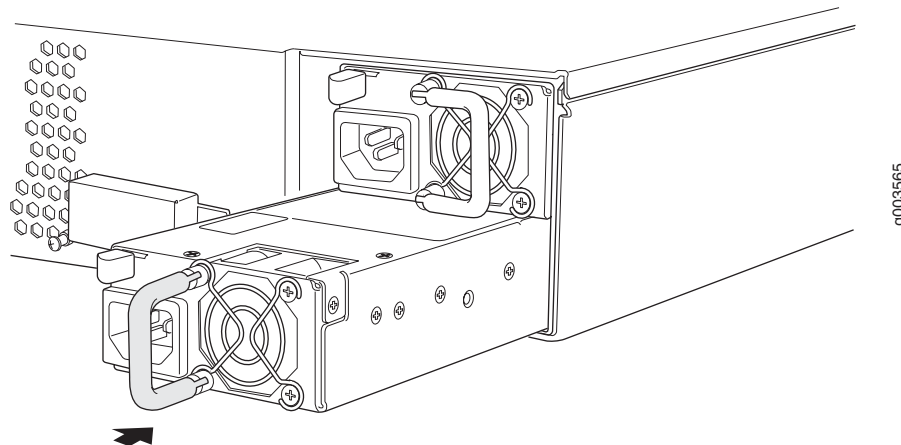Figure 41: Installing an AC Power Supply



Replacing a Power Supply Cord in a J6300 Router

To replace the power cord for a redundant power supply:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see “AC Power, Connection, and Power Cord Specifications” on page 59).
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. Unplug the power cord from the power source receptacle.
4. Unplug the power cord from the appliance inlet on the power supply faceplate.
5. Insert the appliance coupler end of the replacement power cord into the appliance inlet on the power supply faceplate.
6. Insert the power cord plug into an AC power source receptacle.



NOTE: Each power supply must be connected to a dedicated AC power feed. For information about connecting to AC power sources, see “Connecting Power to the Services Router” on page 70.

7. Verify that the power cord does not block access to Services Router components or drape where people might trip on it.

Troubleshooting Hardware Components

This section provides an overview of the resources you can use to troubleshoot hardware problems on the Services Router:

- Chassis Alarm Conditions on page 136
- Contacting the Juniper Networks Technical Assistance Center on page 138

Chassis Alarm Conditions

When the Routing Engine detects an alarm condition, it lights the yellow (amber) ALARM LED on the front panel. When the condition is corrected, the light turns off.



NOTE: The ALARM LED on the Services Router lights yellow whether the alarm condition is major (red) or minor (yellow).

To view a more detailed description of the alarm cause, issue the `show chassis alarms` CLI command:

```
user@host> show chassis alarms
```

Table 41 describes alarms that can occur for a chassis component such as the Routing Engine or a Physical Interface Module (PIM).

Table 41: Chassis Alarm Conditions and Corrective Actions

| Component | Alarm Conditions | Corrective Action | Alarm Severity |
|------------------------|---|--|----------------|
| Alternative boot media | The Services Router boots from an alternative boot device—the removable compact flash disk or the USB storage device. | Typically, the router boots from the primary compact flash disk. If you configured your router to boot from an alternative boot device, ignore this alarm condition. If you did not configure the router to boot from an alternative boot device, contact JTAC. (See “Requesting Support” on page xviii.) | Yellow (minor) |
| PIM | A PIM has failed. When a PIM fails, it attempts to reboot. If the Routing Engine detects that a PIM is rebooting too often, it shuts down the PIM. | Replace the failed PIM. (See “Replacing a PIM” on page 118.) | Red (major) |
| Routing Engine | An error occurred during the process of reading or writing compact flash. | Reformat the compact flash and install a bootable image. (See the <i>J-series Services Router Administration Guide</i> .) If this remedy fails, you must replace the failed Routing Engine. To contact JTAC, see “Requesting Support” on page xviii. | Yellow (minor) |
| | Routing Engine temperature is too warm. | ■ Check the room temperature. (See “Router Environmental Tolerances” on page 55.) | Yellow (minor) |
| | Routing Engine temperature is too hot. | ■ Check the air flow. (See “General Site Guidelines” on page 53.) ■ Check the fans. (See “J2300 Cooling System” on page 15 or “J4300 and J6300 Cooling System” on page 27.) If you must replace a fan or the Routing Engine, contact JTAC. (See “Requesting Support” on page xviii.) | Red (major) |
| | Routing Engine fan has failed. | Replace the failed fan. To contact JTAC, see “Requesting Support” on page xviii. | Red (major) |

Contacting the Juniper Networks Technical Assistance Center

If you need assistance while troubleshooting a Services Router, open a support case using the Case Manager link at <http://www.juniper.net/support/>, or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

Chapter 10

Contacting Customer Support and Returning Hardware

This chapter describes how to return the Services Router or individual components to Juniper Networks for repair or replacement. It contains the following topics:

- Locating Component Serial Numbers on page 139
- Contacting Customer Support on page 141
- Return Procedure on page 142
- Packing a Router or Component for Shipment on page 143

Locating Component Serial Numbers

Before contacting Juniper Networks to request a Return Materials Authorization (RMA), you must find the serial number on the router or component. To list the router components and their serial numbers, enter the following command-line interface (CLI) command:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN000192AB     J4300
Midplane      REV 02.04 710-010001  CORE99563
System IO     REV 02.03 710-010003  CORE100885    P12/P45 System IO board
Routing Engine RevX2.6  750-010005  IWGS40735451  RE-J.2
FPC 0
PIC 0                               2x FE
```



NOTE: In the show chassis hardware output, PIMs are identified as PICs.

Most components also have a small rectangular serial number ID label (see Figure 42 through Figure 44) attached to the component body.

Figure 42: J2300 Serial Number ID Label

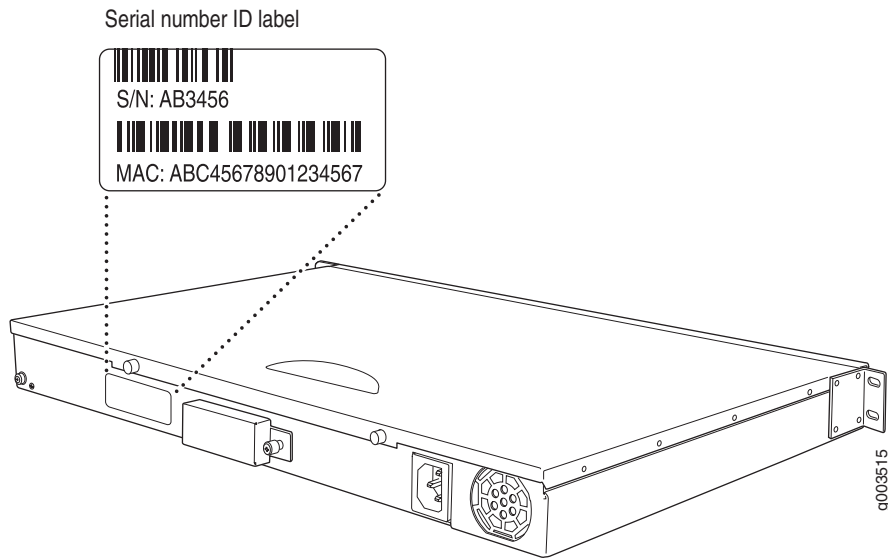


Figure 43: J4300 Serial Number ID Label

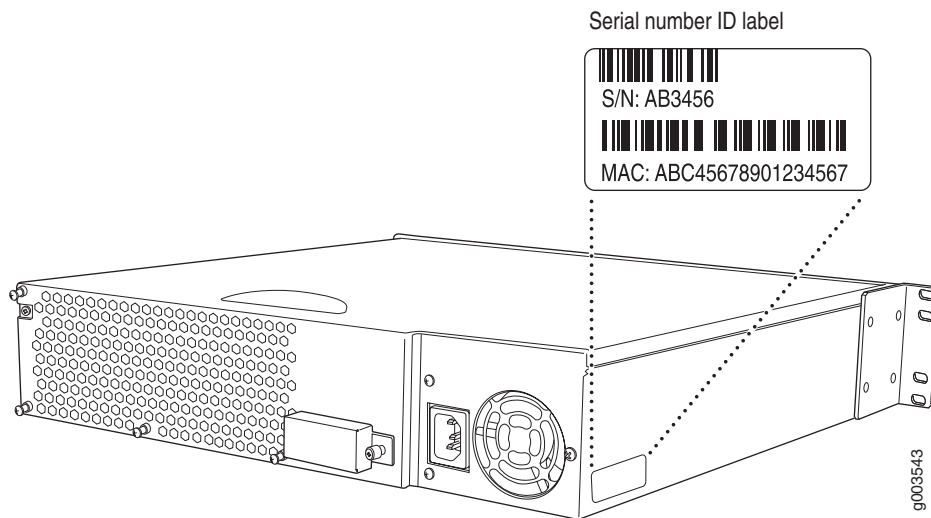
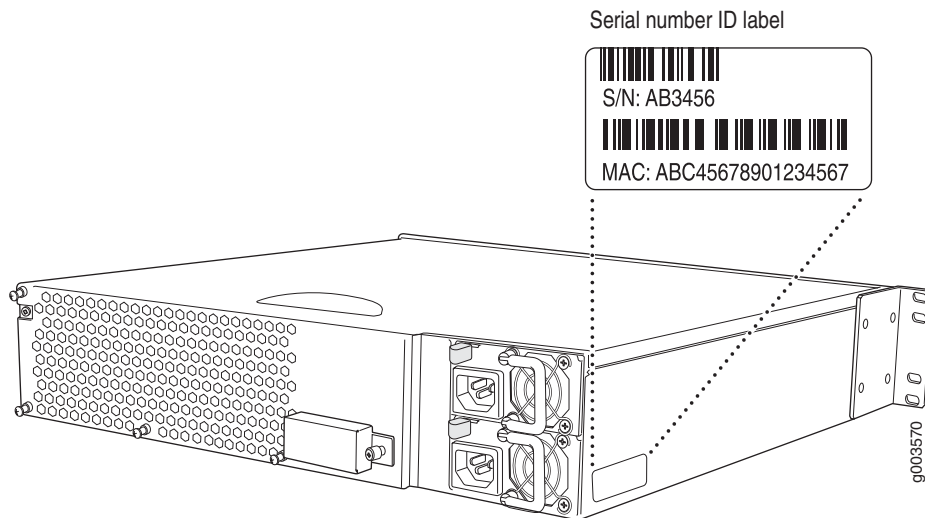


Figure 44: J6300 Serial Number ID Label

The following sections describe the label location on each type of component:

- PIM Serial Number Label on page 141
- J6300 Power Supply Serial Number Labels on page 141

PIM Serial Number Label

The PIMs installed in the J4300 and J6300 Services Routers are field-replaceable. Each PIM has a unique serial number. The serial number label is located on the right side of the PIM, when the PIM is horizontally oriented (as it would be installed in the router). The exact location may be slightly different on different PIMs, depending on the placement of components on the PIM board.

J6300 Power Supply Serial Number Labels

The power supplies installed in the J6300 Services Router are field-replaceable. Each power supply has a unique serial number. The serial number label is located on the top of the AC power supply.

Contacting Customer Support

After you have located the serial numbers of the components you need to return, contact Juniper Networks Technical Assistance Center (JTAC) in one of the following ways.

You can contact JTAC 24 hours a day, seven days a week.

- On the Web, using the Case Manager link at <http://www.juniper.net/support/>

- By telephone:

From the US and Canada: 1-888-314-JTAC

From all other locations: 1-408-745-9500

If contacting JTAC by telephone, enter your 11-digit case number followed by the pound (#) key if this is an existing case, or press the star (*) key to be routed to the next available support engineer.

Information You Might Need to Supply to JTAC

When requesting support from JTAC by telephone, be prepared to provide the following information:

- Your existing case number, if you have one
- Details of the failure or problem
- Type of activity being performed on the router when the problem occurred
- Configuration data displayed by one or more `show` commands

Return Procedure

If the problem cannot be resolved by the JTAC technician, an RMA number is issued. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



NOTE: Do not return any component to Juniper Networks unless you have first obtained an RMA number. Juniper Networks reserves the right to refuse shipments that do not have an RMA. Refused shipments will be returned to the customer via collect freight.

For more information about return and repair policies, see the customer support Web page at <http://www.juniper.net/support/guidelines.html>.

For product problems or technical support issues, open a support case using the Case Manager link at <http://www.juniper.net/support/>, or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (outside the United States).

When you need to return a component, follow this procedure:

1. Determine the part number and serial number of the component. For instructions, see “Locating Component Serial Numbers” on page 139.

2. Obtain a Return Materials Authorization (RMA) number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
 - Part number and serial number of component
 - Your name, organization name, telephone number, and fax number
 - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the router or component for shipment, as described in “Packing a Router or Component for Shipment” on page 143.

Packing a Router or Component for Shipment

This section contains the following topics:

- Tools and Parts Required on page 143
- Packing the Services Router for Shipment on page 143
- Packing Components for Shipment on page 145

Tools and Parts Required

To remove components from the router or the router from a rack, you need the following tools and parts:

- Blank panels to cover empty slots
- Electrostatic bag or antistatic mat, for each component
- Electrostatic discharge (ESD) grounding wrist strap
- Flat-blade screwdriver, approximately 1/4 in. (6 mm)
- Phillips (+) screwdrivers, numbers 1 and 2

Packing the Services Router for Shipment

To pack the router for shipment, follow this procedure:

1. Retrieve the shipping carton and packing materials in which the router was originally shipped. If you do not have these materials, contact your Juniper Networks representative about approved packaging materials.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to the ESD point on the chassis, or to an outside ESD point if the router is disconnected from earth ground. For more information about ESD, see “Preventing Electrostatic Discharge Damage” on page 165.
3. On the console or other management device connected to the master Routing Engine, enter CLI operational mode and issue the following command to shut down the router software.

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted. For more information about the command, see the *J-series Services Router Administration Guide*.

4. Shut down power to the router by pressing the power button on the front panel of the router.
5. Disconnect power from the router. For instructions, see “Replacing a Power Supply Cord in a J2300 or J4300 Router” on page 132 or “Replacing a Power Supply Cord in a J6300 Router” on page 135.
6. Remove the cables that connect to all external devices. For instructions, see “Removing a PIM Cable” on page 121.
7. Remove all field-replaceable units (FRUs) from the router.
8. If the router is installed on a wall or rack, have one person support the weight of the router, while another person unscrews and removes the mounting screws.
9. Place the router in the shipping carton.
10. Cover the router with an ESD bag, and place the packing foam on top of and around the router.
11. Replace the accessory box on top of the packing foam.
12. Securely tape the box closed.
13. Write the RMA number on the exterior of the box to ensure proper tracking.

Packing Components for Shipment

To pack and ship individual components, follow these guidelines:

- When you return components, make sure they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual boards in electrostatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



CAUTION: Do not stack any of the router components.

Part 4

J-series Requirements and Specifications

- Network Cable Specifications and Connector Pinouts on page 149
- Safety and Regulatory Compliance Information on page 161

Chapter 11

Network Cable Specifications and Connector Pinouts

The network interfaces supported on the router accept different kinds of network cable.

- Serial PIM Cable Specifications on page 149
- RJ-45 Connector Pinouts for the Routing Engine (Ethernet) Port on page 157
- DB-9 Connector Pinouts for the Console Port on page 157
- E1 and T1 RJ-48 Cable Pinouts on page 158
- ADSL RJ-11 Connector Pinout on page 160

Serial PIM Cable Specifications

The 2-port serial PIM uses the cables and connectors summarized in Table 42. Pinouts are detailed in Table 43 through Table 52.

Table 42: 2-Port Serial PIM Cables and Connectors

| Name | Connector | Connector Hardware | End-to-End Conductors | Pinouts |
|--------------------------|----------------------|--|-----------------------|----------|
| RS-232 DTE | DB-25 male | 4-40 threaded jackscrews | 13 | Table 43 |
| RS-232 DCE | DB-25 female | 4-40 threaded jacknuts | 13 | Table 44 |
| RS-422/449 (EIA-449) DTE | DC-37 (DB-37) male | 4-40 threaded jackscrews | 25 | Table 45 |
| RS-422/449 (EIA-449) DCE | DC-37 (DB-37) female | 4-40 threaded jacknuts | 25 | Table 46 |
| EIA-530A DTE | DB-25 male | 4-40 threaded jackscrews | 23 | Table 47 |
| EIA-530A DCE | DB-25 female | 4-40 threaded jacknuts | 22 | Table 48 |
| V.35 DTE | M/34 male | Standard (Normally included with M/34 connector shell) | 18 | Table 49 |

| Name | Connector | Connector Hardware | End-to-End Conductors | Pinouts |
|----------|--------------|--|-----------------------|----------|
| V.35 DCE | M/34 female | Standard (Normally included with M/34 connector shell) | 18 | Table 50 |
| X.21 DTE | DB-15 male | M3 threaded jackscrews | 13 | Table 51 |
| X.21 DCE | DB-15 female | M3 threaded jacknuts | 13 | Table 52 |

RS-232 DTE Cable Pinout

Table 43: RS-232 DTE Cable Pinout

| LFH-60 Pin | DB-25 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|---------------------|
| 15 | 1 | – | Frame Ground |
| 60 | 2 | – | Transmit Data |
| 1 | 3 | – | Receive Data |
| 48 | 4 | – | Request to Send |
| 37 | 5 | – | Clear to Send |
| 9 | 6 | – | Data Set Ready |
| 57 | 7 | – | Signal Ground |
| 13 | 8 | – | Data Carrier Detect |
| 56 | 15 | – | Transmit Clock |
| 5 | 17 | – | Receive Clock |
| 41 | 18 | – | Local Loopback |
| 33 | 20 | – | Data Terminal Ready |
| 52 | 24 | – | Terminal Clock |
| 22 to 21 | – | – | – |
| 18 to 17 | – | – | – |

RS-232 DCE Cable Pinout

Table 44: RS-232 DCE Cable Pinout

| LFH-60 Pin | DB-25 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|-----------------|
| 15 | 1 | – | Frame Ground |
| 1 | 2 | – | Transmit Data |
| 60 | 3 | – | Receive Data |
| 37 | 4 | – | Request to Send |

| LFH-60 Pin | DB-25 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|---------------------|
| 48 | 5 | – | Clear to Send |
| 33 | 6 | – | Data Set Ready |
| 57 | 7 | – | Signal Ground |
| 13 | 8 | – | Data Carrier Detect |
| 56 | 15 | – | Transmit Clock |
| 52 | 17 | – | Receive Clock |
| 45 | 18 | – | Local Loopback |
| 9 | 20 | – | Data Terminal Ready |
| 5 | 24 | – | Terminal Clock |
| 22 to 21 | – | – | – |

RS-422/449 (EIA-449) DTE Cable Pinout

Table 45: RS-422/449 (EIA-449) DTE Cable Pinout

| LFH-60 Pin | DC-37 (DB-37) Pin | LFH-60 Pairing | Description |
|------------|-------------------|----------------|---------------------|
| 15 | 1 | – | Shield Ground |
| 60 | 4 | 59 | Send Data (A) |
| 56 | 5 | 55 | Send Timing (A) |
| 1 | 6 | 2 | Receive Data (A) |
| 48 | 7 | 47 | Request to Send (A) |
| 5 | 8 | 6 | Receive Timing (A) |
| 37 | 9 | 38 | Clear to Send (A) |
| 41 | 10 | – | Local Loopback |
| 9 | 11 | 10 | Data Mode (A) |
| 33 | 12 | 34 | Terminal Ready (A) |
| 13 | 13 | 14 | Receive Ready (A) |
| 52 | 17 | 51 | Terminal Timing (A) |
| 36 | 19 | – | Signal Ground |
| 4 | 20 | – | Receive Common |
| 59 | 22 | 60 | Send Data (B) |
| 55 | 23 | 56 | Send Timing (B) |
| 2 | 24 | 1 | Receive Data (B) |
| 47 | 25 | 48 | Request to Send (B) |
| 6 | 26 | 5 | Receive Timing (B) |
| 38 | 27 | 37 | Clear to Send (B) |

| LFH-60 Pin | DC-37 (DB-37) Pin | LFH-60 Pairing | Description |
|------------|-------------------|----------------|---------------------|
| 10 | 29 | 9 | Data Mode (B) |
| 34 | 30 | 33 | Terminal Ready (B) |
| 14 | 31 | 13 | Receiver Ready (B) |
| 51 | 35 | 52 | Terminal Timing (B) |
| 57 | 37 | – | Send Common |
| 26 to 25 | – | – | – |
| 18 to 17 | – | – | – |

RS-422/449 (EIA-449) DCE Cable Pinout

Table 46: RS-422/449 (EIA-449) DCE Cable Pinout

| LFH-60 Pin | DC-37 (DB-37) Pin | LFH-60 Pairing | Description |
|------------|-------------------|----------------|---------------------|
| 15 | 1 | – | Shield Ground |
| 1 | 4 | 2 | Send Data (A) |
| 56 | 5 | 55 | Send Timing (A) |
| 60 | 6 | 59 | Receive Data (A) |
| 37 | 7 | 38 | Request to Send (A) |
| 52 | 8 | 51 | Receive Timing (A) |
| 48 | 9 | 47 | Clear to Send (A) |
| 45 | 10 | – | Local Loopback |
| 33 | 11 | 34 | Data Mode (A) |
| 9 | 12 | 10 | Terminal Ready (A) |
| 13 | 13 | 14 | Receive Ready (A) |
| 5 | 17 | 6 | Terminal Timing (A) |
| 36 | 19 | – | Signal Ground |
| 4 | 20 | – | Receive Common |
| 2 | 22 | 1 | Send Data (B) |
| 55 | 23 | 56 | Send Timing (B) |
| 59 | 24 | 60 | Receive Data (B) |
| 38 | 25 | 37 | Request to Send (B) |
| 51 | 26 | 52 | Receive Timing (B) |
| 47 | 27 | 48 | Clear to Send (B) |
| 34 | 29 | 33 | Data Mode (B) |
| 10 | 30 | 9 | Terminal Ready (B) |
| 14 | 31 | 13 | Receiver Ready (B) |

| LFH-60 Pin | DC-37 (DB-37) Pin | LFH-60 Pairing | Description |
|------------|-------------------|----------------|---------------------|
| 6 | 35 | 5 | Terminal Timing (B) |
| 57 | 37 | – | Send Common |
| 26 to 25 | – | – | – |

EIA-530A DTE Cable Pinout

Table 47: EIA-530A DTE Cable Pinout

| LFH-60 Pin | DB-25 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|-----------------------------------|
| 15 | 1 | – | Shield Ground |
| 60 | 2 | 59 | Transmit Data (A) |
| 1 | 3 | 2 | Receive Data (A) |
| 48 | 4 | 47 | Request to Send (A) |
| 37 | 5 | 38 | Clear to Send (A) |
| 9 | 6 | – | Data Set Ready (A) |
| 57 | 7 | – | Signal Ground |
| 13 | 8 | 14 | Received Line Signal Detector (A) |
| 6 | 9 | 5 | Receive Clock (B) |
| 14 | 10 | 13 | Received Line Signal Detector (B) |
| 51 | 11 | 52 | Terminal Timing (B) |
| 55 | 12 | 56 | Transmit Clock (B) |
| 38 | 13 | 37 | Clear to Send (B) |
| 59 | 14 | 60 | Transmit Data (B) |
| 56 | 15 | 55 | Transmit Clock (A) |
| 2 | 16 | 1 | Receive Data (B) |
| 5 | 17 | 6 | Receive Clock (A) |
| 41 | 18 | – | Local Loopback |
| 47 | 19 | 48 | Request to Send (B) |
| 33 | 20 | – | Data Terminal Ready (A) |
| 4 | 23 | – | Signal Ground |
| 52 | 24 | 51 | Terminal Timing (A) |
| 26 to 25 | – | – | – |
| 30 to 29 | – | – | – |
| 18 to 17 | – | – | – |

EIA-530A DCE Cable Pinout**Table 48: EIA-530A DCE Cable Pinout**

| LFH-60 Pin | DB-25 Pin | LFH-60 Pairing | Description |
|-------------------|------------------|-----------------------|-----------------------------------|
| 15 | 1 | – | Shield Ground |
| 1 | 2 | 2 | Transmit Data (A) |
| 60 | 3 | 59 | Receive Data (A) |
| 37 | 4 | 38 | Request to Send (A) |
| 48 | 5 | 47 | Clear to Send (A) |
| 33 | 6 | – | Data Set Ready (A) |
| 57 | 7 | – | Signal Ground |
| 13 | 8 | 14 | Received Line Signal Detector (A) |
| 51 | 9 | 52 | Receive Clock (B) |
| 14 | 10 | 13 | Received Line Signal Detector (B) |
| 6 | 11 | 5 | Terminal Timing (B) |
| 55 | 12 | 56 | Transmit Clock (B) |
| 47 | 13 | 48 | Clear to Send (B) |
| 2 | 14 | 1 | Transmit Data (B) |
| 56 | 15 | 55 | Transmit Clock (A) |
| 59 | 16 | 60 | Receive Data (B) |
| 52 | 17 | 51 | Receive Clock (A) |
| 45 | 18 | – | Local Loopback |
| 38 | 19 | 37 | Request to Send (B) |
| 9 | 20 | – | Data Terminal Ready (A) |
| 4 | 23 | – | Signal Ground |
| 5 | 24 | 6 | Terminal Timing (A) |
| 26 to 25 | – | – | – |
| 30 to 29 | – | – | – |

V.35 DTE Cable Pinout**Table 49: V.35 DTE Cable Pinout**

| LFH-60 Pin | M/34 Pin | LFH-60 Pairing | Description |
|-------------------|-----------------|-----------------------|--------------------|
| 15 | A | – | Frame Ground |
| 57 | B | – | Signal Ground |

| LFH-60 Pin | M/34 Pin | LFH-60 Pairing | Description |
|------------|----------|----------------|-------------------------------|
| 48 | C | – | Request to Send |
| 37 | D | – | Clear to Send |
| 9 | E | – | Data Set Ready |
| 13 | F | – | Received Line Signal Detector |
| 33 | H | – | Data Terminal Ready |
| 41 | K | – | Test Mode |
| 60 | P | 59 | Transmit Data (A) |
| 1 | R | 2 | Receive Data (A) |
| 59 | S | 60 | Transmit Data (B) |
| 2 | T | 1 | Receive Data (B) |
| 52 | U | 51 | Terminal Timing (A) |
| 5 | V | 6 | Receive Timing (A) |
| 51 | W | 52 | Terminal Timing (B) |
| 6 | X | 5 | Receive Timing (B) |
| 56 | Y | 55 | Transmit Timing (A) |
| 55 | AA | 56 | Transmit Timing (B) |
| 22 to 21 | – | – | – |
| 26 to 25 | – | – | – |
| 18 to 17 | – | – | – |

V.35 DCE Cable Pinout

Table 50: V.35 DCE Cable Pinout

| LFH-60 Pin | M/34 Pin | LFH-60 Pairing | Description |
|------------|----------|----------------|-------------------------------|
| 15 | A | – | Frame Ground |
| 57 | B | – | Signal Ground |
| 37 | C | – | Request to Send |
| 48 | D | – | Clear to Send |
| 33 | E | – | Data Set Ready |
| 13 | F | – | Received Line Signal Detector |
| 9 | H | – | Data Terminal Ready |
| 45 | K | – | Test Mode |
| 1 | P | 2 | Transmit Data (A) |
| 60 | R | 59 | Receive Data (A) |
| 2 | S | 1 | Transmit Data (B) |

| LFH-60 Pin | M/34 Pin | LFH-60 Pairing | Description |
|------------|----------|----------------|---------------------|
| 59 | T | 60 | Receive Data (B) |
| 5 | U | 6 | Terminal Timing (A) |
| 52 | V | 51 | Receive Timing (A) |
| 6 | W | 5 | Terminal Timing (B) |
| 51 | X | 52 | Receive Timing (B) |
| 56 | Y | 55 | Transmit Timing (A) |
| 55 | AA | 56 | Transmit Timing (B) |
| 22 to 21 | – | – | – |
| 26 to 25 | – | – | – |

X.21 DTE Cable Pinout

Table 51: X.21 DTE Cable Pinout

| LFH-60 Pin | DB-15 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|---------------------------|
| 15 | 1 | – | Shield Ground |
| 60 | 2 | 59 | Transmit Data (A) |
| 48 | 3 | 47 | Control (A) |
| 1 | 4 | 2 | Receive (A) |
| 37 | 5 | 38 | Indicate (A) |
| 5 | 6 | 6 | Signal Element Timing (A) |
| 57 | 8 | – | Signal Ground |
| 59 | 9 | 60 | Transmit Data (B) |
| 47 | 10 | 48 | Control (B) |
| 2 | 11 | 1 | Receive (B) |
| 38 | 12 | 37 | Indicate (B) |
| 6 | 13 | 5 | Signal Element Timing (B) |
| 30 to 29 | – | – | – |
| 18 to 17 | – | – | – |

X.21 DCE Cable Pinout

Table 52: X.21 DCE Cable Pinout

| LFH-60 Pin | DB-15 Pin | LFH-60 Pairing | Description |
|------------|-----------|----------------|---------------------------|
| 15 | 1 | – | Shield Ground |
| 1 | 2 | 2 | Transmit Data (A) |
| 37 | 3 | 38 | Control (A) |
| 60 | 4 | 59 | Receive (A) |
| 48 | 5 | 47 | Indicate (A) |
| 52 | 6 | 51 | Signal Element Timing (A) |
| 57 | 8 | – | Signal Ground |
| 2 | 9 | 1 | Transmit Data (B) |
| 38 | 10 | 37 | Control (B) |
| 59 | 11 | 60 | Receive (B) |
| 47 | 12 | 48 | Indicate (B) |
| 51 | 13 | 52 | Signal Element Timing (B) |
| 30 to 29 | – | – | – |

RJ-45 Connector Pinouts for the Routing Engine (Ethernet) Port

Table 53 describes the RJ-45 connector pinout information.

Table 53: RJ-45 Connector Pinout

| Pin | Signal |
|-----|---------------------|
| 1 | TX + |
| 2 | TX- |
| 3 | RX + |
| 4 | Termination network |
| 5 | Termination network |
| 6 | RX- |
| 7 | Termination network |
| 8 | Termination network |

DB-9 Connector Pinouts for the Console Port

Table 54 describes the DB-9 connector pinouts.

Table 54: DB-9 Connector Pinout

| Pin | Signal | Direction | Description |
|-----|--------|-----------|---------------------|
| 1 | DCD | < – | Carrier Detect |
| 2 | RxD | < – | Receive Data |
| 3 | TxD | – > | Transmit Data |
| 4 | DTR | – > | Data Terminal Ready |
| 5 | Ground | — | Signal Ground |
| 6 | DSR | < – | Data Set Ready |
| 7 | RTS | – > | Request To Send |
| 8 | CTS | < – | Clear To Send |
| 9 | RING | < – | Ring Indicator |

E1 and T1 RJ-48 Cable Pinouts

The E1 and T1 PIMs use an RJ-48 cable, which is not supplied with the PIM.



CAUTION: To maintain agency approvals, use only a properly constructed, shielded cable.

Table 55, Table 56, Table 57, and Table 58 describe the RJ-48 connector pinouts.

Table 55: RJ-48 Connector to RJ-48 Connector (Straight) Pinout

| RJ-48 Pin (on T1/E1 PIM) (Data Numbering Form) | RJ-48 Pin (Data Numbering Form) | Signal |
|--|---------------------------------|----------------------|
| 1 | 1 | RX, Ring, – |
| 2 | 2 | RX, Tip, + |
| 4 | 4 | TX, Ring, – |
| 5 | 5 | TX, Tip, + |
| 3 | 3 | Shield/Return/Ground |
| 6 | 6 | Shield/Return/Ground |
| 7 | No connect | No connect |
| 8 | No connect | No connect |

Table 56: RJ-48 Connector to RJ-48 Connector (Crossover) Pinout

| RJ-48 Pin (on T1/E1 PIM) (Data numbering form) | RJ-48 Pin (Data numbering form) | Signal |
|---|--|--------------------------|
| 1 | 4 | RX/Ring/- <--> TX/Ring/- |
| 2 | 5 | RX/Tip/+ <--> TX/Tip/+ |
| 4 | 1 | TX/Ring/- <--> RX/Ring/- |
| 5 | 2 | TX/Tip/+ <--> RX/Tip/+ |
| 3 | 3 | Shield/Return/Ground |
| 6 | 6 | Shield/Return/Ground |
| 7 | No connect | No connect |
| 8 | No connect | No connect |

Table 57: RJ-48 Connector to DB-15 Connector (Straight) Pinout

| RJ-48 Pin (on T1/E1 PIM) (Data numbering form) | DB-15 Pin (Data numbering form) | Signal |
|---|--|--------------------------|
| 1 | 11 | RX/Ring/- <--> RX/Ring/- |
| 2 | 3 | RX/Tip/+ <--> RX/Tip/+ |
| 4 | 9 | TX/Ring/- <--> TX/Ring/- |
| 5 | 1 | TX/Tip/+ <--> TX/Tip/+ |
| 3 | 4 | Shield/Return/Ground |
| 6 | 2 | Shield/Return/Ground |
| 7 | No connect | No connect |
| 8 | No connect | No connect |
| 9 | No connect | No connect |
| 10 | No connect | No connect |
| 11 | No connect | No connect |
| 12 | No connect | No connect |
| 13 | No connect | No connect |
| 14 | No connect | No connect |
| 15 | No connect | No connect |

Table 58: RJ-48 Connector to DB-15 Connector (Crossover) Pinout

| RJ-48 Pin (on T1/E1 PIM) (Data numbering form) | DB-15 Pin (Data numbering form) | Signal |
|---|--|--------------------------|
| 1 | 9 | RX/Ring/- <--> TX/Ring/- |
| 2 | 1 | RX/Tip/+ <--> TX/Tip/+ |
| 4 | 11 | TX/Ring/- <--> RX/Ring/- |
| 5 | 3 | TX/Tip/+ <--> RX/Tip/+ |
| 3 | 4 | Shield/Return/Ground |
| 6 | 2 | Shield/Return/Ground |
| 7 | No connect | No connect |
| 8 | No connect | No connect |
| 9 | No connect | No connect |
| 10 | No connect | No connect |
| 11 | No connect | No connect |
| 12 | No connect | No connect |
| 13 | No connect | No connect |
| 14 | No connect | No connect |
| 15 | No connect | No connect |

ADSL RJ-11 Connector Pinout

The one-port ADSL Annex A and Annex B PIMs use an RJ-11 cable, which is not supplied with the PIMs. Table 59 describes the RJ-11 connector pinout.

Table 59: ADSL RJ-11 Connector Pinout

| Pin | Signal |
|------------|---------------|
| 1 | No connect |
| 2 | No connect |
| 3 | RJ P -Tip |
| 4 | RJ N -Ring |
| 5 | No connect |
| 6 | No connect |

Chapter 12

Safety and Regulatory Compliance Information

To install and use the Services Router safely, follow proper safety procedures. This chapter discusses the following safety and regulatory compliance information:

- Definition of Safety Warning Levels on page 161
- Safety Guidelines and Warnings on page 163
- Agency Approvals on page 196
- Compliance Statements for EMC Requirements on page 197

Definition of Safety Warning Levels

This manual uses the following three levels of safety warnings:



NOTE: You might find this information helpful in a particular situation, or might otherwise overlook it.



CAUTION: You need to observe the specified guidelines to avoid minor injury or discomfort to you, or severe damage to the Services Router.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.



WARNING: Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische

schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.



WARNING: Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.



WARNING: Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.



WARNING: Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.



WARNING: Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.



WARNING: Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.



WARNING: Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer

equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.



WARNING: ¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.



WARNING: Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

Safety Guidelines and Warnings

This section lists the following safety guidelines and warnings for installing, operating, and maintaining a Services Router:

- General Safety Guidelines and Warnings on page 163
- Electrical Safety Guidelines and Warnings on page 166
- Installation Safety Guidelines and Warnings on page 175
- Laser and LED Safety Guidelines and Warnings on page 182
- Maintenance and Operational Safety Guidelines and Warnings on page 187

General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the Services Router from damage. The list of guidelines might not address all

potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in this manual. Make sure that only authorized service personnel perform other system services.
- Keep the area around the chassis clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the chassis.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the Services Router only when it is properly grounded.
- The separate protective earthing terminal provided on this product shall be permanently connected to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet metal parts unless instructions are provided in this manual. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the Services Router chassis or onto any Services Router component. Such an action could cause electrical shock or damage the Services Router.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.

In addition, observe the warnings and guidelines in the following sections.

Qualified Personnel Warning



WARNING: Only trained and qualified personnel should install or replace the Services Router.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.



WARNING: Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

Preventing Electrostatic Discharge Damage

Many Services Router hardware components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:


- Always use an ESD wrist strap or ankle strap, and make sure that it is in direct contact with your skin.



CAUTION: For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 to 10 Mohms.

- When handling any component that is removed from the chassis, make sure the equipment end of your ESD strap is attached to one of the electrostatic discharge points on the chassis, which are shown in Figure 1 and Figure 2 for the J2300 chassis and in Figure 6 and Figure 7 for the J4300 chassis and J6300 chassis.
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see Figure 45). If you are returning a component, place it in an electrostatic bag before packing it.

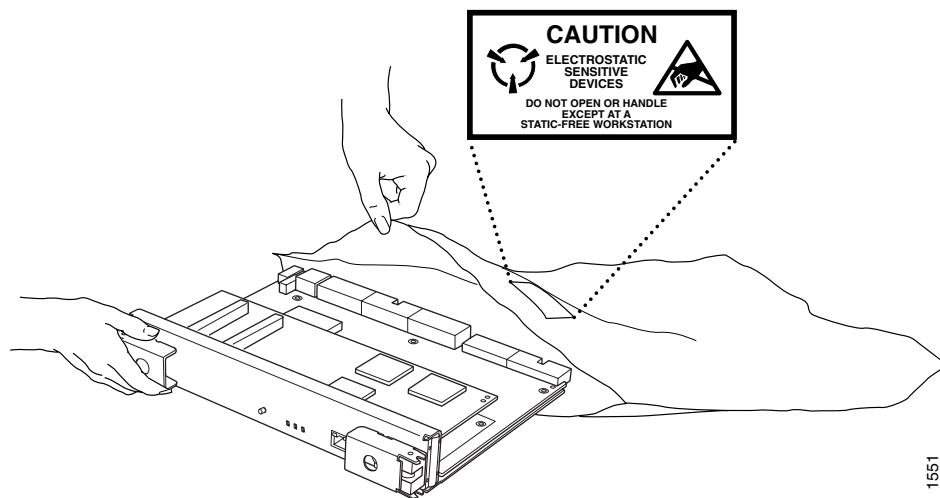Figure 45: Place a Component into an Electrostatic Bag



Electrical Safety Guidelines and Warnings

When working on equipment powered by electricity, follow the guidelines described in the following sections:

- General Electrical Safety Guidelines on page 167
- AC Power Electrical Safety Guidelines on page 168
- Grounded Equipment Warning on page 168
- Warning Statement for Norway and Sweden on page 169

- In Case of Electrical Accident on page 169
- Multiple Power Supplies Disconnection Warning on page 170
- Power Disconnection Warning on page 171
- TN Power Warning on page 172
- Telecommunication Line Cord Warning on page 174

General Electrical Safety Guidelines

- Install the Services Router in compliance with the following local, national, or international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the Services Router within marked electrical ratings and product usage instructions.
- For the Services Router and peripheral equipment to function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

Many Services Router components can be removed and replaced without powering down or disconnecting power to the Services Router, as detailed in elsewhere in this manual. Never install equipment if it appears damaged.

AC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to AC-powered routers:

- AC-powered routers are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding should comply with local and national electrical codes.
- You must provide an external circuit breaker rated minimum 15 A in the building installation.
- The power cord serves as the main disconnecting device. The socket outlet must be near the router and be easily accessible.
- The cores in the mains lead are colored in accordance with the following code:
 - Green and yellow—Earth
 - Blue—Neutral
 - Brown—Live
- When a router is equipped with two AC power supplies, both power cords (one for each power supply) must be unplugged to completely disconnect power to the router.
- Note the following warnings printed on the AC power supply faceplate:
 - To completely de-energize the system disconnect maximum of 2 power cordsets.
 - Apparaten skall anslutas till jordat uttag när den ansluts till ett nätverk. [Swedish]

Grounded Equipment Warning



WARNING: The router is intended to be grounded. Ensure that the router is connected to earth ground during normal use.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.



WARNING: Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

Warning Statement for Norway and Sweden



WARNING: The equipment must be connected to an earthed mains socket-outlet.

Advarsel Apparatet skal kobles til en jordnet stikkontakt.

Varning! Apparaten skall anslutas till jordat nätuttag.

In Case of Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the Services Router.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

Multiple Power Supplies Disconnection Warning



WARNING: The J6300 Services Router has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.



WARNING: Waarschuwing Deze J6300 eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.



WARNING: Varoitus Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.



WARNING: Attention Cette J6300 unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.



WARNING: Warnung Diese J6300 Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.



WARNING: Avvertenza Questa J6300 unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.



WARNING: Advarsel Denne J6300 enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.



WARNING: Aviso Este J6300 dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.



WARNING: ¡Atención! Esta J6300 unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.



WARNING: Varning! Denna J6300 enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

Power Disconnection Warning



WARNING: Before working on the router or near power supplies, unplug the power cord from an AC router.



WARNING: Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.



WARNING: Varoitus Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.



WARNING: Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.



WARNING: Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.



WARNING: Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.



WARNING: Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømføringsledningen trekkes ut på vekselstrømsenheter.



WARNING: Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.



WARNING: ¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).



WARNING: Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

TN Power Warning



WARNING: The router is designed to work with a TN power system.



WARNING: Waarschuwing Het apparaat is ontworpen om te functioneren met TN energiesystemen.



WARNING: Varoitus Kojie on suunniteltu toimimaan TN-sähkövoimajärjestelmien yhteydessä.



WARNING: Attention Ce dispositif a été conçu pour fonctionner avec des systèmes d'alimentation TN.



WARNING: Warnung Das Gerät ist für die Verwendung mit TN-Stromsystemen ausgelegt.



WARNING: Avvertenza Il dispositivo è stato progettato per l'uso con sistemi di alimentazione TN.



WARNING: Advarsel Utstyret er utfomet til bruk med TN-strømsystemer.



WARNING: Aviso O dispositivo foi criado para operar com sistemas de corrente TN.



WARNING: ¡Atención! El equipo está diseñado para trabajar con sistemas de alimentación tipo TN.



WARNING: Varning! Enheten är konstruerad för användning tillsammans med elkraftssystem av TN-typ.

Telecommunication Line Cord Warning



WARNING: To reduce the risk of fire, use only No. 26 AWG or larger UL-listed or CSA-certified telecommunication line cord.



WARNING: Waarschuwing Om brandgevaar te reduceren, dient slechts telecommunicatielijnsnoer nr. 26 AWG of groter gebruikt te worden.



WARNING: Varoitus Tulipalovaaran vähentämiseksi käytä ainoastaan nro 26 AWG-tai paksumpaa tietoliikennejohdinta.



WARNING: Attention Pour réduire les risques d'incendie, n'utiliser que des cordons de lignes de télécommunications de type AWG n° 26 ou plus larges.



WARNING: Warnung Zur Reduzierung der Feuergefahr eine Fernmeldeleitungsschnur der Größe 26 AWG oder größer verwenden.



WARNING: Avvertenza Per ridurre il rischio di incendio, usare solo un cavo per linea di telecomunicazioni di sezione 0,12 mm² (26 AWG) o maggiore.



WARNING: Advarsel Bruk kun AWG nr. 26 eller telekommunikasjonsledninger med større dimensjon for å redusere faren for brann.



WARNING: Aviso Para reduzir o risco de incêndio, utilize apenas terminais de fio de telecomunicações N°. 26 AWG ou superiores.



WARNING: ¡Atención! Para reducir el riesgo de incendios, usar sólo líneas de telecomunicaciones de calibre No. 26 AWG o más gruesas.



WARNING: Varning! För att minska brandrisken skall endast Nr. 26 AWG eller större telekommunikationsledning användas.

Installation Safety Guidelines and Warnings

Observe the following guidelines and warnings before and during Services Router installation:

- Chassis Lifting Guidelines on page 175
- Installation Instructions Warning on page 176
- Rack-Mounting Requirements and Warnings on page 177
- Ramp Warning on page 181

Chassis Lifting Guidelines

The weight of a fully configured chassis is approximately 12 lbs (5.4 kg) for a J2300 Services Router, 21 lbs (9.5 kg) for a J4300 Services Router,

and 24 lb (10.9 kg) for a J6300 Services Router. Observe the following guidelines for lifting and moving a Services Router:

- Before moving the Services Router, read the guidelines in “Preparing for Router Installation” on page 53 to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Before lifting or moving the Services Router, disconnect all external cables.
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

Installation Instructions Warning



WARNING: Read the installation instructions before you connect the router to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtälähteeseen.

Attention Avant de brancher le système sur la source d’alimentation, consulter les directives d’installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.



WARNING: Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

Rack-Mounting Requirements and Warnings

Ensure that the equipment rack into which the Services Router is installed is evenly and securely supported, to avoid the hazardous condition that could result from uneven mechanical loading.



WARNING: To prevent bodily injury when mounting or servicing the router in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The router must be installed into a rack that is secured to the building structure.
 - The router should be mounted at the bottom of the rack if it is the only unit in the rack.
 - When mounting the router in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
 - If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the router in the rack.
-



WARNING: Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks router moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
 - Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
 - Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
 - Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.
-



WARNING: Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden

säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks router on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.



WARNING: Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks router doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.



WARNING: Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen,

um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks router muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.



WARNING: Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks router deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.



WARNING: Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks router må installeres i et stativ som er forankret til bygningsstrukturen.
 - Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
 - Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
 - Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.
-



WARNING: Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks router deverá ser instalado numa prateleira fixa à estrutura do edifício.
 - Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
 - Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
 - Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.
-



WARNING: ¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, o posteriormente durante su mantenimiento, se debe poner

mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks router debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.



WARNING: Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks router måste installeras i en ställning som är förankrad i byggnadens struktur.
- Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
- Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
- Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.

Ramp Warning



WARNING: When installing the router, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käyttää sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.



WARNING: Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

Laser and LED Safety Guidelines and Warnings

Single-mode Physical Interface Modules (PIMs) are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration, and are evaluated as a Class 1 Laser Product per EN 60825-1 + A11 + A2 requirements.

Observe the following guidelines and warnings:

- General Laser Safety Guidelines on page 182
- Class 1 Laser Product Warning on page 183
- Class 1 LED Product Warning on page 183
- Laser Beam Warning on page 184
- Radiation from Open Port Apertures Warning on page 185

General Laser Safety Guidelines

When working around PIMs, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Class 1 Laser Product Warning



WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.



WARNING: Avvertenza Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.

Class 1 LED Product Warning



WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.



WARNING: Avvertenza Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.



WARNING: Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.



WARNING: Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.



WARNING: Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.



WARNING: Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.



WARNING: Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.



WARNING: Advarsel Stirr eller se ikke direkte p strlen med optiske instrumenter.



WARNING: Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.



WARNING: ¡Atención! No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.



WARNING: Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

Radiation from Open Port Apertures Warning



WARNING: Because invisible radiation may be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.



WARNING: Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.



WARNING: Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.



WARNING: Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.



WARNING: Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!



WARNING: Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.



WARNING: Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.



WARNING: Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.



WARNING: ¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.



WARNING: Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

Maintenance and Operational Safety Guidelines and Warnings

As you maintain the Services Router, observe the following guidelines and warnings:

- Battery Handling Warning on page 187
- Jewelry Removal Warning on page 189
- Lightning Activity Warning on page 191
- Operating Temperature Warning on page 192
- Product Disposal Warning on page 194

Battery Handling Warning



WARNING: Replacing the battery incorrectly might result in an explosion. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



WARNING: Waarschuwing Er is ontplofingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.



WARNING: Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.



WARNING: Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.



WARNING: Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.



WARNING: Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.



WARNING: Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.



WARNING: Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.



WARNING: ¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.



WARNING: Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals.



WARNING: Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.



WARNING: Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.



WARNING: Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.



WARNING: Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen

werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.



WARNING: Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.



WARNING: Advarsel Fjern alle smykker (inkludert ringe, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.



WARNING: Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.



WARNING: ¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.



WARNING: Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.



WARNING: Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.



WARNING: Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.



WARNING: Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.



WARNING: Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.



WARNING: Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.



WARNING: Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.



WARNING: Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).



WARNING: ¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.



WARNING: Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the router from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104°F (40°C). To prevent airflow restriction, allow at least 6 inches (15.2 cm) of clearance around the ventilation openings.



WARNING: Waarschuwing Om te voorkomen dat welke router van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40°C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.



WARNING: Varoitus Ettei Juniper Networks router-sarjan reititin ylikuumentuisi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40°C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.



WARNING: Attention Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks router, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40°C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.



WARNING: Warnung Um einen Router der router vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40°C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.



WARNING: Avvertenza Per evitare il surriscaldamento dei router, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40°C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.



WARNING: Advarsel Unngå overoppheting av eventuelle rutere i Juniper Networks router Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40°C (104°F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.



WARNING: Aviso Para evitar o sobreaquecimento do encaminhador Juniper Networks router, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40°C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.



WARNING: ¡Atención! Para impedir que un encaminhador de la serie Juniper Networks router se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40°C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aperturas para ventilación.



WARNING: Varning! Förhindra att en Juniper Networks router överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40°C överskrids. Förhindra att luftcirkulationen

inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this product must be handled according to all national laws and regulations.



WARNING: Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.



WARNING: Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.



WARNING: Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.



WARNING: Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.



WARNING: Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia



WARNING: Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.



WARNING: Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.



WARNING: ¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales



WARNING: Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

Agency Approvals

The Services Router complies with the following standards:

- Safety
 - CAN/CSA-22.2 No. 60950-1-03-UL 60950-1 Safety of Information Technology Equipment
 - EN 60950-1 Safety of Information Technology Equipment
 - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
- EMC
 - AS/NZS 3548 Class B (Australia/New Zealand)
 - EN 55022 Class B Emissions (Europe)
 - FCC Part 15 Class B (USA)
 - VCCI Class B (Japan)
 - FCC Part 68
 - Industry Canada CS-03
- Immunity
 - EN 61000-3-2 Power Line Harmonics
 - EN 61000-3-3 Voltage Fluctuations and Flicker
 - EN 61000-4-2 ESD
 - EN 61000-4-3 Radiated Immunity
 - EN 61000-4-4 EFT
 - EN 61000-4-5 Surge
 - EN 61000-4-6 Low Frequency Common Immunity
 - EN 61000-4-11 Voltage Dips and Sags
- ETSI
 - ETSI EN-300386-2 Telecommunication Network Equipment. Electromagnetic Compatibility Requirements

Compliance Statements for EMC Requirements

- Canada on page 197
- Japan on page 198
- Taiwan on page 198
- United States on page 198

Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. Industry Canada does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.



CAUTION: Users should not attempt to make electrical ground connections by themselves, but should contact the appropriate inspection authority or an electrician, as appropriate.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境でを使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

The preceding translates as follows:

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this product is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Taiwan

警告使用者

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

United States

The Services Router has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Part 15 Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

FCC Part 68 Statement

This equipment complies with Part 68 of the Federal Communications Commission (FCC) rules. On the product is a label that contains the FCC registration number for this device. If requested, this information must be provided to the telephone company.

This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68 compliant. See installation instructions for details.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment or for repair or warranty information, please follow the applicable procedures explained in the “Technical Support” section of this manual.

- FCC Registration Number—See label on product.
- Required Connector (USOC)—RJ-48C
- Service Order Code (SOC)—6.ON

Part 5

Index

Index

Symbols

| | |
|--|-----|
| [], in configuration statements | xvi |
| { }, in configuration statements | xvi |
| (), in syntax descriptions | xvi |
| < >, in syntax descriptions | xvi |
| (pipe), in syntax descriptions | xvi |
| * (red asterisk) | 40 |
| ? command | |
| for CLI online help | 46 |
| in configuration mode | 44 |
| in operational mode | 43 |
| ? icon (J-Web) | 40 |
| #, comments in configuration statements | xvi |
| #, configuration mode command prompt | 44 |
| >, operational mode command prompt | 43 |
| 10/100Base-TX ports <i>See</i> Fast Ethernet ports | |

A

| | |
|---|-----|
| AC plug types | 60 |
| AC power | 58 |
| dedicated AC power feed requirement | 135 |
| requirements | 58 |
| safety guidelines | 168 |
| <i>See also</i> power | |
| AC power cords | |
| electrical specifications | 59 |
| physical requirements | 59 |
| plug types | 60 |
| replacing (J2300 or J4300) | 132 |
| replacing (J6300) | 135 |
| accident, steps to take | 169 |
| ad0 <i>See</i> compact flash, primary | |
| ad2 <i>See</i> compact flash, removable | |
| addresses | |
| 192.168.1.1/24 | 79 |
| fe-0/0/0 for autoinstallation | 79 |
| loopback | 78 |
| management interface | 79 |
| ADSL (asymmetrical digital subscriber line) | |
| PIM LED states | 26 |
| RJ-11 connector pinouts | 160 |
| ADSL ports | |
| J4300 | 4 |
| J6300 | 4 |

| | |
|--|-----|
| LED states | 26 |
| RJ-11 connector pinouts | 160 |
| agency approvals | 196 |
| airflow | |
| J2300 | 16 |
| J4300 and J6300 | 28 |
| space requirement | 53 |
| ALARM LED | 11 |
| indications | 136 |
| alarms | |
| ALARM LED | 11 |
| conditions, in chassis components | 137 |
| alternative boot media <i>See</i> boot devices; USB | |
| altitude requirement | 56 |
| Annex A; Annex B <i>See</i> ADSL | |
| antistatic mat | 165 |
| approvals, agency | 196 |
| asymmetrical digital subscriber line <i>See</i> ADSL | |
| autoinstallation | |
| automatic configuration process | 99 |
| CLI configuration editor | 100 |
| default configuration file | 99 |
| description | 79 |
| establishing | 97 |
| host-specific configuration file | 99 |
| interfaces | 98 |
| IP address procurement process | 98 |
| J-Web configuration editor | 100 |
| overview | 98 |
| protocols for procuring an IP address | 98 |
| requirements | 100 |
| status | 102 |
| TFTP server | 98 |
| verifying | 102 |
| automatic configuration <i>See</i> autoinstallation | |

B

| | |
|---------------------------------|-----|
| backup compact flash, removing | 125 |
| backup router | 78 |
| defining (configuration editor) | 93 |
| basic connectivity | |
| CLI configuration editor | 88 |
| establishing | 75 |
| J-Web configuration editor | 88 |

| | | | |
|--|-----|---|-----|
| Quick Configuration | 82 | power cord, replacing (J2300 or J4300) | 132 |
| requirements..... | 81 | power cord, replacing (J6300)..... | 135 |
| sample configuration | 95 | reducing radio frequency interference (RFI) | 58 |
| verifying..... | 95 | serial EIA-530A DCE pinouts..... | 154 |
| battery handling | 187 | serial EIA-530A DTE pinouts | 153 |
| BGP route reflectors license | 104 | serial PIM specifications..... | 149 |
| blank panel | | serial RS-232 DCE pinouts | 150 |
| for empty PIM slot..... | 25 | serial RS-232 DTE pinouts..... | 150 |
| for power supply (J6300)..... | 134 | serial RS-422/449 (EIA-449) DCE pinouts | 152 |
| blinking | | serial RS-422/449 (EIA-449) DTE pinouts..... | 151 |
| configuration LED state | 13 | serial V.35 DCE pinouts | 155 |
| LAN port LED state | 14 | serial V.35 DTE pinouts..... | 154 |
| POWER ON LED state | 12 | serial X.21 DCE pinouts | 157 |
| boot devices | | serial X.21 DTE pinouts..... | 156 |
| J2300..... | 10 | T1 RJ-48 pinouts..... | 158 |
| J4300..... | 22 | case number, for JTAC | 142 |
| J6300..... | 22 | certificate <i>See</i> digital certificate | |
| removable compact flash | 24 | chassis process | 30 |
| boot process, backup router for..... | 78 | chassis | |
| boot sequence | | alarm conditions and remedies..... | 137 |
| J2300..... | 10 | component serial number labels | 139 |
| J2400..... | 22 | grounding | 70 |
| J6300..... | 22 | J2300..... | 7 |
| BOOTP, for autoinstallation..... | 101 | J4300..... | 17 |
| Border Gateway Protocol <i>See</i> BGP | | J6300..... | 17 |
| bottom pane | 37 | lifting guidelines | 175 |
| braces, in configuration statements..... | xvi | chassis software process | 30 |
| brackets | | checklist, for site preparation | 60 |
| angle, in syntax descriptions..... | xvi | clear operation, CONFIG button on the front panel..... | 12 |
| square, in configuration statements | xvi | clear-text access | 80 |
| browser interface <i>See</i> J-Web interface | | clearance | 53 |
| BTUs per hour..... | 56 | CLI configuration editor | 34 |
| buttons | | autoinstallation | 100 |
| CONFIG | 12 | basic settings | 90 |
| power | 11 | capabilities | 34 |
| | | initial configuration..... | 88 |
| | | statement types..... | 44 |
| | | <i>See also</i> configuration | |
| | | command completion | |
| | | description | 46 |
| | | setting on and off..... | 48 |
| | | command hierarchy | 41 |
| | | command prompts | |
| | | changing | 48 |
| | | configuration mode (#)..... | 44 |
| | | operational mode (>) | 43 |
| | | command-line interface <i>See</i> CLI configuration editor; | |
| | | JUNOS CLI | |
| | | comments, in configuration statements..... | xvi |
| | | committed configuration | |
| | | J-Web configuration editor display..... | 40 |
| | | compact flash | |
| | | backup, removing | 125 |
| | | minor (yellow) alarm | 137 |
| | | primary, description | 24 |

C

cables

| | |
|--|-----|
| ADSL RJ-11 pinouts | 160 |
| arranging for safety..... | 120 |
| connecting to network media..... | 69 |
| console port, connecting | 89 |
| console port, DB-9 connector pinouts | 157 |
| console port, replacing | 118 |
| disconnecting PIM cables | 121 |
| disconnecting the power cord (J2300 or J4300) .. | 132 |
| E1 RJ-48 pinouts | 158 |
| Ethernet rollover, connecting | 89 |
| Ethernet rollover, replacing..... | 118 |
| Ethernet, connecting | 82 |
| Ethernet, RJ-45 connector pinouts..... | 157 |
| grounding | 70 |
| PIM, installing..... | 122 |
| PIM, removing | 121 |
| power cord specifications | 59 |

- primary, installing 124
- primary, removing 123
- removable, description 24
- removable, installing 126
- removable, J4300 and J6300 24
- removable, LED states 25
- removable, removing 125
- compliance
 - EMC requirements 197
 - general standards 196
- components
 - packing for shipment 145
 - replacing 117
 - serial number label 139
 - shipped 65
 - troubleshooting 136
- CONFIG button
 - for clearing all configurations 12
 - for factory configuration 12
 - for rescue configuration 12
- configuration
 - autoinstallation of 97
 - clearing, with the CONFIG button 12
 - factory, committing with the CONFIG button 12
 - installation on multiple Services Routers 97
- configuration editor *See* CLI configuration editor; J-Web configuration editor
- configuration hierarchy, J-Web display 40
- configuration LED states 13
- configuration mode 45
 - commands 44
 - prompt (#) 44*See also* CLI configuration editor
- connection
 - network cables 69
 - power 70
- connectivity
 - hardware 63
 - through J-Web 82
 - through the CLI 88
- console port
 - adapter 88
 - connecting through the CLI 88
 - DB-9 connector pinouts 157
 - description 13
 - replacing the cable 118
 - settings 89
- container statements 44
- conventions
 - how to use this guide xiv
 - notice icons xv
 - text and syntax xv
- cooling system
 - airflow requirement 53
 - J2300 15

- J4300 27
- J6300 27
- cords *See* AC power cords; cables
- curly braces, in configuration statements xvi
- customer support xviii
 - contacting JTAC xviii
 - contacting JTAC for hardware return 141
 - information required for hardware return 142

D

- daemons *See* processes, software
- DB-9 connector pinouts 157
- default configuration file, for autoinstallation 99
- default gateway 78
 - defining (Quick Configuration) 85
- deleting
 - all configurations, with the CONFIG button 12
 - licenses (CLI) 110
 - licenses (J-Web) 108
- desk installation (J2300 only) 65
 - clearance requirement 54
- DHCP (Dynamic Host Configuration Protocol) 79
- DHCP server
 - after initial configuration 79
 - before initial configuration 79
 - maintaining after initial setup 84
- diagnosis
 - chassis 137
 - hardware 137
- digital certificate
 - for SSH encrypted access 80
 - for SSL encrypted access 86
- digital subscriber line *See* ADSL
- DIMMs (dual inline memory modules)
 - installing 132
 - removing 130
- DNS (Domain Name System) 77
- DNS server
 - defining (configuration editor) 93
 - defining (Quick Configuration) 85
 - function 77
- documentation set
 - comments on xviii
- domain name 77
 - defining (configuration editor) 92
 - defining (Quick Configuration) 84*See also* DNS server
- Domain Name System 77
- domain search
 - defining (configuration editor) 93
 - defining (Quick Configuration) 85
- downloading
 - licenses (J-Web) 109
- DRAM modules
 - installing 132

| | |
|--|-----|
| removing | 130 |
| dry chemical fire extinguishers, prohibited..... | 57 |
| DS1 ports <i>See</i> T1 ports | |
| DS3 ports <i>See</i> T3 ports | |
| DSL <i>See</i> ADSL | |
| dual inline memory modules <i>See</i> DIMMs | |
| Dynamic Host Configuration Protocol | 79 |

E

| | |
|---|--------|
| E1 ports | |
| J2300 | 3 |
| J4300 | 4 |
| J6300 | 4 |
| LED states | 14 |
| license | 105 |
| RJ-48 cable pinouts | 158 |
| earth ground <i>See</i> grounding | |
| earthquakes | |
| rack-mount requirements | 55 |
| seismic requirements | 56 |
| EIA-530A DCE cable pinouts | 154 |
| EIA-530A DTE cable pinouts | 153 |
| electricity | |
| safety warnings | 166 |
| wiring guidelines | 57 |
| electromagnetic compatibility (EMC) | |
| compliance with requirements | 197 |
| preventing problems with | 58 |
| standards | 196 |
| electromagnetic interference (EMI) | |
| compliance with requirements | 197 |
| standards | 196 |
| suppressing | 58 |
| electrostatic bag, for storing components | 165 |
| electrostatic discharge, preventing | 165 |
| EMC | |
| compliance with requirements | 197 |
| preventing problems with | 58 |
| standards | 196 |
| EMI | |
| compliance with requirements | 197 |
| standards | 196 |
| suppressing | 58 |
| encrypted access | |
| through HTTPS | 86 |
| through SSH | 80 |
| through SSL | 86 |
| environment, CLI | |
| displaying | 47 |
| setting | 47 |
| environmental requirements for operation | 55 |
| EPROM | 10, 22 |
| ESD (electrostatic discharge), preventing | 165 |
| ESD wrist strap | |
| verifying resistance, for safety | 166 |

| | |
|---|-------|
| wearing during installation | 8, 17 |
| Ethernet cable | |
| connecting the Services Router to a management device | 82 |
| RJ-45 connector pinouts | 157 |
| Ethernet rollover cable | |
| connecting the Services Router to a management device | 89 |
| DB-9 connector pinouts | 157 |
| replacing | 118 |

F

| | |
|--|--------|
| factory configuration, committing with the CONFIG button | 12 |
| failures | |
| PIM | 137 |
| Routing Engine fan | 137 |
| fans | |
| J2300 | 15 |
| J4300 | 27 |
| J6300 | 27 |
| Fast Ethernet ports | |
| autoinstallation on | 98 |
| J2300 | 3, 14 |
| J4300 | 4, 24 |
| J6300 | 4, 24 |
| LED states | 14 |
| license, for PIM ports | 105 |
| PORT 0 | 79 |
| PORT 0, connecting through J-Web | 82 |
| fe-0/0/0 | 14, 24 |
| connecting through J-Web | 82 |
| defining address (configuration editor) | 94 |
| defining address (Quick Configuration) | 86 |
| for autoinstallation | 79 |
| management interface | 79 |
| <i>See also</i> Fast Ethernet ports | |
| fe-0/0/0, no license required | 105 |
| fe-0/0/1 <i>See</i> Fast Ethernet ports | |
| feature licenses <i>See</i> licenses | |
| feature overview | 4 |
| features, licensed, displaying | 107 |
| field-replaceable units, replacing | 117 |
| fire extinguishers | |
| prohibited | 57 |
| required | 56 |
| fire safety requirements | 56 |
| fire suppression | |
| equipment required | 56 |
| shutdown requirement | 56 |
| font conventions | xv |
| forwarding software process | 31 |
| free ports | 107 |
| front panel | |
| J2300 | 11 |

| | |
|--------------------------------|-----|
| J4300 | 22 |
| J6300 | 22 |
| FRUs (field-replaceable units) | |
| PIMs, installing | 120 |
| PIMs, removing | 119 |
| replacing | 117 |
| fwdd process | 31 |

G

| | |
|---|-----|
| gateway | |
| default | 78 |
| glossary | |
| autoinstallation | 97 |
| basic connectivity | 75 |
| graceful shutdown | 73 |
| graphical user interface <i>See</i> J-Web interface | |
| grounding | |
| cable | 70 |
| chassis | 70 |
| connection | 72 |
| equipment warning | 168 |
| grounding lug | |
| connecting | 72 |
| specifications | 70 |
| group licenses | 107 |
| GUI <i>See</i> J-Web interface | |

H

| | |
|--|--------|
| hardware | |
| alarm conditions and remedies | 137 |
| installation and connection | 63 |
| maintenance | 117 |
| replacing components | 117 |
| returning | 139 |
| troubleshooting components | 136 |
| hardware features | 7 |
| J2300 components | 9 |
| J2300 front panel | 11 |
| J4300 components | 20 |
| J4300 front panel | 22 |
| J6300 components | 20 |
| J6300 front panel | 22 |
| help | |
| J-Web interface | 40 |
| JUNOS CLI | 46 |
| help icon (?) | 40 |
| help reference command | 47 |
| help topic command | 47 |
| host-specific configuration file, for autoinstallation | 99 |
| hostname | 77 |
| defining (configuration editor) | 92 |
| defining (Quick Configuration) | 84 |
| <i>See also</i> DNS server | |
| hostname.conf file, for autoinstallation | 99–100 |
| how to use this guide | xiv |

| | |
|---|----|
| HTTPS (Hypertext Transfer Protocol over SSL) | |
| management access | 80 |
| Quick Configuration | 86 |
| humidity requirement | 56 |
| Hyperterminal, for terminal emulation | 89 |
| Hypertext Transfer Protocol over SSL <i>See</i> HTTPS | |

I

| | |
|--|-----|
| idle time, setting for a CLI session | 48 |
| ifd process | 31 |
| immunity standards | 196 |
| IN USE LED states | 25 |
| initial configuration requirements | 81 |
| injury, steps to take | 169 |
| installation | |
| desk (J2300 only) | 65 |
| DIMMs | 132 |
| DRAM modules | 132 |
| initial | 63 |
| licenses (CLI) | 109 |
| licenses (J-Web) | 108 |
| PIM cables | 122 |
| PIMs | 120 |
| power supplies (J6300) | 134 |
| preparation | 53 |
| primary compact flash | 124 |
| rack <i>See</i> rack installation | |
| removable compact flash | 126 |
| requirements | 63 |
| safety guidelines and warnings | 175 |
| site checklist | 60 |
| site guidelines | 53 |
| tools and equipment | 64 |
| USB storage device | 128 |
| wall (J2300 only) | 66 |
| interface software process | 31 |
| interfaces <i>See</i> ports | |
| IPSec (IP Security), VPN license | 104 |

J

| | |
|--|------|
| J-Flow license | 104 |
| J-series | |
| autoinstallation | 97 |
| establishing software connectivity | 75 |
| feature summary | 4 |
| hardware | 7 |
| hardware replacement | 117 |
| hardware return | 139 |
| HTTPS Web access | 86 |
| installation and connection | 63 |
| JUNOS Internet software overview | 28 |
| licenses | 103 |
| models available | 3 |
| network cables and connectors | 149 |
| release notes, URL | xiii |

| | | | |
|---|--------|--|-----|
| safety and compliance | 161 | installation | 68 |
| site preparation | 53 | physical specifications..... | 21 |
| SSL access..... | 86 | PIMs..... | 25 |
| user interfaces | 33 | PIMs supported | 4 |
| J-Web configuration editor..... | 34 | ports supported | 4 |
| autoinstallation | 100 | power cord, replacing | 132 |
| basic settings | 90 | power system | 26 |
| capabilities | 34 | removable compact flash | 24 |
| configuration hierarchy display | 40 | Routing Engine | 21 |
| initial configuration..... | 88 | USB port..... | 23 |
| <i>See also</i> configuration | | | |
| J-Web interface | 82 | J6300 | |
| connecting | 82 | boot devices | 22 |
| context-sensitive help | 40, 46 | boot sequence | 22 |
| help (?) icon..... | 40 | chassis..... | 17 |
| managing licenses | 106 | components shipped | 65 |
| overview | 33 | cooling system..... | 27 |
| page layout..... | 37 | electrical specifications..... | 59 |
| sessions | 41 | fans | 27 |
| starting | 37 | front panel | 22 |
| windows, multiple, unpredictable results with | 41 | hardware | 16 |
| <i>See also</i> J-Web configuration editor; Quick Configuration | | hardware components | 20 |
| J-Web Quick Configuration <i>See</i> Quick Configuration | | installation | 68 |
| J2300 | | physical specifications..... | 21 |
| boot devices | 10 | PIMs..... | 25 |
| boot sequence | 10 | PIMs supported | 4 |
| chassis..... | 7 | ports supported | 4 |
| components shipped | 65 | power cord, replacing | 135 |
| cooling system..... | 15 | power supplies <i>See</i> power supplies, J6300 | |
| electrical specifications..... | 58 | removable compact flash | 24 |
| fans | 15 | Routing Engine | 21 |
| front panel | 11 | USB port..... | 23 |
| hardware | 7 | JTAC (Juniper Networks Technical Assistance Center) | |
| hardware components | 9 | contacting..... | 138 |
| installation | 65 | contacting for hardware return | 141 |
| physical specifications..... | 9 | information required for hardware return | 142 |
| PIM | 13 | Juniper Networks Technical Assistance Center <i>See</i> JTAC | |
| PIMs supported | 3 | JUNOS CLI..... | 88 |
| ports supported..... | 3 | command completion..... | 46 |
| power cord, replacing | 132 | command hierarchy | 41 |
| power system | 15 | command modes..... | 34 |
| Routing Engine | 10 | command prompts <i>See</i> command prompts | |
| USB port..... | 13 | connecting | 88 |
| J4300 | | context-sensitive help | 46 |
| boot devices | 22 | editing keystrokes | 45 |
| boot sequence | 22 | environment, changing..... | 47 |
| chassis..... | 17 | idle time..... | 48 |
| components shipped | 65 | managing licenses | 109 |
| cooling system..... | 27 | overview | 34 |
| electrical specifications..... | 58 | screen length..... | 49 |
| fans | 27 | screen width | 49 |
| front panel | 22 | starting | 42 |
| hardware | 16 | terminal type | 49 |
| hardware components | 20 | working directory..... | 48 |
| | | <i>See also</i> CLI configuration editor | |

- JUNOS Internet software
 - autoinstallation 97
 - establishing connectivity 75
 - licenses 104
 - overview 28
 - Packet Forwarding Engine 29
 - processes 29
 - release notes, URL xiii
 - Routing Engine 29
- JUNOScope application 31
- JUNOScript API
 - defining access (Quick Configuration) 86
 - management access 80
- K**
- kernel 29
- key sequences, editing, in CLI 45
- L**
- labels, serial number 139
- LAN ports *See* Fast Ethernet ports
- laptop *See* management device
- lasers
 - beam warning 184
 - Class 1 product warning 183
 - open aperture warning 185
 - safety guidelines 182
- leaf statements 44
- LEDs
 - ADSL PIM status 26
 - ALARM 11
 - Class 1 product warning 183
 - configuration 13
 - Fast Ethernet port status 14
 - IN USE, for removable compact flash 25
 - J6300 power supply 27
 - LAN port status 14
 - PIM status 14
 - POWER ON 12
 - safety warnings 182
- license infringement
 - identifying any licenses needed 107
 - verifying license usage 112
 - verifying licenses installed 110
- license keys
 - components 105
 - displaying (CLI) 112
 - displaying (J-Web) 108
 - status 107
 - version 107
- licenses 103
 - adding (CLI) 109
 - adding (J-Web) 108
 - BGP route reflectors 104
 - deleting (CLI) 110
 - deleting (J-Web) 108
 - displaying (CLI) 110
 - displaying (J-Web) 107
 - displaying usage 112
 - downloading (J-Web) 109
 - E1 ports 105
 - Fast Ethernet LAN ports (no license required) 105
 - Fast Ethernet PIM ports 105
 - features requiring a license 4
 - group 107
 - infringement, preventing 106
 - See also* license infringement
 - installed 107
 - IPSec VPNs 104
 - J-Flow traffic analysis 104
 - JUNOS Internet software 104
 - key 105
 - See also* license keys
 - managing (CLI) 109
 - managing (J-Web) 106
 - NAT 104
 - overview 103
 - preparation for 105
 - saving (CLI) 110
 - serial ports 105
 - stateful firewall filters 104
 - T1 ports 105
 - traffic analysis 104
 - verifying 110
 - verifying free ports 107
 - See also* license infringement; license keys
- Licenses page 106
- lifting guidelines 175
- lightening activity warning 191
- lights *See* LEDs
- lo0.0 78
- loopback address 78
 - defining (configuration editor) 94
 - defining (Quick Configuration) 85
- lug *See* grounding lug
- M**
- maintenance
 - DRAM modules 129
 - PIMs 118
 - power cord, replacing (J2300 or J4300) 132
 - power system (J6300) 133
 - primary compact flash 123
 - removable compact flash 125
 - tools and parts required 118
 - USB storage device 127
 - warnings 187
- major (red) alarms
 - PIMs 137
 - Routing Engine 137

| | |
|--|-------|
| management access | 80 |
| management device | |
| connecting through J-Web | 82 |
| connecting through the CLI | 90 |
| connecting to J-Web | 83 |
| management interface address | |
| after initial configuration | 79 |
| before initial configuration | 79 |
| defining (configuration editor) | 94 |
| defining (Quick Configuration) | 86 |
| during initial configuration | 79 |
| management interfaces | |
| Fast Ethernet | 79 |
| fe-0/0/0 | 79 |
| loopback | 78 |
| PORT 0 | 79 |
| management software process | 30 |
| managing licenses | 103 |
| manuals | |
| comments on | xviii |
| maximum configuration weight | |
| J4300 | 21 |
| J6300 | 21 |
| memory <i>See</i> compact flash; DRAM modules; USB | |
| mgd process | 30 |
| microkernel | 29 |
| middle pane | 40 |
| midplane, J4300 and J6300 | 21 |
| fan | 27 |
| minimum configuration weight | |
| J4300 | 21 |
| J6300 | 21 |
| minor (yellow) alarms | |
| alternative boot device | 137 |
| primary compact flash | 137 |
| Routing Engine | 137 |
| monoammonium phosphate | 57 |
| mounting brackets | |
| J2300 rack installation | 68 |
| J4300 and J6300 rack installation | 69 |
| wall installation (J2300 only) | 67 |
| mounting holes, spacing | 55 |
| multiple routers | |
| deploying <i>See</i> autoinstallation | |
| safe rack order | 68 |

N

| | |
|--|--------|
| NAT (Network Address Translation) | |
| license | 104 |
| Network Address Translation <i>See</i> NAT | |
| network cable pinouts | 149 |
| Network Time Protocol (NTP) server <i>See</i> NTP server | |
| network.conf file, default for autoinstallation | 99–100 |
| notice icons | xv |

| | |
|---------------------------------------|----|
| NTP server | 77 |
| defining (configuration editor) | 93 |
| defining (Quick Configuration) | 85 |

O

| | |
|---|----|
| ON button | 11 |
| operating system <i>See</i> JUNOS Internet software | |
| operational mode | |
| commands | 43 |
| prompt (>) | 43 |

P

| | |
|--|--------|
| Packet Forwarding Engine | 29 |
| microkernel | 29 |
| packing materials | |
| packing a Services Router for shipment | 143 |
| packing components for shipment | 145 |
| saving | 65 |
| pages, layout in J-Web | 37 |
| parentheses, in syntax descriptions | xvi |
| PC <i>See</i> management device | |
| PCI bus | 10, 22 |
| personnel warning | 165 |
| Physical Interface Cards <i>See</i> PIMs | |
| Physical Interface Modules <i>See</i> PIMs | |
| PIC <i>See</i> PIMs | |
| PIM LED states | 14 |
| PIMs (Physical Interface Modules) | |
| ADSL LED states | 26 |
| blank panel for empty slot | 25 |
| cables and connectors | 149 |
| failure | 137 |
| installing | 120 |
| installing cables | 122 |
| J2300 PIM | 3, 13 |
| J4300 PIMs | 4, 25 |
| J6300 PIMs | 4, 25 |
| LED states | 14 |
| major (red) alarm | 137 |
| midplane to Routing Engine | 21 |
| removing | 119 |
| replacing cables | 121 |
| serial number label | 141 |
| pinouts | |
| ADSL RJ-11 connector | 160 |
| DB-9 connector | 157 |
| EIA-530A DCE serial cable | 154 |
| EIA-530A DTE serial cable | 153 |
| RJ-45 connector | 157 |
| RJ-48 connector to DB-15 connector | |
| (crossover) | 160 |
| RJ-48 connector to DB-15 connector (straight) .. | 159 |
| RJ-48 connector to RJ-48 connector (crossover) .. | 159 |
| RJ-48 connector to RJ-48 connector (straight) | 158 |
| RS-232 DCE serial cable | 150 |

- RS-232 DTE serial cable 150
 - RS-422/449 (EIA-449) DCE serial cable 152
 - RS-422/449 (EIA-449) DTE serial cable 151
 - V.35 DCE serial cable 155
 - V.35 DTE serial cable 154
 - X.21 DCE serial cable 157
 - X.21 DTE serial cable 156
 - plug types, AC 60
 - ports
 - ADSL *See* ADSL ports
 - cables, PIM, installing 122
 - cables, WAN, removing 121
 - console 13
 - See also* console port
 - DS1 *See* T1 ports
 - DS3 *See* T3 ports
 - E1 *See* E1 ports
 - Fast Ethernet 14, 24
 - See also* Fast Ethernet ports
 - free ports 107
 - J2300 LAN 14
 - J2300 USB 13
 - J4300 LAN 24
 - J4300 USB 23
 - J6300 LAN 24
 - J6300 USB 23
 - licenses 105
 - lo0.0 78
 - PORT 0 79
 - serial *See* serial ports
 - T1 *See* T1 ports
 - T3 *See* T3 ports
 - power 11
 - applying 72
 - button 11
 - connecting 70
 - grounding requirement 70
 - LED states 12
 - power cord *See* AC power cords
 - removing 73
 - requirements 58
 - See also* power supplies; power system
 - power cords *See* AC power cords
 - POWER ON LED states 12
 - power supplies, J6300
 - blank panel required in empty slot 134
 - dedicated AC power feed requirement 135
 - description 26
 - installing 134
 - LED states 27
 - redundancy 26
 - removing 133
 - serial number label 141
 - power system
 - connecting 71
 - fan 27
 - J2300 15
 - J4300 26
 - J6300 26
 - preparing for installation 53
 - processes, software
 - chassis process 30
 - forwarding process 31
 - interface process 31
 - management process 30
 - routing protocols process 30
 - product disposal 194
 - product overview 3
 - prompt *See* command prompts; restart after upgrade prompt
- ## Q
- Quick Configuration
 - basic settings 83
 - capabilities 34
 - initial configuration 82
 - Set Up page 38
 - SSL page 87
- ## R
- rack ears *See* mounting brackets
 - rack installation
 - general requirements 54
 - J2300 67
 - J2300 mounting brackets 68
 - J4300 68
 - J4300 and J6300 mounting brackets 69
 - J6300 68
 - mounting holes, spacing 55
 - order of multiple routers 68
 - safety guidelines and warnings 177
 - securing rack to building 55
 - size requirements 54
 - support for front-mount rack 55
 - ventilation requirement 55
 - radio frequency interference (RFI), reducing 58
 - ramp angle requirement 181
 - RARP, for autoinstallation 101
 - read or write error, Routing Engine 137
 - red asterisk (*) 40
 - redundant J6300 power supplies 26
 - regulatory compliance 161
 - release notes, URL xiii
 - removable compact flash *See* compact flash
 - replacement
 - DRAM modules 129
 - PIMs 118
 - power cord, replacing (J2300 or J4300) 132
 - power system (J6300) 133
 - primary compact flash 123

| | |
|--|-----|
| removable compact flash | 125 |
| tools and parts required | 118 |
| USB storage device | 127 |
| request chassis pic fpc-slot command | 122 |
| request system license add command | 109 |
| request system license delete command | 110 |
| request system license save command | 110 |
| required entry (J-Web) | 40 |
| rescue configuration, CONFIG button on front panel | 12 |
| restart after upgrade prompt | 48 |
| Return Materials Authorization <i>See</i> RMA | |
| returning hardware | 139 |
| packing a Services Router for shipment | 143 |
| packing components for shipment | 145 |
| procedure | 142 |
| tools and parts required | 143 |
| Reverse Address Resolution Protocol (RARP), for | |
| autoinstallation | 101 |
| RJ-45 connector pinouts | 157 |
| RJ-45 to DB-9 serial port adapter | 88 |
| RJ-48 connector to DB-15 connector (crossover) | |
| pinouts | 160 |
| RJ-48 connector to DB-15 connector (straight) | |
| pinouts | 159 |
| RJ-48 connector to RJ-48 connector (crossover) | |
| pinouts | 159 |
| RJ-48 connector to RJ-48 connector (straight) | |
| pinouts | 158 |
| RMA (Return Materials Authorization) | 139 |
| number | 142 |
| packing a Services Router for shipment | 143 |
| packing components for shipment | 145 |
| procedure | 142 |
| tools and parts required | 143 |
| root password | |
| characteristics | 77 |
| defining (configuration editor) | 92 |
| defining (Quick Configuration) | 84 |
| route reflectors, BGP, license | 104 |
| router <i>See</i> Services Router | |
| router.conf file, for autoinstallation | 99 |
| Routing Engine | |
| fan | 27 |
| fan failure | 137 |
| J2300 functions and components | 10 |
| J4300 functions and components | 21 |
| J6300 functions and components | 21 |
| kernel | 29 |
| major (red) alarm | 137 |
| midplane to PIMs | 21 |
| minor (yellow) alarm | 137 |
| read or write error | 137 |
| software component | 29 |
| too hot | 137 |
| too warm | 137 |

| | |
|--|-----|
| routing protocols software process | 30 |
| rpd process | 30 |
| RS-232 DCE cable pinouts | 150 |
| RS-232 DTE cable pinouts | 150 |
| RS-422/449 (EIA-449) DCE cable pinouts | 152 |
| RS-422/449 (EIA-449) DTE cable pinouts | 151 |
| rubber feet | 66 |

S

| | |
|--|-----|
| safety guidelines and warnings | |
| AC power | 168 |
| battery handling | 187 |
| electrical | 167 |
| general | 163 |
| grounded equipment | 168 |
| in case of electrical accident | 169 |
| installation | 175 |
| jewelry removal | 189 |
| lasers and LEDs | 182 |
| levels | 161 |
| lightening activity | 191 |
| maintenance and operation | 187 |
| multiple power supplies (J6300 only) | 170 |
| operating temperature | 192 |
| power disconnection | 171 |
| product disposal | 194 |
| rack-mounting | 177 |
| ramps | 181 |
| read installation instructions | 176 |
| telecommunications cord | 174 |
| TN power system | 172 |
| safety standards | 196 |
| fire safety | 56 |
| samples | |
| configuration, for basic connectivity | 95 |
| network topologies <i>See</i> topologies | |
| saving licenses (CLI) | 110 |
| screen length, CLI, setting | 49 |
| screen width, CLI, setting | 49 |
| screw and anchor capacity, for wall installation | 67 |
| SDX application | 31 |
| Secure Sockets Layer <i>See</i> SSL | |
| Serial Line Address Resolution Protocol (SLARP), for | |
| autoinstallation | 101 |
| serial number | |
| chassis components, label | 139 |
| PIMs | 141 |
| power supply | 141 |
| serial ports | |
| autoinstallation on | 98 |
| cables and connectors | 149 |
| EIA-530A DCE pinouts | 154 |
| EIA-530A DTE pinouts | 153 |
| J2300 | 3 |
| J4300 | 4 |

- J6300 4
- LED states 14
- license 105
- RS-232 DCE pinouts 150
- RS-232 DTE pinouts 150
- RS-422/449 (EIA-449) DCE pinouts 152
- RS-422/449 (EIA-449) DTE pinouts 151
- V.35 DCE pinouts 155
- V.35 DTE pinouts 154
- X.21 DCE pinouts 157
- X.21 DTE pinouts 156
- Services Router
 - autoinstallation 97
 - backup 78
 - clearance 53
 - dimensions 54
 - establishing software connectivity 75
 - grounding 71
 - hardware 7
 - hardware replacement 117
 - hardware return 139
 - HTTPS Web access 86
 - installation and connection 63
 - licenses 103
 - multiple, deploying *See* autoinstallation
 - network cables and connectors 149
 - operating environment 55
 - overview 3–4
 - packing for shipment 143
 - powering on and off 72
 - preparation checklist 60
 - safety and compliance 161
 - site preparation 53
 - software 28
 - SSL access 86
 - unpacking 64
 - user interfaces 33
- sessions, J-Web 41
- set cli commands 47
- Set Up page 38
 - field summary 84
- setup
 - configuration editor 88
 - Quick Configuration 82
 - requirements 81
- shipping carton
 - contents 65
 - packing a Services Router for shipment 143
 - packing components for shipment 145
 - saving 65
- show chassis alarms command 136
- show chassis hardware command 139
- show cli command 47
- show system license command 110, 112
- show system license keys command 112
- show system storage command 128
- shutdown
 - graceful 73
 - immediate 73
- side pane 40
- signaling limitations 57
- site preparation
 - checklist 60
 - electrical wiring guidelines 57
 - fire safety 56
 - for desktop and wall installation 54
 - for rack installation 54
 - guidelines 53
 - operating environment 55
 - power requirements 58
- size
 - J2300 9
 - J4300 21
 - J6300 21
 - requirements for rack installation 54
- SLARP, for autoinstallation 101
- software 28
 - features 28
 - licenses *See* licenses
 - See also* JUNOS Internet software
- specifications
 - electrical 58
 - electrical connection 59
 - environmental 55
 - grounding cable 70
 - grounding lug 70
 - J2300 hardware 9
 - J4300 hardware 21
 - J6300 hardware 21
 - power cords 59
 - serial PIM cables and connectors 149
- SSH
 - defining (configuration editor) 92
 - defining access (Quick Configuration) 86
 - management access 80
- SSL (Secure Sockets Layer)
 - management access 80
 - Quick Configuration 86
- SSL page 87
 - field summary 88
- standards compliance 196
- startup
 - J-Web interface 37
 - JUNOS CLI 42
 - Services Router 72
- stateful firewall filters license 104
- statements, configuration types 44
- status 11
 - autoinstallation 102
 - license key 107

| | |
|---|-------|
| <i>See also</i> LEDs | |
| storage media | |
| replacing the primary compact flash | 123 |
| replacing the removable compact flash | 125 |
| replacing the USB storage device | 127 |
| support, technical <i>See</i> technical support | |
| syntax conventions | xv |
| system overview | |
| hardware | 7 |
| software | 28 |
| system time | 77 |
| defining (Quick Configuration) | 85 |
| synchronizing (configuration editor) | 93 |
| synchronizing (Quick Configuration) | 85 |
| T | |
| T1 ports | |
| J2300 | 3 |
| J4300 | 4 |
| J6300 | 4 |
| LED states | 14 |
| license | 105 |
| RJ-48 cable pinouts | 158 |
| T3 ports | |
| J6300 | 4 |
| LED states | 14 |
| task bar | 40 |
| technical support | |
| contacting JTAC | xviii |
| contacting JTAC for hardware return | 141 |
| information required for hardware return | 142 |
| telecommunications line wire gauge | 174 |
| telnet | |
| defining access (Quick Configuration) | 86 |
| management access | 80 |
| temperature | |
| required for operation | 56 |
| Routing Engine, too hot | 137 |
| Routing Engine, too warm | 137 |
| warning | 192 |
| terminal type, setting | 49 |
| terminology | |
| autoinstallation | 97 |
| basic connectivity | 75 |
| TFTP, for autoinstallation | 98 |
| thermal output | 56 |
| time <i>See</i> system time | |
| time zone | 77 |
| defining (configuration editor) | 92 |
| defining (Quick Configuration) | 84 |
| TN power system | 172 |
| tolerances, environmental | 56 |
| tools and equipment | |
| for component replacement | 118 |
| for installation | 64 |

| | |
|---|-----|
| tools and equipment, for hardware return | 143 |
| top pane | 39 |
| traffic analysis license | 104 |
| Trivial File Transfer Protocol (TFTP), for | |
| autoinstallation | 98 |
| troubleshooting a Services Router, hardware | |
| components | 136 |
| turning on a Services Router | 72 |
| Type C fire extinguishers | 56 |
| types of configuration statements | 44 |

U

| | |
|--------------------------------------|------|
| universal serial bus <i>See</i> USB | |
| unpacking the router | 64 |
| URLs | |
| release notes | xiii |
| return and repair policies | 142 |
| support | 138 |
| USB (universal serial bus) | |
| J2300 USB port | 13 |
| J4300 USB port | 23 |
| J6300 USB port | 23 |
| storage device, installing | 128 |
| storage device, removing | 128 |
| usb0 <i>See</i> USB | |
| user interfaces | |
| feature comparison | 34 |
| J-Web graphical user interface (GUI) | 31 |
| <i>See also</i> J-Web interface | |
| JUNOS command-line interface (CLI) | 31 |
| <i>See also</i> JUNOS CLI | |
| JUNOScope application | 31 |
| overview | 33 |
| preparation | 36 |
| SDX application | 31 |

V

| | |
|-------------------------|-----|
| V.35 DCE cable pinouts | 155 |
| V.35 DTE cable pinouts | 154 |
| ventilation requirement | 53 |
| verification | |
| active licenses | 110 |
| autoinstallation | 102 |
| basic connectivity | 95 |
| license usage | 112 |
| licenses | 110 |
| version, license key | 107 |
| VPN license, for IPSec | 104 |

W

| | |
|--------------------------------|----|
| wall installation (J2300 only) | 66 |
| mounting brackets | 67 |
| mounting requirement | 54 |
| screw and anchor capacity | 67 |

- warnings
 - battery handling 187
 - earthed mains socket (Norway and Sweden only) 169
 - electrical 166
 - ESD strap to prevent router damage.....8, 17
 - general 163
 - grounded equipment 168
 - installation 175
 - jewelry removal..... 189
 - laser and LED 182
 - levels defined 161
 - lightening activity..... 191
 - maintenance and operational..... 187
 - multiple power supply disconnection 170
 - operating temperature 192
 - personnel 165
 - power disconnection 171
 - product disposal 194
 - rack-mounting requirements..... 177
 - ramp angle..... 181
 - read installation instructions..... 176
 - telecommunications lines 174
 - TN power system 172
 - Web access, secure86
 - weight
 - J2300 9
 - J2300 two-person installation requirement.....67
 - J430021
 - J4300 and J6300 two-person installation requirement68
 - J630021
 - rack-mount requirements54
 - windows, J-Web, unpredictable results with multiple ...41
 - wire gauge
 - for grounding cable70
 - for telecommunications lines 174
 - wiring guidelines
 - radio frequency interference (RFI)58
 - signaling limitations57
 - suppressing electromagnetic interference (EMI) ...58
 - working directory, setting48
- X**
- X.21 DCE cable pinouts 157
 - X.21 DTE cable pinouts..... 156