

## allowed-proxy-pair

---

**Syntax** allowed-proxy-pair {  
    remote *remote-proxy-address* local *local-proxy-address*;  
}

**Hierarchy Level** [edit access profile *profile-name* client *client-name* ike]

**Release Information** Statement introduced in JUNOS Release 7.4.

**Description** Specify the network address of the local and remote peer associated with an IKE access profile.

**Options** local *local-proxy-address*—Network address of the local peer.

**Default:** 0.0.0.0

remote *remote-proxy-address*—Network address of the remote peer.

**Default:** 0.0.0.0

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Topics** ■ [Configuring an IKE Access Profile](#)

---

Published: 2010-04-26