

boot-server (DHCP)

Syntax boot-server *address*;

Hierarchy Level [edit system services dhcp],
[edit system services dhcp pool],
[edit system services dhcp static-binding]

Release Information Statement introduced before JUNOS Release 7.4.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description For J Series Services Routers and EX Series switches only. Configure the name of the boot server advertised to DHCP clients. The client uses a boot file located on the boot server to complete DHCP setup.

Options *address*—Address of a boot server. You must specify an IPv4 address, not a hostname.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Topics

- Configuring the Router, Switch, or Interface to Act as a DHCP Server on J Series Services Routers and EX Series Ethernet Switches
- boot-file

Published: 2010-04-26