

captive-portal

Syntax captive-portal {
 authentication-profile-name *authentication-profile-name*
 custom-options {
 banner-message *string*;
 footer-bgcolor *color*;
 footer-message *string*;
 form-header-bgcolor *color*;
 form-header-message *string*;
 form-reset-label *label name*;
 form-submit-label *label name*;
 header-bgcolor *color*;
 header-logo *filename*;
 header-message *string*;
 post-authentication-url *url-string*;
 }
 interface (all | [*interface-names*]) {
 quiet-period *seconds*;
 retries *number-of-retries*;
 server-timeout *seconds*;
 session-expiry *seconds*;
 supplicant (multiple | single | single-secure);
 }
 secure-authentication (http | https);
}

Hierarchy Level [edit services]

Release Information Statement introduced in JUNOS Release 10.1 for EX Series switches.

Description Configure captive portal to authenticate clients connected to the switch for access to the network.

The remaining statements are explained separately.

Default Captive portal is disabled.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

- Related Topics**
- Example: Setting Up Captive Portal Authentication on an EX Series Switch
 - Designing a Captive Portal Authentication Login Page on an EX Series Switch
 - Configuring Captive Portal Authentication (CLI Procedure)