

circuit-type

Syntax circuit-type;

Hierarchy Level [edit interfaces *interface-name* auto-configure vlan-ranges authentication username-include],
[edit interfaces *interface-name* auto-configure stacked-vlan-ranges authentication username-include],

Release Information Statement introduced in JUNOS Release 10.0.

Description Specify that the circuit type is concatenated with the username during the subscriber authentication process.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ [Configuring VLAN Interface Username Information for AAA Authentication](#)

Published: 2010-04-20