

control-polarity

Syntax control-polarity (negative | positive);

Hierarchy Level [edit interfaces *interface-name* serial-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description For X.21 interfaces only, configure the control signal polarity.

Options positive—Positive signal polarity.

negative—Negative signal polarity.

Default: positive

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ [Configuring Serial Signal Polarities](#)

Published: 2010-04-20