

core-dump

Syntax (core-dump | no-core-dump);

Hierarchy Level [edit interfaces mo-*fpc/pic/port* multiservice-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory `/var/tmp` contains core files. The JUNOS Software saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest):

- `core-dump`—Enable the core dumping operation.
- `no-core-dump`—Disable the core dumping operation.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- [Configuring Multiservice Physical Interface Properties](#)
 - [JUNOS Services Interfaces Configuration Guide](#)

Published: 2010-04-20