

## destination (Routing Instance)

---

<b>Syntax</b>	destination <i>routing-instance-name</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel routing-instance]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Specify the destination routing instance that points to the routing table containing the tunnel destination address.
<b>Default</b>	The default Internet routing table <code>inet.0</code> .
<b>Usage Guidelines</b>	See Configuring Tunnel Interfaces for Routing Table Lookup.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

---

Published: 2010-04-28