

destination-realm (PTSP)

Syntax destination-realm *realm*

Hierarchy Level [edit system services packet-triggered-subscribers partition *partition-name*]

Release Information Statement introduced in JUNOS Release 10.2.

Description Configure the realm in which the SAE host resides.

Options *realm*—Realm in which the SAE host resides. PTSP places no limitation on the content of the *realm* string.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Topics ■ Configuring the PTSP Partition

Published: 2010-04-15