

## diameter-instance (PTSP)

---

**Syntax** diameter-instance *instance-name*

**Hierarchy Level** [edit system services packet-triggered-subscribers partition *partition-name*]

**Release Information** Statement introduced in JUNOS Release 10.2.

**Description** Specify the Diameter instance associated with the PTSP partition.

**Options** *instance-name*—Name of the Diameter instance. Currently, only master is supported.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Topics** ■ Configuring the PTSP Partition

---

Published: 2010-04-15