

direction

Syntax direction (up | down);

Hierarchy Level [edit protocols oam ethernet connectivity-fault-management maintenance-domain
domain-name maintenance-association ma-name mep mep-id]

Release Information Statement introduced in JUNOS Release 8.4.

Description Configure the direction of the MEP.

Options up—An UP MEP CCM is transmitted out of every logical interface which is part of the same bridging or vpls instance except for the interface configured on this MEP.

down—Down MEP CCMs are transmitted only out the interface configured on this MEP.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring the Maintenance End Point Direction
 - Example: Configuring Connectivity Fault Management for a PBB Network on MX Series Routers
 - IEEE 802.1ag OAM Connectivity Fault Management Overview

Published: 2010-05-11