

disable (LDP Synchronization)

Syntax disable;

Hierarchy Level [edit logical-systems *logical-system-name* protocols isis interface *interface-name*],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols
isis interface *interface-name*],
[edit protocols isis interface *interface-name*],
[edit routing-instances *routing-instance-name* protocols isis interface *interface-name*]

Release Information Statement introduced in JUNOS Release 7.5.

Description Disable LDP for IS-IS.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ [Configuring Synchronization Between LDP and IS-IS](#)

Published: 2010-04-14