

disable

Syntax disable;

Hierarchy Level [edit protocols lldp],
[edit protocols lldp interface (all | *interface-name*)],
[edit routing-instances *routing-instance-name* protocols lldp],
[edit routing-instances *routing-instance-name* protocols lldp interface (all | *interface-name*)]

Release Information Statement introduced in JUNOS Release 9.6.

Description (MX Series routers only) Disable LLDP globally or on an interface.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ Configuring LLDP

Published: 2010-05-11