

## disable (PIM Graceful Restart)

---

**Syntax** disable;

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols pim graceful-restart],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols  
pim graceful-restart],  
[edit protocols pim graceful-restart],  
[edit routing-instances *routing-instance-name* protocols pim graceful-restart]

**Release Information** Statement introduced before JUNOS Release 7.4.  
Statement introduced in JUNOS Release 9.0 for EX Series switches.

**Description** Explicitly disable PIM sparse mode graceful restart.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics** ■ [Configuring PIM Sparse Mode Graceful Restart](#)

---

Published: 2010-04-16