

dscp-code-point

Syntax dscp-code-point *value*;

Hierarchy Level [edit class-of-service host-outbound-traffic]

Release Information Statement introduced in JUNOS Release 8.4.

Description Set the value of the DSCP code point in the ToS field of the packet generated by the Routing Engine (host).

Usage Guidelines See Changing the Routing Engine Outbound Traffic Defaults.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Published: 2010-04-15