

## egress-shaping-overhead

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | egress-shaping-overhead <i>number</i> ;   |
| <b>Hierarchy Level</b>          | [edit chassis fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager],<br>[edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager] |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 8.3.  |
| <b>Description</b>              | Number of bytes to add to packet to determine shaped session packet length.   |
| <b>Options</b>                  | <i>number</i> —Number of bytes added to shaped packets.<br><b>Range:</b> -63 through 192  |
| <b>Usage Guidelines</b>         | See Configuring CoS for L2TP Tunnels on ATM Interfaces.   |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.   |
| <b>Related Topics</b>           | mode, ingress-shaping-overhead  |

---

Published: 2010-04-15