

forwarding-class (ATM2 IQ Scheduler Maps)

Syntax forwarding-class *class-name* {
epd-threshold *cells* plp1 *cells*;
linear-red-profile *profile-name*;
priority (high | low);
transmit-weight (cells *number* | percent *number*);
}

Hierarchy Level [edit interfaces *at-fpc/pic/port* atm-options scheduler-maps *map-name*]

Release Information Statement introduced before JUNOS Release 7.4.

Description For ATM2 IQ interfaces only, define forwarding class name and option values.

Options *class-name*—Name of forwarding class.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring ATM2 IQ VC Tunnel CoS Components
 - forwarding-class statement in the *JUNOS Class of Service Configuration Guide*

Published: 2010-04-20