

## graceful-restart

---

**Syntax** graceful-restart {  
    disable;  
    restart-duration *seconds*;  
}

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols pim],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols  
    pim],  
[edit protocols pim],  
[edit routing-instances *routing-instance-name* protocols pim]

**Release Information** Statement introduced before JUNOS Release 7.4.  
Statement introduced in JUNOS Release 9.0 for EX Series switches.

**Description** Configure PIM sparse mode graceful restart.  
  
The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics** ■ [Configuring PIM Sparse Mode Graceful Restart](#)

---

Published: 2010-04-16