

group-increment

Syntax	<code>group-increment <i>increment</i>;</code>
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> protocols igmp interface <i>interface-name</i> static group <i>multicast-group-address</i>], [edit protocols igmp interface <i>interface-name</i> static group <i>multicast-group-address</i>]
Release Information	Statement introduced in JUNOS Release 9.6.
Description	Configure the number of times the address should be incremented for each static group created. The increment is specified in dotted decimal notation similar to an IPv4 address.
Options	<i>increment</i> —Number of times the address should be incremented. Default: 0.0.0.1 Range: 0.0.0.1 through 255.255.255.255
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	■ Enabling IGMP Static Group Membership

Published: 2010-04-16