

hello-interval (OSPF)

Syntax	hello-interval <i>seconds</i> ;
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-number</i> peer-interface <i>peer-interface-name</i>], [edit protocols ospf area <i>area-number</i> peer-interface <i>peer-interface-name</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Specify how often the router sends hello packets out the peer interface. The hello interval must be the same for all routers on a shared logical IP network.
Options	seconds —Length of time between hello packets. Range: 1 through 255 Default: 10 seconds; 120 seconds (nonbroadcast networks)
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring RSVP and OSPF for LMP Peer Interfaces■ dead-interval

Published: 2010-04-28