

## helper-disable

---

**Syntax** helper-disable;

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols ldp graceful-restart],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols  
 ldp graceful-restart],  
[edit protocols ldp graceful-restart],  
[edit routing-instances *routing-instance-name* protocols ldp graceful-restart]

**Release Information** Statement introduced before JUNOS Release 7.4.

**Description** Disable helper mode for LDP graceful restart. When helper mode is disabled, a router cannot help a neighboring router that is attempting to restart LDP.

**Default** Helper mode is enabled by default on all routing protocols (including LDP) that support graceful restart.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics** ■ Configuring LDP Graceful Restart

---

Published: 2010-04-28